

Manuals.plus /

› Baorun /

› Baorun Professional Rechargeable Cordless Pet Grooming Clippers (Model yux-7200) User Manual

Baorun yux-7200

Baorun Professional Rechargeable Cordless Pet Grooming Clippers (Model yux-7200) User Manual

Comprehensive instructions for safe and effective pet grooming.

1. INTRODUCTION

Thank you for choosing the Baorun Professional Rechargeable Cordless Pet Grooming Clippers. This manual provides detailed instructions for the proper use, maintenance, and care of your grooming clippers. Please read this manual thoroughly before first use to ensure optimal performance and safety for both you and your pet.

2. SAFETY INFORMATION

Important Safety Instructions: Always follow these guidelines to prevent injury or damage.

- Always ensure the device is used with care to avoid skin irritation.
- Keep away from eyes and other sensitive areas of the pet.
- Maintain dryness; do not use or store in wet conditions.
- Supervise children if they are near the device. This product is not a toy.
- Prevent startling the pet with sudden noise or movement during grooming.
- Do not attempt to disassemble or repair the unit yourself. Contact customer support for assistance.
- Ensure the power adapter is compatible with your local voltage.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Baorun Pet Grooming Clippers
- Adapter (Charger)
- Cleaning Brush

- Lubricating Oil (Clipper Oil)
- Comb Guides: 3mm, 6mm, 9mm, 12mm



Image 3.1: Contents of the Baorun Pet Grooming Clippers package, including the clipper, charger, cleaning brush, oil, and four comb guides.



Image 3.2: The Baorun Pet Grooming Clippers kit neatly arranged within its packaging, showcasing all included components.

4. PRODUCT FEATURES

The Baorun Pet Grooming Clippers are designed for efficient and comfortable pet grooming with the following key features:

- **Heavy-duty Gear:** Provides powerful and stable cutting performance.
- **R-shaped Edge Design:** Prevents accidental cuts to your pet's skin.
- **Titanium and Ceramic Blades:** Combines a titanium fixed blade with a ceramic movable blade for efficient, sharp, and durable cutting without rusting.
- **Adjustable Comb Guides:** Includes 3mm, 6mm, 9mm, and 12mm comb guides for precise hair length adjustment.
- **Precision Motor:** Features low vibration and an ultra-quiet design (approximately 50 dB) to keep pets at ease during grooming.
- **Cordless Operation:** Rechargeable battery allows for cordless use, providing flexibility and ease of movement.
- **Long Usage Time:** Offers 60-70 minutes of continuous use after a 4-5 hour charge.



Image 4.1: Detailed diagram highlighting key features of the clipper, including the professional copper-axis motor, titanium and ceramic blade, fine-tuning knob, push switch, charging indicator light, and high-performance battery.

5. SETUP

5.1 Charging the Clippers

1. Ensure the clippers are turned off.
2. Connect the adapter to the charging port on the clippers.
3. Plug the adapter into a standard electrical outlet (100V-240V, 50/60Hz).
4. The charging indicator light will illuminate.
5. Allow the clippers to charge for 4-5 hours for a full charge. A full charge provides approximately 60-70 minutes of use.
6. Unplug the adapter once charging is complete or before use.



Image 5.1: A hand holding the Baorun Pet Grooming Clipper with the charging cable connected, demonstrating the charging process.

5.2 Attaching Comb Guides

1. Select the desired comb guide (3mm, 6mm, 9mm, or 12mm) based on the desired hair length.
2. Align the comb guide with the clipper blade.
3. Slide the comb guide onto the blade until it clicks securely into place.
4. To remove, gently push the comb guide off the blade.

6. OPERATING INSTRUCTIONS

6.1 Preparing Your Pet

- Ensure your pet's fur is clean, dry, and free of tangles or mats. Brush your pet thoroughly before grooming.
- Familiarize your pet with the sound and feel of the clippers before starting. Turn them on briefly near your pet to allow them to adjust to the low noise.

6.2 Grooming Process

1. Turn on the clippers using the gently push switch.
2. Hold the clippers with a stable and steady grip.
3. Gently move the clippers along your pet's fur in the direction of hair growth.
4. Avoid sensitive areas and be mindful of the low noise and vibration to keep your pet at ease.
5. Regularly check the blade for hair buildup and clean as needed to maintain cutting efficiency.
6. Use the fine-tuning knob to adjust the blade length for more precise trimming if not using a comb guide.

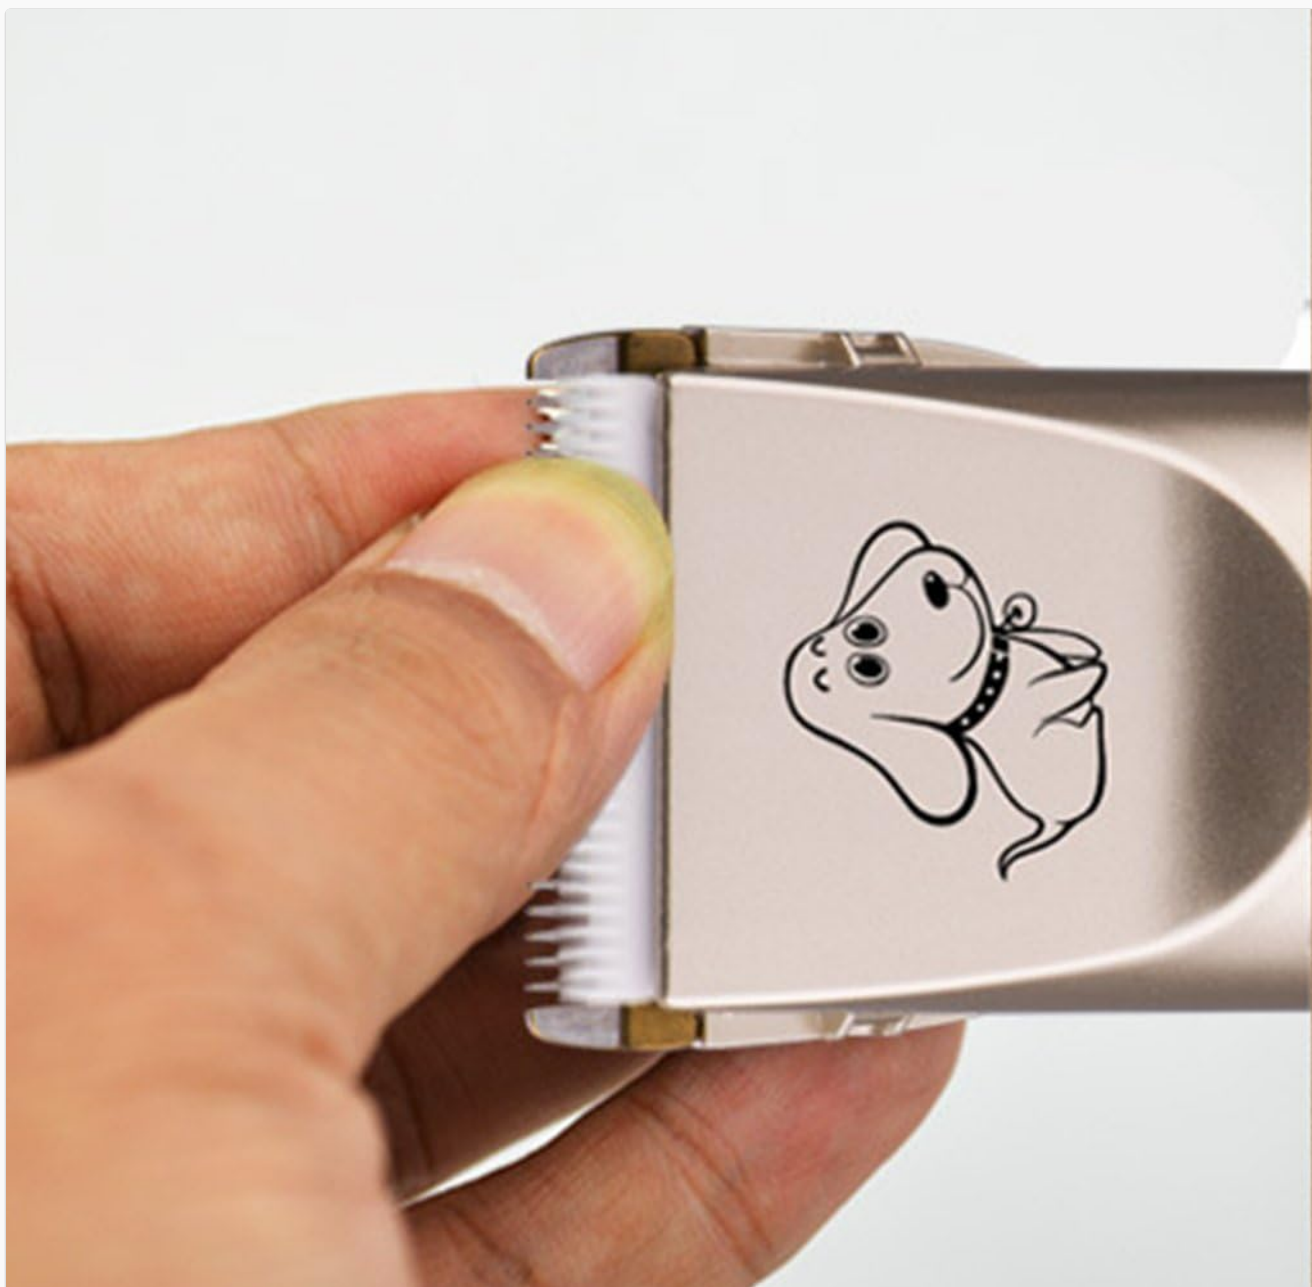


Image 6.1: A hand demonstrating how to adjust the fine-tuning knob on the clipper blade for different cutting lengths.



Image 6.2: A person using the Baorun Pet Grooming Clipper to groom a small dog, illustrating the practical application of the device.

7. MAINTENANCE

Proper maintenance ensures the longevity and performance of your clippers.

7.1 Cleaning the Blades

1. After each use, turn off the clippers and remove any attached comb guides.
2. Use the provided cleaning brush to remove loose hair from the blades and the clipper head.
3. For thorough cleaning, the blade set can be detached. Consult the product diagram for blade removal instructions if necessary.

7.2 Oiling the Blades

1. After cleaning, apply 1-2 drops of the provided lubricating oil to the blades.
2. Turn on the clippers for a few seconds to allow the oil to distribute evenly across the blades.

3. Wipe off any excess oil with a soft cloth. Oiling helps maintain blade sharpness and reduces friction and heat.

7.3 Storage

- Store the clippers in a dry, cool place, away from direct sunlight and moisture.
- Keep out of reach of children and pets.

8. TROUBLESHOOTING

If you encounter issues with your Baorun Pet Grooming Clippers, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Clippers not turning on	Battery is depleted	Charge the clippers for 4-5 hours.
Clippers not cutting effectively	Blades are dull or clogged with hair	Clean and oil the blades. If blades are dull, consider replacement.
Excessive noise or vibration	Blades are not properly oiled or aligned	Apply lubricating oil to the blades. Ensure blades are correctly attached.
Battery life is shorter than expected	Battery not fully charged or aging battery	Ensure a full 4-5 hour charge. If the issue persists, the battery may need replacement (contact support).

9. SPECIFICATIONS

Feature	Detail
Model Number	yux-7200
Input Power	100V-240V 50/60Hz
Dimensions	45 x 175 mm (Clipper body)
Charging Time	4-5 hours
Using Time	60-70 minutes
Net Weight	650g (1.43 pounds)
Blade Material	Titanium and Ceramic
Noise Level	Approximately 50 dB
Power Source	Battery Powered (2 AAA batteries required for internal operation)
Color	Gold

10. WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please contact your retailer or the manufacturer directly. Keep your purchase receipt as proof of purchase.