

[manuals.plus](#) /› [Grundig](#) /› [Grundig DH 2071 Analog Tape Recorder User Manual](#)

## Grundig DH 2071

# Grundig DH 2071 Analog Tape Recorder User Manual

Model: DH 2071

## 1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Grundig DH 2071 Analog Tape Recorder. Please read this manual thoroughly before using the device and retain it for future reference. Proper use and maintenance will ensure optimal performance and longevity of your recorder.

## 2. SAFETY INFORMATION

Observe the following safety precautions to prevent damage to the device or personal injury:

- Do not expose the device to moisture, rain, or extreme temperatures.
- Avoid placing the device near heat sources or in direct sunlight.
- Use only the specified power source or batteries.
- Do not attempt to open or repair the device yourself. Refer all servicing to qualified personnel.
- Keep the device away from strong magnetic fields.
- Ensure proper ventilation to prevent overheating.

## 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Grundig DH 2071 Analog Tape Recorder
- User Manual (this document)
- Power Adapter (if included) or Battery Compartment Cover
- (Optional) Blank Cassette Tape

## 4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Grundig DH 2071.



Figure 4.1: Front View of Grundig DH 2071

This image displays the front of the Grundig DH 2071 analog tape recorder. It features a dark gray or black casing. On the left side, the "GRUNDIG" logo is visible. Towards the center, there is a rectangular transparent window, revealing the cassette tape mechanism and reels inside. To the right of the cassette window, the model designation "Dh 2071" is printed. The far right section of the device is covered by a speaker grille, indicating an integrated speaker. The overall design is compact and functional, typical of portable analog recorders.

The Grundig DH 2071 is a compact analog tape recorder designed for voice recording and playback. It features a built-in speaker and a clear cassette window to monitor tape movement.

## 5. SETUP

### 5.1 Powering the Device

The DH 2071 can be powered by batteries or an optional AC adapter.

- **Battery Installation:** Open the battery compartment cover (usually on the back or bottom) and insert the required batteries, observing the correct polarity (+/-). Close the cover securely.
- **AC Adapter (Optional):** If using an AC adapter, connect it to the DC input jack on the device and then plug it into a wall outlet.

### 5.2 Inserting a Cassette Tape

1. Press the **EJECT** button (if present) or slide the cassette compartment door open.
2. Insert a standard compact cassette tape with the open edge facing towards the playback/record head. Ensure the tape is seated correctly.
3. Close the cassette compartment door firmly until it clicks into place.

## 6. OPERATING INSTRUCTIONS

### 6.1 Basic Controls

The DH 2071 typically features the following control buttons:

- **PLAY (►):** Starts tape playback.
- **RECORD (●):** Press simultaneously with PLAY to begin recording.
- **REWIND (◀◀):** Rewinds the tape.
- **FAST FORWARD (►►):** Fast forwards the tape.
- **STOP/EJECT (■/▲):** Stops tape movement; press again or hold to eject the cassette.

- **PAUSE (||)**: Temporarily stops playback or recording.
- **VOLUME**: Adjusts playback volume.
- **MICROPHONE**: Built-in microphone for recording.
- **EXTERNAL MIC JACK**: For connecting an external microphone.

## 6.2 Recording

1. Insert a blank or recordable cassette tape.
2. Ensure the tape is at the desired starting point (rewind if necessary).
3. Press the **RECORD** button and simultaneously press the **PLAY** button. The record indicator light (if present) will illuminate.
4. Speak clearly into the built-in microphone or connected external microphone.
5. To pause recording, press **PAUSE**. Press again to resume.
6. To stop recording, press the **STOP** button.

## 6.3 Playback

1. Insert a recorded cassette tape.
2. Use **REWIND** or **FAST FORWARD** to locate the desired section.
3. Press the **PLAY** button.
4. Adjust the **VOLUME** control to your preferred listening level.
5. To pause playback, press **PAUSE**. Press again to resume.
6. To stop playback, press the **STOP** button.

# 7. MAINTENANCE

---

## 7.1 Cleaning

- **Exterior**: Wipe the exterior of the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Tape Heads and Capstan**: Periodically clean the tape heads, capstan, and pinch roller using a cotton swab lightly dampened with isopropyl alcohol. This helps maintain sound quality and prevents tape damage. Ensure the device is powered off and disconnected from power before cleaning.

## 7.2 Battery Care

- Remove batteries if the device will not be used for an extended period to prevent leakage.
- Replace all batteries at the same time with new ones of the same type.

# 8. TROUBLESHOOTING

---

If you encounter issues with your Grundig DH 2071, refer to the following table:

Problem	Possible Cause	Solution
No power	Dead batteries; AC adapter not connected; power switch off.	Replace batteries; check AC adapter connection; ensure power switch is ON.
Poor sound quality / No sound	Dirty tape heads; low volume; faulty tape; worn-out tape.	Clean tape heads; adjust volume; try a different tape.

Problem	Possible Cause	Solution
Tape not moving	Tape jammed; mechanism fault; batteries too low.	Check tape for jams; replace batteries. If problem persists, seek service.
Recording not working	Tape write-protect tab engaged; RECORD button not pressed with PLAY.	Check tape write-protect tab; ensure both RECORD and PLAY are pressed simultaneously.

If the problem persists after attempting these solutions, please contact Grundig customer support or a qualified service technician.

## 9. SPECIFICATIONS

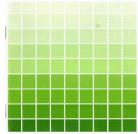
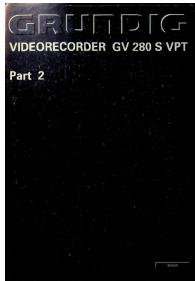
Feature	Detail
<b>Brand</b>	Grundig
<b>Model Number</b>	DH 2071
<b>Product Type</b>	Analog Tape Recorder
<b>Hardware Interface</b>	USB <i>(Note: This might refer to a specific model variant or a data transfer feature, as purely analog recorders typically do not have USB for audio transfer directly. It is included as per product data.)</i>
<b>Audio Format (Playback/Recording)</b>	WAV <i>(Note: This is unusual for an analog tape recorder, which records to magnetic tape. It might refer to digital conversion capabilities if the USB interface is for that purpose, or it's a misclassification in the source data. For an analog recorder, the format is inherently analog on tape.)</i>
<b>Power Source</b>	Batteries / AC Adapter (optional)
<b>Recording Medium</b>	Compact Cassette Tape

*Note: Specifications are subject to change without notice.*

## 10. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Grundig website. For technical support, service, or spare parts inquiries, please contact Grundig customer service through their official channels. Availability of spare parts is not guaranteed as per product information.

**Online Resources:** For additional support and product information, visit the official Grundig website: [www.grundig.com](http://www.grundig.com)

 <p><b>C4100 C4800</b> <b>RADIO RECORDER</b></p>	<p><a href="#"><b>Grundig C4100/C4800 Radio Recorder Operating Instructions</b></a></p> <p>Comprehensive operating instructions for the Grundig C4100 and C4800 Radio Recorder, covering features, functions, accessories, and technical specifications. Includes guidance on radio reception, tape recording, playback, and maintenance.</p>
 <p><b>GRUNDIG</b> MCF 400 <b>Basic Features</b> Bedienungsanleitung Operating Instructions Anleitung für den Benutzer</p>	<p><a href="#"><b>Grundig MCF 400 Cassette Recorder - Operating Instructions and Technical Data</b></a></p> <p>Comprehensive guide for the Grundig MCF 400 cassette recorder, covering operation, connections, accessories, maintenance, and technical specifications. Features include DOLBY NR, multiple tape type support, and detailed recording/playback controls.</p>
 <p><b>DARTY</b> MARQUE GRUNDIG REFERENCE: 400 7700 CODE: 2999912  Manuel d'utilisation Lecteur DVD GRUNDIG GDP 7700</p>	<p><a href="#"><b>Manuel d'utilisation Lecteur DVD GRUNDIG GDP 7700</b></a></p> <p>Guide complet pour le lecteur DVD GRUNDIG GDP 7700. Découvrez comment installer, utiliser toutes les fonctionnalités, régler les paramètres audio et vidéo, et résoudre les problèmes courants de votre appareil.</p>
 <p><b>GRUNDIG</b> VIDEORECORDER GV 280 S VPT Part 2</p>	<p><a href="#"><b>Grundig GV 280 S VPT Video Recorder User Manual</b></a></p> <p>Comprehensive user manual for the Grundig GV 280 S VPT Video Recorder, covering setup, operation, recording, playback, and troubleshooting.</p>
 <p>AUS GUTEM GRUND <b>GRUNDIG</b> VACUUM CLEANER VCH 9530</p>	<p><a href="#"><b>Grundig VCH 9530 Cordless Stick Vacuum Cleaner User Manual</b></a></p> <p>Comprehensive user manual for the Grundig VCH 9530 cordless stick vacuum cleaner, covering setup, operation, maintenance, troubleshooting, and technical specifications. Learn how to use and care for your Grundig vacuum for optimal performance.</p>
	<p><a href="#"><b>Grundig Sonoclock 3500 User Manual: DAB Radio, Bluetooth, and Alarm Clock Features</b></a></p> <p>This user manual provides comprehensive instructions for the Grundig Sonoclock 3500 clock radio, covering setup, safety, DAB/FM radio tuning, Bluetooth connectivity, alarm functions, timer settings, and technical specifications. Learn how to operate your Grundig Sonoclock 3500 effectively.</p>