

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Artograph](#) /

› [Artograph LightPad PRO1700 LED Light Box Instruction Manual](#)

Artograph PRO1700

Artograph LightPad PRO1700 LED Light Box Instruction Manual

Model: PRO1700 | Brand: Artograph

PRODUCT OVERVIEW

The Artograph LightPad PRO1700 is an LED light box designed for arts and crafts. It features variable brightness and adjustable color temperature, suitable for various materials including thick watercolor paper and fabrics. The unit includes a tempered glass cutting surface and capacitive touch controls for ease of use. Its UV-free light is safe for eyes and archival materials. The LightPad PRO1700 is manufactured by Artograph.



Image: Top-down view of the Artograph LightPad PRO1700 LED Light Box.

SETUP

Unboxing and Components

Carefully remove the LightPad PRO1700 from its packaging. Ensure all components are present:

- LightPad PRO1700 unit
- Power Adapter
- Instruction Manual & Warranty Information
- "Call Us First" Card (for support inquiries)
- Cleaning Cloth
- Two PadPucks (for elevating the unit)

Your browser does not support the video tag.

Video: This video demonstrates the unboxing and initial setup of the LightPad PRO, including its components and how to use the PadPucks for elevation.

Power Connection

Connect the power adapter to the LightPad PRO1700 and then plug it into a standard electrical outlet. The unit is now ready for operation.



Image: The LightPad PRO1700 showcasing its adjustable color temperature feature, with one unit displaying warm light and another cool light.

OPERATING INSTRUCTIONS

Power On/Off

To power on the LightPad PRO1700, press the power button located on the control panel. Press the button again to turn the unit off.

Adjusting Brightness

The LightPad PRO1700 offers variable brightness settings. Use the brightness control button (often depicted as a sun icon) to adjust the light intensity. A quick tap cycles through preset brightness levels. Press and hold the button to smoothly increase or decrease brightness. The unit will flash to indicate that the settings have been saved.

For maximum brightness, press the lightning bolt icon. This instantly sets the light to its highest intensity (up to 11,000 lux), suitable for shining through thick materials like 300 lb. watercolor paper or heavy fabrics.



Image: Two LightPad PRO1700 units demonstrating different brightness levels, from bright to dim.

Adjusting Color Temperature

The LightPad PRO1700 features adjustable color temperature (3000K-6200K) to optimize visibility for different projects. Use the flame icon for warmer tones and the snowflake icon for cooler tones. Adjusting the color temperature can help highlight specific tonal qualities in your artwork or materials.

Using the Tempered Glass Surface

The LightPad PRO1700 is equipped with a tempered glass cutting surface. This allows for direct cutting with tools like an X-Acto knife without damaging the light box. The edge of the surface is also designed for use with a T-square for precise measurements and alignments.

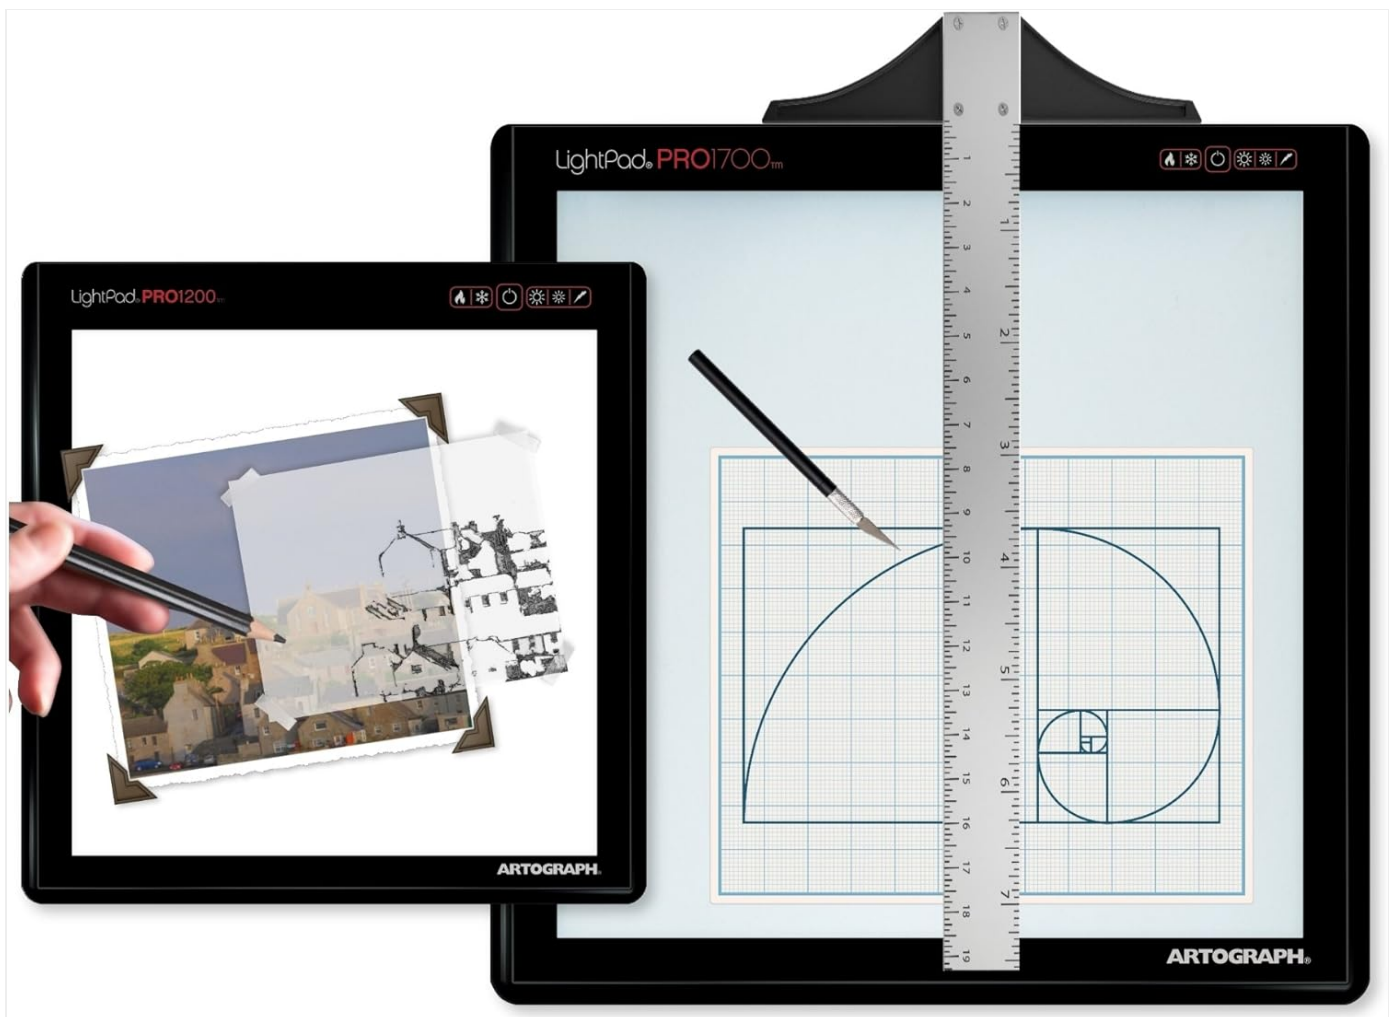


Image: The LightPad PRO1700 being used for tracing, demonstrating the tempered glass surface and T-square compatibility.

MAINTENANCE

Cleaning

To clean the surface of your LightPad PRO1700, use the provided cleaning cloth or a soft, lint-free cloth. For stubborn marks, a small amount of glass cleaner can be applied to the cloth (not directly to the surface) and then wiped clean. Avoid abrasive cleaners or materials that could scratch the tempered glass.

LED Longevity

The LightPad PRO1700 uses long-life LEDs that do not require replacement under normal operating conditions.

TROUBLESHOOTING

No Power

- Ensure the power adapter is securely connected to both the LightPad PRO1700 and a working electrical outlet.
- Verify that the power outlet is functional by plugging in another device.

Light Not Adjusting

- Confirm that the unit is powered on.
- Try tapping the brightness or color temperature buttons firmly. If holding the button, ensure continuous contact.

For further assistance, please refer to the "Support" section.

SPECIFICATIONS

Model Name	LightPad PRO1700
Lighted Area	17.5 inches x 17.5 inches (445mm x 445mm)
Material	Tempered Glass Surface
Light Source Type	LED (Light Emitting Diode)
Brightness	Variable, 500 lux to 5500 lux (Max 11,000 lux at 4600K)
Color Temperature	Adjustable, 3000K-6200K (Warm to Cool White)
Power Source	Corded Electric
Product Dimensions	28 x 24 x 6 inches
Item Weight	11.45 Pounds
UPC	088612500057

WARRANTY

The Artograph LightPad PRO1700 comes with a one-year warranty. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the included warranty information card or contact Artograph customer service.

SUPPORT

For any problems or questions regarding your LightPad PRO1700, please contact Artograph customer service first. Our customer service team in Minnesota, USA, is available to assist you.

Email: info@artograph.com

Website: www.artograph.com

Phone: 763-550-3479 or 888-975-9555

Hours: Monday - Friday, 8 AM - 4 PM CT

