

BESTTEN LH-7

BESTTEN Outdoor Power Stake LH-7 Instruction Manual

Model: LH-7

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your BESTTEN Outdoor Power Stake, Model LH-7. This product is designed to provide multiple power outlets for outdoor electrical devices, featuring a durable, weatherproof construction and integrated safety features. Please read this manual thoroughly before installation and operation.

2. SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, fire, or injury, always follow these basic safety precautions.

- **Outdoor Use Only:** This power stake is specifically designed and certified for outdoor use. Do not use indoors.
- **Grounding:** Ensure the power stake is connected to a properly grounded outlet.
- **Overload Protection:** The integrated circuit breaker protects against overloads. If the power cuts off, unplug devices, reset the switch, and reduce the load.
- **Weather Protection:** The weatherproof outlet covers must be closed when outlets are not in use to prevent water ingress.
- **Cord Integrity:** Do not run the cord through doorways or windows, or under carpets. Inspect the cord for damage before each use.
- **Placement:** Position the power stake in a location where it will not be a tripping hazard and away from standing water.
- **Children and Pets:** Keep out of reach of children and pets.
- **Disconnection:** Always unplug the power stake from the main power source before performing any maintenance or when not in use.
- **ETL Certified:** This product is ETL certified, indicating compliance with North American safety standards.

3. PRODUCT OVERVIEW

The BESTTEN Outdoor Power Stake LH-7 provides convenient outdoor power distribution. It features six grounded outlets, a 9-foot extension cord, and an on/off switch with an integrated circuit breaker.



Figure 3.1: Overview of the BESTTEN Outdoor Power Stake LH-7.

Key Features:

- 6 Grounded Outlets: Provides power for multiple outdoor devices.

- 9-Foot Extension Cord: Offers flexible placement options.
- Weatherproof Outlet Covers: Protects unused outlets from environmental elements.
- On/Off Switch with Circuit Breaker: For easy power control and overload protection.
- Durable, Fire-Resistant Housing: Designed for outdoor conditions.
- Green Color: Blends discreetly with landscaping.



Figure 3.2: Visual representation of key features including 6 grounded outlets, 9-foot cord, easy installation, weather resistance, and ETL certification.



6 Outlets
with Protective Covers



ON/OFF Switch
with Circuit Breaker



Fireproof Material



9-Ft
Weatherproof Cord

Figure 3.3: Detailed view of the 6 outlets with protective covers, the ON/OFF switch with circuit breaker, fireproof material, and the 9-foot weatherproof cord.

4. SETUP

Follow these steps to set up your BESTTEN Outdoor Power Stake:

1. **Unpack:** Carefully remove the power stake and all components from the packaging.
2. **Attach Ground Stake:** Insert the ground stake into the bottom of the power stake unit. Ensure it is securely fastened.
3. **Select Location:** Choose a suitable outdoor location for the power stake. The location should be on level ground, away from standing water, and within reach of a grounded outdoor power outlet.
4. **Install Stake:** Firmly push the ground stake into the soil until the power stake unit is stable and upright. Do not force the stake into hard ground; if necessary, pre-dig a small hole.
5. **Connect to Power:** Plug the power stake's extension cord into a grounded outdoor electrical outlet.

6. **Connect Devices:** Open the protective covers of the desired outlets and plug in your outdoor electrical devices. Ensure covers are closed on unused outlets.



Figure 4.1: Illustration of attaching the ground stake (1) to the power stake unit (2).

For outdoor use

Weatherproof outlet covers make it perfect for use in any season.
Green color blends in with your landscaping.



Figure 4.2: The power stake installed in a garden setting, blending with the landscaping.

5. OPERATION

Operating the BESTTEN Outdoor Power Stake is straightforward:

1. **Power On:** Once the power stake is installed and devices are plugged in, press the red ON/OFF switch to the 'ON' position. The switch will illuminate when power is active.
2. **Power Off:** To turn off power to all connected devices, press the red ON/OFF switch to the 'OFF' position.
3. **Overload Reset:** If the power stake stops providing power, the circuit breaker may have tripped due to an overload. Unplug some devices, then press the reset button on the ON/OFF switch to restore power.
4. **Unused Outlets:** Always ensure that any unused outlets have their protective covers securely closed to maintain weather resistance.



Figure 5.1: Front and back views of the power stake, illustrating the six available outlets.



Figure 5.2: Examples of the power stake in use, powering a fountain, Christmas lights, string lights, and a sprinkler system.

6. MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your power stake:

- **Cleaning:** Disconnect the power stake from the main power source before cleaning. Wipe the exterior with a damp cloth. Do not use harsh chemicals or abrasive cleaners.

- **Inspection:** Regularly inspect the power cord, plug, and housing for any signs of damage, wear, or corrosion. If damage is found, discontinue use and replace the unit.
- **Outlet Covers:** Ensure the protective outlet covers are functioning correctly and seal tightly when closed.
- **Storage:** When not in use for extended periods, store the power stake in a dry, protected area, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your BESTTEN Outdoor Power Stake, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power to devices	Power switch is OFF	Press the ON/OFF switch to the 'ON' position.
No power to devices	Circuit breaker tripped	Unplug some devices, then press the reset button on the ON/OFF switch. Reduce the total load.
No power to devices	Main power outlet is off or faulty	Check the main outdoor power outlet and its circuit breaker. Test with another device.
Water inside outlets	Outlet covers not closed	Ensure all unused outlet covers are securely closed. Discontinue use if water is present and allow to dry completely before attempting to use again.
Power cord or housing damaged	Physical damage	Discontinue use immediately. Do not attempt to repair. Replace the unit.

8. SPECIFICATIONS

Detailed technical specifications for the BESTTEN Outdoor Power Stake LH-7:

Specification	Value
Model Number	LH-7
Product Dimensions	7.28 x 2.8 x 0.01 inches (stake not included in height)
Item Weight	1.8 pounds
Number of Outlets	6
Extension Cord Length	9 feet
Voltage Rating	125 Volts
Current Rating	15 Amps

Specification	Value
Wire Gauge	14/3-gauge SJTW
Plug Format	Type B (3-prong grounded)
Certifications	ETL Certified
Color	Green
Manufacturer	BESTTEN

Product Dimensions



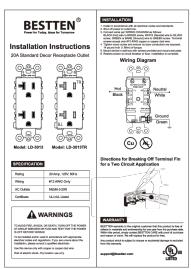 
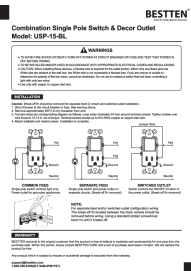 
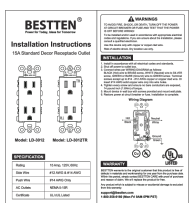 
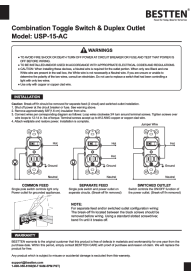 


Figure 8.1: Product dimensions of the power stake and ground stake.

9. WARRANTY AND SUPPORT

BESTTEN products are designed for reliability and performance. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official BESTTEN website. Keep your purchase receipt for warranty claims.

Related Documents - LH-7

	<p>BESTTEN USO-0U3A-3-30 3-Outlet Outdoor Power Stake User Manual and Safety Guide</p> <p>Comprehensive user manual for the BESTTEN USO-0U3A-3-30 outdoor power stake. Features include 3 grounded outlets, a 30ft weatherproof extension cord, installation instructions, safety precautions, and warranty details. Visit www.ibestten.com for more BESTTEN products.</p>
	<p>BESTTEN USOT-R-3A Remote Control Outdoor Outlet Switch User Manual</p> <p>User manual for the BESTTEN USOT-R-3A 15A Remote Control Outdoor Outlet Switch. Includes specifications, operation instructions, safety warnings, and warranty information.</p>
	<p>BESTTEN LD-3013/LD-3013TR 20A Standard Decor Receptacle Outlet Installation Instructions</p> <p>Official installation instructions for BESTTEN's 20A Standard Decor Receptacle Outlet models LD-3013 and LD-3013TR. Includes wiring diagrams, specifications, warnings, and warranty information.</p>
	<p>BESTTEN USP-15-BL Combination Single Pole Switch & Decor Outlet Installation Guide</p> <p>Detailed installation instructions and safety information for the BESTTEN USP-15-BL combination single pole switch and decor outlet. Learn about common feed, separate feed, and switched outlet wiring configurations.</p>
	<p>BESTTEN 15A Standard Decor Receptacle Outlet Installation Instructions</p> <p>Detailed installation instructions for BESTTEN 15A Standard Decor Receptacle Outlet (Models LD-3012, LD-3012TR), including safety warnings, wiring diagrams, specifications, and warranty information.</p>
	<p>Combination Toggle Switch & Duplex Outlet USP-15-AC Installation and Warranty</p> <p>Installation guide and warranty information for the BESTTEN Combination Toggle Switch & Duplex Outlet, Model USP-15-AC. Includes wiring diagrams for common feed, separate feed, and switched outlet configurations.</p>