

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Daewoo](#) /

› [Daewoo KOR-7LREW Retro Countertop Microwave Oven User Manual](#)

Daewoo KOR-7LREW

Daewoo KOR-7LREW Retro Countertop Microwave Oven User Manual

Model: KOR-7LREW

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- To reduce the risk of fire, electric shock, or injury to persons, do not operate the oven when empty.
- Do not heat sealed containers, as they may explode.
- Close supervision is necessary when the appliance is used by or near children.
- Do not use this appliance for purposes other than its intended use.
- Regularly clean the oven cavity, door, and seals. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Do not attempt to operate this oven if it is damaged, particularly the door or door seals. Contact qualified service personnel for repair.
- Ensure proper ventilation around the microwave.

PRODUCT OVERVIEW


The Daewoo KOR-7LREW Retro Countertop Microwave Oven combines a classic aesthetic with modern functionality. This 0.7 cubic feet, 700W microwave features a user-friendly control panel and a unique Concave Reflex System (C.R.S) for efficient cooking.





Front view of the Daewoo KOR-7LREW Retro Microwave Oven, showcasing its cream white finish and control panel.



Interior view of the microwave with the door open, showing a plate of food on the recessed turntable.

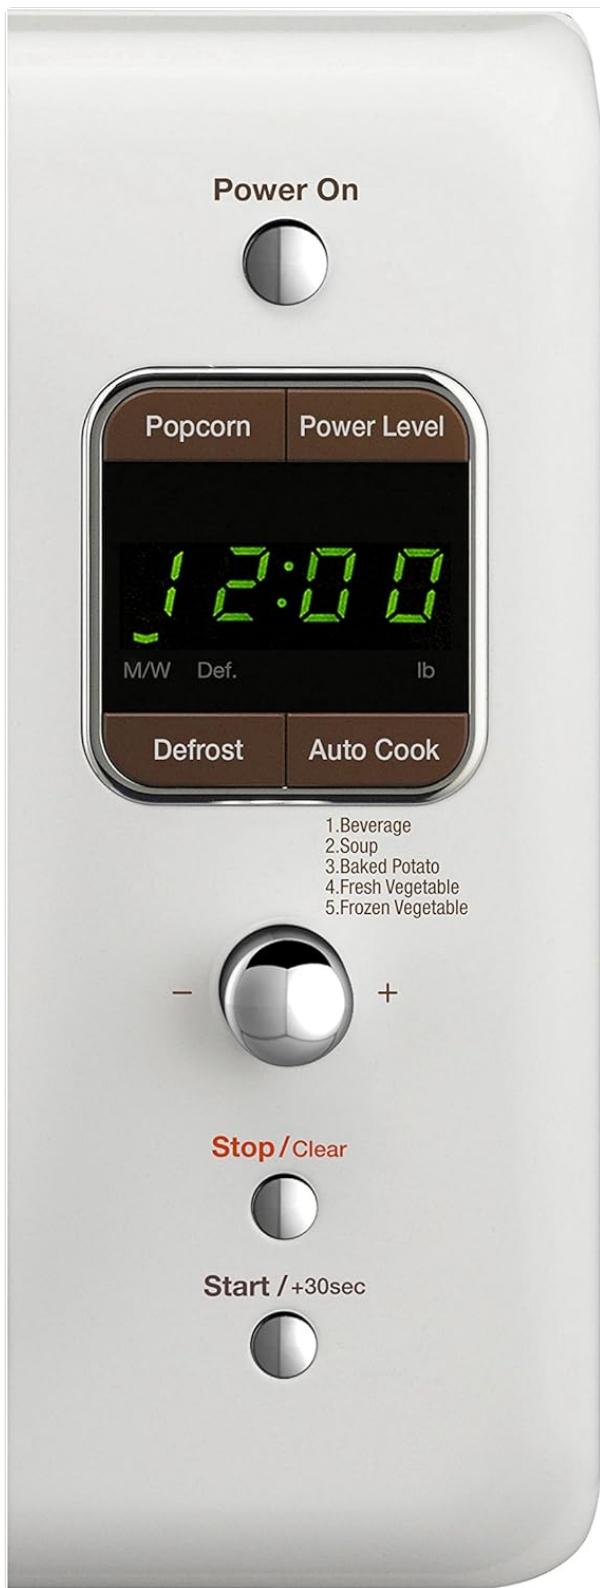

Close-up of the control panel, highlighting the digital display, dial, and function buttons.

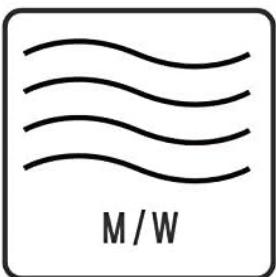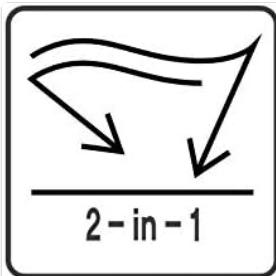

Detailed view of the microwave's interior, showing the glass turntable and cavity walls.

Key Components:

- **Door:** Features a handle for opening and closing.
- **Control Panel:** Digital display and buttons for various functions.
- **Turntable:** Recessed glass tray for even cooking.
- **Oven Cavity:** Interior cooking space.

Control Panel Functions:

- **Power On:** Button to activate the microwave.
- **Popcorn:** Pre-set function for cooking popcorn.
- **Power Level:** Adjusts microwave power output.
- **Defrost:** Offers time and weight-based defrosting.
- **Auto Cook:** Pre-set menus for common foods.
- **Stop/Clear:** Stops cooking or clears settings.
- **Start/+30sec:** Starts cooking or adds 30 seconds to cooking time.
- **Dial:** Used to set time, weight, or select menu options.

SETUP

Unpacking:

- Remove all packaging materials from inside and outside the microwave oven.
- Check the oven for any damage, such as dents or a misaligned door. Do not operate if damaged.
- Remove any protective film from the cabinet and door.

Placement:

- Place the microwave on a flat, stable surface strong enough to support its weight.
- Ensure adequate ventilation by leaving at least 10 cm (4 inches) of space at the back, 20 cm (8 inches)

at the top, and 5 cm (2 inches) on the sides.

- Keep the microwave away from heat sources, strong magnetic fields, and water.

Electrical Connection:

- Plug the microwave into a properly grounded 3-prong outlet.
- Do not use an extension cord or adapter.
- Ensure the voltage and frequency match the specifications on the rating label.

Turntable Installation:

- Place the roller ring in the center of the oven cavity.
- Position the glass turntable securely on the roller ring. Ensure it rotates freely.

OPERATING INSTRUCTIONS

Basic Microwave Cooking:

1. Place food in a microwave-safe container on the turntable. Close the door.
2. Press the 'Power On' button.
3. Turn the dial to set the desired cooking time. The maximum cooking time is 99 minutes 99 seconds.
4. Press the 'Start/+30sec' button to begin cooking.

Adjusting Power Level:

This microwave offers 5 power levels to suit various cooking needs.

1. After setting the cooking time, press the 'Power Level' button.
2. Turn the dial to select the desired power level (P-100 for full power, P-80, P-60, P-40, P-20 for lowest power).
3. Press 'Start/+30sec' to begin.

Auto Cook Menus:

The microwave features 5 pre-set auto-cook options:

- 1. Beverage
- 2. Soup
- 3. Baked Potato
- 4. Fresh Vegetable
- 5. Frozen Vegetable

1. Place food in the oven.
2. Press the 'Auto Cook' button repeatedly to select the desired menu number.
3. Press 'Start/+30sec' to begin cooking. The oven will automatically set the cooking time and power level.

Defrost Function (2-Way Defrost):

Defrost food by either time or weight.

1. Place frozen food in the oven.

2. Press the 'Defrost' button.
3. Turn the dial to select either 'dEF1' (Defrost by Weight) or 'dEF2' (Defrost by Time).
4. For 'dEF1', turn the dial to set the weight of the food. For 'dEF2', turn the dial to set the defrosting time.
5. Press 'Start/+30sec' to begin defrosting.

Quick Start (+30sec):

Press the 'Start/+30sec' button to immediately start cooking at full power for 30 seconds. Each subsequent press adds 30 seconds to the cooking time.

Stop/Clear Function:

Press the 'Stop/Clear' button once to pause cooking. Press it twice to cancel the current cooking program and return to standby mode.

Zero On (Eco Standby):

This feature automatically puts the microwave into a low-power sleep mode when idle, reducing energy consumption.

Child Lock:

To activate the child lock, press and hold the 'Stop/Clear' button for 3 seconds. The display will show 'LOCK'. To deactivate, press and hold 'Stop/Clear' again for 3 seconds.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and safe operation of your microwave oven.

Cleaning the Exterior:

- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Cleaning the Interior:

- Clean the oven cavity after each use with a mild detergent and a soft cloth.
- For stubborn stains, place a bowl of water with lemon juice inside and microwave for 2-3 minutes. This will loosen food particles for easier cleaning.
- Ensure the interior is dry before closing the door.

Cleaning the Turntable and Roller Ring:

- Remove the glass turntable and roller ring. Wash them in warm, soapy water or in a dishwasher.
- Dry thoroughly before placing them back in the oven.

Door Seals:

- Wipe the door seals and adjacent parts with a damp cloth to remove any spills or splatters.
- Do not use harsh cleaners that could damage the seals.

TROUBLESHOOTING

If you encounter issues with your microwave, refer to the following common problems and solutions:

• Microwave does not start:

- Ensure the power cord is securely plugged in.
- Check if the door is fully closed.
- Verify that a cooking time has been set.
- Check your household fuse/circuit breaker.

• Food not heating:

- Ensure the power level is set correctly.
- Check if the cooking time is sufficient.
- Make sure the door is properly latched.

• Turntable not rotating:

- Ensure the turntable and roller ring are correctly positioned.
- Check for any obstructions beneath the turntable.

• Unusual noises during operation:

- This can sometimes be normal during microwave operation. If the noise is excessive or new, ensure the turntable is correctly seated and there are no loose items inside.

• Display shows 'LOCK':

- The child lock is activated. Press and hold the 'Stop/Clear' button for 3 seconds to deactivate.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

| | |
|---------------------------------------|--|
| Brand | Daewoo |
| Model | KOR-7LREW |
| Capacity | 0.7 Cubic Feet |
| Wattage | 700 watts |
| Colour | Cream White |
| Product Dimensions (D x W x H) | 32.3 x 44.7 x 26.9 cm (12.7 x 17.6 x 10.6 inches) |
| Material | Plastic, Metal |
| Installation Type | Countertop |
| Special Features | Auto Cook, Turntable, Concave Reflex System (C.R.S), Zero On (Eco Standby) |
| Human Interface Input | Dial |

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Daewoo website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you require assistance with troubleshooting or parts replacement, please contact Daewoo customer service.

© 2023 Daewoo. All rights reserved.