

Monster E98

Monster Open Ear AC339 Earbuds User Manual

Model: E98

INTRODUCTION

This manual provides detailed instructions for the Monster Open Ear AC339 Earbuds, Model E98. Please read this manual thoroughly before using the product to ensure proper operation and to maximize your listening experience. Keep this manual for future reference.



Image: Monster Open Ear AC339 Earbuds banner, illustrating the product's open-ear design worn by individuals.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Monster Open Ear AC339 Earbuds (Left and Right)
- Wireless Charging Case
- USB Charging Cable (Type-C)
- User Manual

PRODUCT OVERVIEW

The Monster Open Ear AC339 Earbuds feature an innovative open-ear design for comfort and situational awareness, combined with advanced audio technology.



Image: Front and side view of the Monster Open Ear AC339 Earbuds, showcasing their design.



Image: Diagram highlighting key features such as the open clip ear design, soft support, touch controls, Bluetooth 6.0, battery life, and 12mm unit driver.



Image: Exploded view of an earbud, detailing the internal components of the audio driver.

CHARGING

The earbuds and charging case are equipped with rechargeable batteries. Ensure they are fully charged before first use.

Charging the Earbuds

1. Place the earbuds into the charging case. Ensure they are correctly seated in their respective slots.
2. The earbuds will automatically begin charging. The LED indicators on the earbuds (if present) and the digital display on the case will show charging status.

Charging the Case

1. Connect the USB Type-C charging cable to the charging port on the case.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The digital display on the charging case will indicate the battery level during charging.

A full charge provides up to 8 hours of playback for the earbuds, with the charging case extending total playback time to approximately 40 hours.

Long-Lasting Listening Experience

Exceptional Total Battery Life of up to 40 Hours

40  Hours

995  Songs

30  Meetings

**40 Hours**

Image: Earbuds inside the charging case, illustrating the extended battery life provided by the case.

SETUP AND PAIRING

Follow these steps to pair your Monster Open Ear AC339 Earbuds with your Bluetooth-enabled device.

1. **Initial Pairing:** Open the charging case. The earbuds will automatically enter pairing mode.
2. **Activate Bluetooth:** On your device (smartphone, tablet, etc.), go to the Bluetooth settings and ensure Bluetooth is enabled.
3. **Select Device:** Look for "Monster Open Ear AC339" in the list of available devices and select it to connect.
4. **Confirmation:** Once connected, you will hear an audio prompt from the earbuds, and the device's Bluetooth settings will show "Connected".

The earbuds will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.



Image: Earbuds positioned near a smartphone, illustrating the Bluetooth pairing process on the phone's screen.

WEARING INSTRUCTIONS

For optimal comfort and sound quality, ensure the earbuds are worn correctly.

1. Identify the Left (L) and Right (R) earbuds.
2. Gently place the earbud onto your ear, positioning the open clip design around the lower part of your ear.
3. Rotate and adjust the earbud until it feels secure and comfortable, with the audio output directed towards your ear canal without blocking it.



Image: A close-up view of an earbud correctly placed on a person's ear.

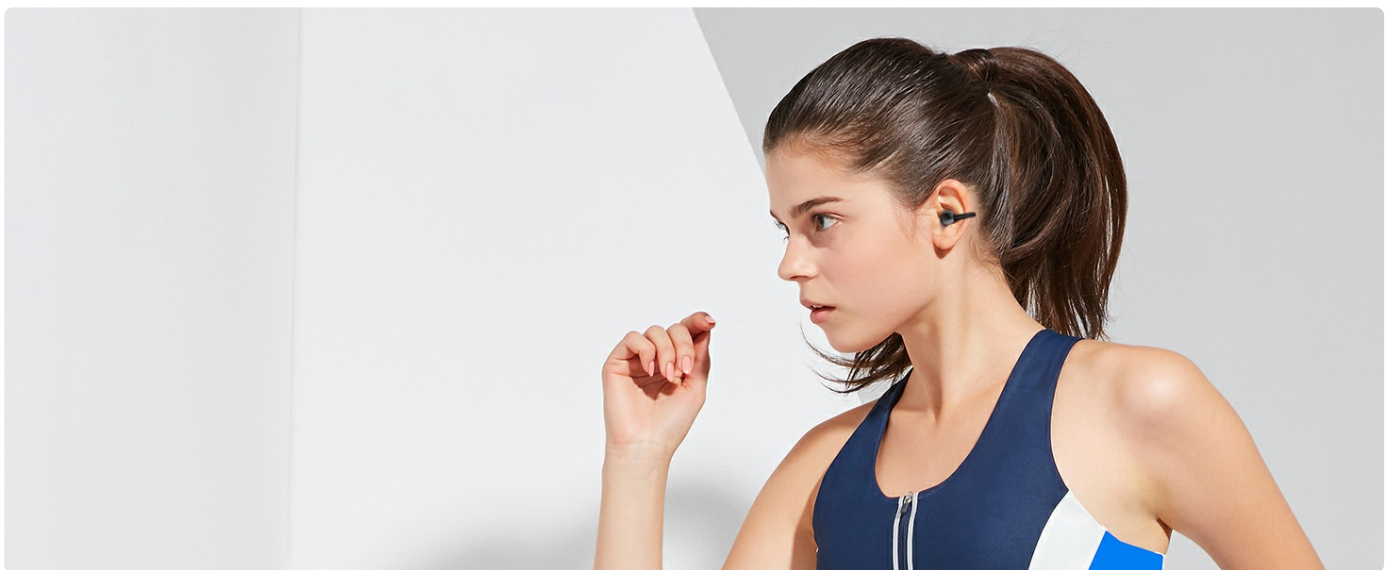


Image: Step-by-step diagram demonstrating the correct method to wear the earbuds by rotating them for a secure fit.

OPERATING INSTRUCTIONS (TOUCH CONTROLS)


The Monster Open Ear AC339 Earbuds feature sensitive touch controls on both earbuds for easy management of calls and music playback.

Touch Control Function

Sensitive binaural touch control, accurate recognition function.



Image: A person wearing an earbud, indicating the location of the touch control sensor.

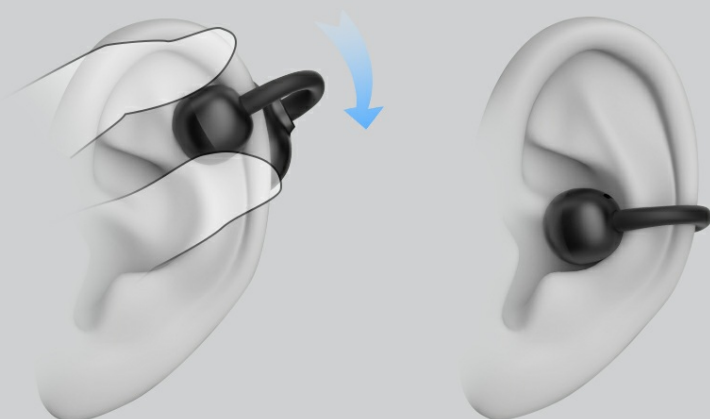

How to Wear

Put the **"Monster Open Ear AC339"** onto your ears and rotate to fit comfortably to get the best wearing and sound quality experience.

Image: Detailed diagram outlining the various touch control functions for both left and right earbuds, covering call handling, music control, and voice assistant activation.

Touch Control Functions

Action	Left Earbud (L)	Right Earbud (R)
Answer Call	Click x 2	Click x 2
Reject Call / Hang Up	Hold x 2s	Hold x 2s
Play / Pause Music	Click x 2	Click x 2
Previous Song	Click x 3	N/A
Next Song	N/A	Click x 3
Volume Down	Click x 1	N/A
Volume Up	N/A	Click x 1
Activate Voice Assistant	Hold x 2s	Hold x 2s

LED INDICATOR STATUS

The earbuds and charging case use LED indicators to communicate their status. Refer to the following for common indications:

- **Earbuds Charging:** Solid red LED on earbuds (may vary, refer to product for exact color).
- **Earbuds Fully Charged:** LED turns off or changes color (e.g., blue).
- **Pairing Mode:** Flashing blue/red LED on earbuds.
- **Connected:** Slow flashing blue LED or LED off.
- **Charging Case Battery Level:** Indicated by the digital display on the case.

MAINTENANCE AND CARE

Proper maintenance ensures the longevity and performance of your earbuds.

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earbuds and charging case. Do not use harsh chemicals or abrasive materials.
- **Water Resistance:** The earbuds are IPX6 water-resistant, meaning they can withstand strong jets of water. However, they are not designed for submersion. Dry them thoroughly after exposure to moisture.
- **Storage:** Store the earbuds in their charging case when not in use to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.
- **Battery Care:** To preserve battery life, avoid fully discharging the earbuds and case frequently. Charge them regularly, even if not used for extended periods.

IPX6 Water Resistance

With IPX6 water resistance, these open-back headphones can handle water jets from any direction, making them perfect for exercise, rain, or wet conditions without interrupting your listening experience.



Image: Earbuds shown with water droplets, emphasizing their IPX6 water resistance for protection against splashes and sweat.

TROUBLESHOOTING

If you encounter issues with your earbuds, refer to the following common solutions:

Troubleshooting Guide

Problem	Solution
---------	----------

Problem	Solution
Earbuds not pairing/connecting	◦ Ensure earbuds are charged. ◦ Turn off and on Bluetooth on your device. ◦ Forget "Monster Open Ear AC339" from your device's Bluetooth list and re-pair. ◦ Place earbuds back in the case, close, then reopen to re-enter pairing mode.
No sound or low volume	◦ Check volume levels on both earbuds and your connected device. ◦ Ensure earbuds are properly seated in your ears. ◦ Reconnect the earbuds to your device.
One earbud not working	◦ Place both earbuds back in the charging case, close the lid, wait a few seconds, then open and try again. ◦ Ensure both earbuds are charged.
Charging case not charging	◦ Check the charging cable and power adapter. Try a different cable or adapter. ◦ Ensure the charging port is clean and free of debris.
Touch controls unresponsive	◦ Ensure your fingers are clean and dry. ◦ Try restarting the earbuds by placing them in the case and taking them out again.

SPECIFICATIONS

Technical specifications for the Monster Open Ear AC339 Earbuds (Model E98):

Product Specifications

Feature	Detail
Model Name	E98 (AC339 Series)
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	6.0
Ear Placement	Open Ear
Form Factor	True Wireless
Control Method	Touch
Water Resistance Level	IPX6
Battery Life (Earbuds)	Up to 8 hours (single charge)
Total Playback Time (with case)	Up to 40 hours

Feature	Detail
Included Components	Wireless Charging Case
Material	Plastic, Silicone
Item Weight	4.9 ounces
Manufacturer	Monster

SAFETY INFORMATION

Please read and follow these safety guidelines to prevent injury or damage to your device:

- Do not disassemble, repair, or modify the product.
- Keep the product away from extreme temperatures, direct sunlight, and open flames.
- Avoid exposing the product to excessive moisture or liquids beyond its IPX6 rating.
- Do not use the product at high volume levels for extended periods to prevent hearing damage.
- Use only approved chargers and cables.
- Dispose of batteries and electronic components responsibly according to local regulations.

WARRANTY AND SUPPORT

Monster provides dedicated after-sales support for its products. For warranty information, technical assistance, or any inquiries regarding your Monster Open Ear AC339 Earbuds, please contact Monster customer service. Refer to the official Monster website or your purchase documentation for specific warranty terms and contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01F3IBIKO>

More documents and user manuals: <https://manuals.plus/>