

Thrustmaster 4060079

Thrustmaster TR J12 USB Adapter Instruction Manual

Model: 4060079

1. INTRODUCTION

The Thrustmaster TR J12 USB Adapter is designed to enhance the compatibility of your Thrustmaster T3PA and T3PA-PRO 3-pedal pedal sets. This adapter allows these pedal sets to be used on PC with a wide range of racing wheels and PC games that support multi-USB input. It provides high-resolution, high-precision 10-bit performance (1024 values) for each of the three pedals (gas, brake, and clutch).

This manual provides essential information for setting up, operating, and maintaining your TR J12 USB Adapter.

2. WHAT'S IN THE BOX

Upon opening the package, please ensure all components are present:

- Thrustmaster TR J12 USB Adapter
- Instructions Manual

T.RJ12 USB ADAPTER

- Product Reference: 4060079
- Quantity inside carton: x1
- Total weight master
gross weight & net weight GW 56g NW 34g
- Master dimensions:
Lenght*Depth*Height 110*75*30
- 13 digits EAN EMEA barcode 12 digits UPC US barcode



. Serial Number

S/N:2127324370004810

Image: The product packaging for the Thrustmaster TR J12 USB Adapter, detailing product information and barcodes.

3. SETUP

Follow these steps to connect and prepare your TR J12 USB Adapter for use:

1. **Connect Pedals to Adapter:** Plug your Thrustmaster T3PA or T3PA-PRO 3-pedal set's RJ12 connector into the corresponding port on the TR J12 USB Adapter.



Image: The Thrustmaster TR J12 USB Adapter, showing its RJ12 input and USB-A output connectors.

2. **Connect Adapter to PC:** Plug the USB-A connector of the TR J12 USB Adapter into an available USB port on your PC.



Image: The underside of the adapter, displaying its model information and regulatory compliance.

3. **Install Drivers:** Download and install the latest PC drivers for the TR J12 USB Adapter from the official Thrustmaster website. These drivers include a customized Windows Control Panel interface for configuration.
4. **Calibration Software:** For advanced customization, download the Advance Calibration Software from the Thrustmaster website. This software allows you to adjust the dead zones at the beginning and end of each pedal's range of travel.
5. **Pedal Mode Switch:** If your pedals have a physical switch for "airplane" or "car" mode, ensure it is set to the appropriate mode for your intended use (e.g., "airplane" for rudder pedals, "car" for racing pedals). Incorrect settings can lead to unexpected behavior.

Setup Video Guide

Your browser does not support the video tag.

Video: An official video demonstrating the Thrustmaster TR J12 USB Adapter, showcasing its physical attributes and potential connections. This video provides a visual overview of the product.

4. OPERATING INSTRUCTIONS

Once the adapter and pedals are connected and drivers are installed, your pedal set should be recognized by your PC and compatible games.

- **Game Compatibility:** The adapter is compatible with all PC games that support multi-USB devices. Ensure your game settings are configured to use the pedal set.
- **Precision:** Benefit from the high-resolution, 10-bit precision (1024 values) on each pedal for accurate control in simulations.
- **Customization:** Use the Windows Control Panel interface (installed with drivers) or the Advance Calibration Software to fine-tune pedal response, including dead zones, to match your preference.

5. MAINTENANCE

To ensure the longevity and optimal performance of your TR J12 USB Adapter:

- Keep the adapter clean and free from dust. Use a soft, dry cloth for cleaning.
- Avoid exposing the adapter to extreme temperatures or humidity.
- Do not attempt to open or modify the adapter, as this will void the warranty.
- Store the adapter in a safe place when not in use to prevent physical damage.

6. TROUBLESHOOTING

If you encounter issues with your TR J12 USB Adapter, consider the following:

- **Adapter Not Recognized:**
 - Ensure the adapter is securely plugged into a functional USB port on your PC.
 - Verify that the pedal set is correctly connected to the adapter.
 - Check if the latest drivers from the Thrustmaster website are installed.
 - Try a different USB port on your PC.
- **Pedals Not Responding in Game:**
 - Confirm that the game's control settings are configured to use the pedal set.
 - Open the Windows Control Panel interface for the adapter to check if the pedals are registering input.
 - If your pedals have a mode switch (e.g., "airplane" or "car"), ensure it is set correctly for the game you are playing.
- **Incorrect Pedal Response (e.g., dead zones):**
 - Use the Advance Calibration Software to adjust pedal dead zones and sensitivity.

7. SPECIFICATIONS

Feature	Detail
Brand	Thrustmaster
Model Number	4060079
Compatible Devices	PC
Specific Uses For Product	PC
Connector Type	USB
Number of Ports	4 (Internal for pedals, 1 USB output)
Power Plug Type	No Plug (USB Powered)
UPC	663296420510
Item Weight	0.13 Pounds
Color	Black
Precision	10-bit (1024 values) on each pedal

8. WARRANTY

This product is covered by a one-year warranty. For detailed warranty terms and conditions, please refer to the official Thrustmaster website or contact customer support.

9. SUPPORT

For further assistance, technical support, driver downloads, or calibration software, please visit the official Thrustmaster website:

www.thrustmaster.com

You can also find additional resources and FAQs on the Thrustmaster support pages.