

tectake No. 401834

tectake Bamboo Laundry Hamper Instruction Manual

Model: No. 401834 (100L Natural)

1. PRODUCT OVERVIEW

The tectake Bamboo Laundry Hamper is designed for efficient and organized storage of dirty laundry. Its robust bamboo construction offers durability, while the foldable design ensures space-saving convenience when not in use. This hamper features a generous 100-liter capacity and includes a removable, washable inner bag for hygiene and ease of use. The integrated bamboo handles facilitate easy transport.

Key Features:

- Compact and robust bamboo construction.
- Foldable design for space-saving storage.
- Removable and washable inner laundry bag.
- High capacity (100L) with reinforced wooden bottom and metal ring for stability.
- Practical bamboo handles for easy transport.
- Versatile use for laundry, shoes, toys, or other items.

Components Included:

- 1 x Bamboo Laundry Hamper
- 1 x Removable Laundry Bag

2. SAFETY INFORMATION

- Ensure all components are correctly assembled before use to prevent instability.
- Do not overload the hamper beyond its intended capacity to avoid damage or deformation.
- Keep the hamper away from open flames or excessive heat sources.
- This product is intended for indoor use only.
- Periodically check for any signs of wear or damage. Discontinue use if significant damage is observed.

3. ASSEMBLY INSTRUCTIONS

The tectake Bamboo Laundry Hamper is designed for easy assembly. Follow these steps to set up your hamper:

1. **Unfold the Bamboo Frame:** Carefully unfold the main bamboo frame of the hamper. Ensure all sides are fully extended to form the rectangular shape.
2. **Insert the Bottom Support:** Place the reinforced wooden bottom support panel inside the hamper at the base. Ensure it sits flat and securely to provide stability.
3. **Position the Metal Ring (if separate):** If your model includes a separate metal ring for the top opening, insert it into the top edge of the bamboo frame to maintain its shape.
4. **Insert the Laundry Bag:** Place the removable fabric laundry bag inside the assembled bamboo frame. Secure the top edge of the bag around the rim of the hamper, typically using the integrated ties or elastic band.
5. **Attach the Lid:** Place the bamboo lid on top of the hamper. The lid is designed to rest securely on the frame.



Image 1: Assembled tectake bamboo laundry hamper with its lid slightly open, showing the inner fabric liner.



Image 2: Top-down view of the hamper, illustrating the spacious interior and the removable fabric liner.

4. OPERATING INSTRUCTIONS

Using the Laundry Hamper:

- **Collecting Laundry:** Place dirty clothes directly into the removable inner laundry bag. The lid helps to keep contents out of sight and contain odors.
- **Transporting Laundry:** When the hamper is full, lift the entire inner laundry bag out using its handles or by gathering the top. The bamboo handles on the hamper itself can also be used to move the entire unit.
- **Versatile Storage:** Beyond laundry, this hamper can be used to store various household items such as shoes, children's toys, or blankets.



Image 3: A hand demonstrating the removal of the fabric laundry bag from the bamboo hamper.



Image 4: Close-up view of the sturdy rope handle integrated into the bamboo lid, designed for easy lifting.

5. MAINTENANCE AND CARE

- **Cleaning the Bamboo Frame:** Wipe the bamboo exterior with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals, as these can damage the bamboo finish. Dry thoroughly after cleaning.
- **Washing the Laundry Bag:** The inner fabric laundry bag is removable and washable. Follow the care instructions on the bag's label, typically machine wash cold with similar colors and tumble dry low, or air dry.
- **Storage:** If storing the hamper for an extended period, ensure it is clean and dry. It can be folded flat for compact storage.

6. TROUBLESHOOTING

- **Hamper Deforms When Full:**

Solution: Ensure the reinforced wooden bottom support is correctly seated and the metal ring (if applicable) is properly installed at the top. Avoid overloading the hamper beyond its 100L capacity. Distribute weight evenly.
- **Inner Bag Detaches or Sags:**

Solution: Re-secure the inner bag's top edge around the hamper's rim. Ensure any ties are fastened or the elastic is properly stretched. If the bag is damaged, consider replacing it.

- **Lid Does Not Close Properly:**

Solution: Check if the hamper is overfilled, preventing the lid from seating correctly. Ensure the bamboo frame is fully extended and not warped. The lid is designed to rest on top, not to be hinged.

7. SPECIFICATIONS

Feature	Detail
Brand	tectake
Model Number	No. 401834
Product Dimensions (L x W x H)	53 cm x 33.5 cm x 63 cm
Material	Bamboo (frame), Fabric (liner)
Capacity	100 Liters
Weight	2.6 Kilograms
Special Feature	Space-saving, Foldable, Removable Liner
Number of Compartments	1
Recommended Use	Storing dirty laundry, transporting laundry to washing machine

Note: The product specifications mention "Pelle sintetica" (Synthetic leather) as a material type. This may refer to specific trim elements, while the primary structure is bamboo.

8. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the retailer's return policy or contact tectake customer service directly. Details can typically be found on the official tectake website or through your purchase platform. tectake is a dynamic e-commerce company offering a wide range of products for home, leisure, and various hobbies, known for practical and quality items.