

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Insignia](#) /

› [Insignia 1.2 Cu. Ft. Countertop Microwave Instruction Manual](#)

## Insignia BBYCA10377846

# Insignia 1.2 Cu. Ft. Countertop Microwave

MODEL: BBYCA10377846

Instruction Manual

## Introduction

---

This manual provides essential information for the safe and efficient operation of your Insignia 1.2 Cu. Ft. Countertop Microwave. Please read all instructions carefully before use and retain this manual for future reference. This microwave is designed to simplify cooking with its spacious interior and versatile programmed settings.

## Important Safety Information

---

- Read all instructions before using the appliance.
- Ensure the microwave is properly grounded.
- Do not operate the oven when empty.
- Do not attempt to tamper with, or make adjustments or repairs to the door, control panel, safety interlock switches, or any other part of the oven.
- Always use microwave-safe cookware.
- This microwave features a child-safe lock-out function to prevent unintended operation.

## Setup

---

### 1. Unpacking

Carefully remove all packaging materials from the microwave oven and its interior. Check for any damage. If the oven is damaged, do not operate it and contact customer service.

### 2. Placement

Place the microwave on a flat, stable surface that can support its weight. Ensure there is adequate ventilation around the unit (at least 10 cm / 4 inches of space on the top, back, and sides). Do not block air vents. Keep the microwave away from heat sources and water.

### 3. Turntable Assembly

Place the roller ring in the center of the microwave oven floor. Position the glass turntable securely on top of the roller ring. Ensure the turntable rotates freely.



The interior of the microwave is shown with a pizza on the glass turntable, demonstrating the spacious 1.2 cubic feet capacity.

#### 4. Power Connection

Plug the microwave into a dedicated, properly grounded 3-prong electrical outlet. Do not use extension cords.

### Operating Instructions

---

#### 1. Control Panel Overview

The electronic control panel features an LED display, quick touch preset buttons, number pad, and function buttons for power, cook time, defrost, clock, and timer.



A detailed view of the electronic control panel, displaying the LED screen, quick touch presets for various foods, power level, defrost, and timer buttons.

## 2. Basic Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the door firmly.
3. Enter the desired cooking time using the number pad.
4. Press the 'Power' button to adjust the power level (default is 100%). Press repeatedly to cycle through 11 power levels.
5. Press 'Start' to begin cooking.

## 3. Quick Touch Presets

For convenience, the microwave includes 6 quick touch presets:

- **Pizza:** For reheating pizza slices.
- **Popcorn:** For popping standard microwave popcorn bags.
- **Potato:** For baking potatoes.
- **Frz. Veggie:** For cooking frozen vegetables.
- **Beverage:** For heating drinks.
- **Dinner:** For reheating dinner plates.

Simply press the desired preset button to start cooking with optimized settings.

## 4. Defrosting

The microwave offers two defrost options:

- **Weight Defrost:** Press 'Wgt Def', enter the food's weight, then press 'Start'.
- **Time Defrost:** Press 'Time Def', enter the defrost time, then press 'Start'.

## 5. Clock and Timer

- **Setting the Clock:** Press 'Clock', enter the current time, then press 'Clock' again to confirm.
- **Using the Kitchen Timer:** Press 'Timer', enter the desired time, then press 'Start'. This functions as a countdown timer and does not activate the microwave.

## 6. Child Lock

To activate the child lock, press and hold the 'Stop/Cancel' button for 3 seconds. The display will show a lock indicator. To deactivate, press and hold 'Stop/Cancel' again for 3 seconds.

## Maintenance

---

### 1. Cleaning the Interior

Wipe the interior cavity with a damp cloth after each use. For stubborn stains, use a mild detergent or a microwave-safe cleaner. Do not use abrasive cleaners or scouring pads.

### 2. Cleaning the Exterior

Clean the exterior surfaces with a soft, damp cloth. Avoid getting water into the ventilation openings. The stainless steel finish can be maintained with a specialized stainless steel cleaner.

### 3. Turntable Care

The glass turntable and roller ring can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the microwave.

## Troubleshooting

---

- **Microwave not starting:** Check if the power cord is securely plugged in. Ensure the door is fully closed. Check for blown fuses or tripped circuit breakers.
- **Food not heating:** Verify that the cooking time and power level are set correctly. Ensure the door is closed properly.
- **Turntable not rotating:** Check if the turntable and roller ring are correctly positioned and free from obstructions.
- **Unusual noise:** Ensure the turntable is properly seated. Remove any foreign objects from the microwave cavity.

If problems persist, refer to the warranty and support section for assistance.

## Specifications

---

| Feature                | Specification              |
|------------------------|----------------------------|
| Model Number           | BBYCA10377846              |
| Capacity               | 1.2 Cu. Ft.                |
| Wattage                | 1000 W                     |
| Control Panel Type     | Electronic, Touchscreen    |
| Power Levels           | 11                         |
| Cooking Programs       | 6 (Defrost, Reheat, Cook)  |
| Turntable Diameter     | 12.4 in.                   |
| Dimensions (W x H x D) | 52 cm x 32.57 cm x 40.3 cm |
| Weight                 | 18 kg                      |
| Material               | Stainless Steel            |



This diagram illustrates the microwave's external dimensions: 52 cm width, 32.57 cm height, and 40.31 cm depth.

## Warranty and Support

### Warranty Information

This Insignia microwave oven is covered by a 1-year warranty on parts from the date of purchase. Please retain your proof of purchase for warranty claims.

### Customer Support

For technical assistance, troubleshooting, or warranty service, please contact Insignia Customer Support. Refer to the product packaging or the official Insignia website for current contact information.