

Manuals.plus /

› Indesit /

› Indesit KN1G11S Freestanding Gas Cooker with Electric Grill User Manual

## Indesit KN1G11S

# Indesit KN1G11S Freestanding Gas Cooker with Electric Grill User Manual

Model: KN1G11S | Brand: Indesit

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## INTRODUCTION

---

This manual provides essential information for the safe and efficient use of your Indesit KN1G11S freestanding gas cooker with electric grill. Please read these instructions carefully before installation and use, and keep them for future reference.



**Figure 1:** Indesit KN1G11S Freestanding Gas Cooker. This image shows the complete cooker unit, featuring the gas hob with four burners on top, control knobs on the front panel, and the oven compartment with a glass door below.

## SAFETY INFORMATION

---

Always prioritize safety when operating electrical and gas appliances. Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Refer to this manual. For assistance or additional information, consult a qualified installer, service agency, or the gas supplier.

- Ensure proper ventilation in the kitchen.
- Do not store flammable materials near the appliance.
- Keep children away from the appliance during operation.
- Always use oven mitts when handling hot items.
- In case of a gas leak, turn off the gas supply, open windows, and do not operate electrical switches.

## SETUP AND INSTALLATION

---

### 1. Unpacking

Carefully remove all packaging materials from the cooker. Inspect the appliance for any damage incurred during transit. Report any damage to your retailer immediately. Keep packaging materials away from children.

### 2. Placement

The Indesit KN1G11S is a freestanding cooker with dimensions of approximately 50 x 50 cm. Ensure the appliance is placed on a stable, level surface. Maintain adequate clearance from adjacent walls and cabinets as specified in local regulations and the installation guide (separate document, if provided). Do not install the appliance on a base.

### 3. Gas Connection

**This appliance must be installed by a qualified and registered gas installer.** Ensure the gas supply pressure is compatible with the appliance. The cooker is equipped with safety valves on the gas burners. After connection, check for gas leaks using soapy water; never use an open flame.

### 4. Electrical Connection

The electric grill and oven require an electrical connection. **This connection must be performed by a qualified electrician.** Ensure the voltage and frequency match the appliance's requirements (refer to the rating plate). The appliance must be properly earthed. Do not use extension cords or multiple adapters.

### 5. First Use

Before first use, clean the interior of the oven and the hob with a damp cloth. It is recommended to run the oven at maximum temperature for approximately 30 minutes to burn off any manufacturing residues. A slight odor may be present during this process; ensure adequate ventilation.

## OPERATION

---

### 1. Gas Hob Operation

The hob features 4 gas burners. Each burner is controlled by a dedicated knob on the front panel.

1. **To ignite a burner:** Push and turn the corresponding control knob counter-clockwise to the maximum flame setting.

2. Hold the knob in for a few seconds to allow the safety valve to activate.
3. If the burner does not ignite, release the knob and repeat the process.
4. Adjust the flame size by turning the knob between the maximum and minimum settings.
5. **To turn off a burner:** Turn the knob clockwise to the "off" position.

*Note: The safety valves automatically cut off the gas supply if the flame accidentally extinguishes.*

## 2. Electric Oven and Grill Operation

The oven has a capacity of 50 liters and includes an electric grill function. Oven and grill functions are controlled by separate knobs.

- **Oven Function Selection:** Use the function selector knob to choose the desired cooking mode (e.g., conventional baking, bottom heat).
- **Temperature Setting:** Use the thermostat knob to set the desired oven temperature. The oven indicator light will illuminate when heating and turn off when the set temperature is reached.
- **Electric Grill:** To use the electric grill, select the grill function with the function selector knob. Preheat the grill for approximately 5 minutes with the oven door slightly ajar. Place food on the grill rack in the top position.
- **Timer:** If equipped, use the timer knob to set cooking duration.

*Caution: The oven and grill surfaces become very hot during operation. Use oven mitts and avoid touching hot surfaces.*

## MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your appliance. Always ensure the cooker is cool and disconnected from the power supply before cleaning.

### 1. Cleaning the Hob

The enamelled cooktop and burner components should be cleaned regularly. Remove burner caps and pan supports. Wash them in warm soapy water, rinse, and dry thoroughly. Wipe the enamelled surface with a damp cloth and a mild detergent. Avoid abrasive cleaners or scourers that can damage the enamel.

### 2. Cleaning the Oven Interior

Clean the oven interior after each use once it has cooled down. Use a damp cloth and a non-abrasive oven cleaner. For stubborn stains, follow the instructions of the specific oven cleaner product. Remove oven racks and clean them separately.

### 3. General Care

- Do not use steam cleaners.
- Regularly check the condition of the gas hose (if applicable) and electrical cable.
- Replace any damaged parts only with genuine Indesit spare parts.

## TROUBLESHOOTING

---

Before contacting service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Gas burner does not ignite.	No gas supply, clogged burner, ignition fault.	Check gas supply. Clean burner ports. If problem persists, contact service.
Oven not heating.	No power, incorrect function/temperature setting, faulty heating element.	Check power supply and circuit breaker. Verify settings. If problem persists, contact service.
Uneven cooking in oven.	Incorrect rack position, overloaded oven, faulty thermostat.	Refer to cooking guidelines for rack positions. Avoid overcrowding. Contact service if thermostat is suspected.
Gas smell.	Gas leak.	<b>Immediately turn off gas supply, open windows, do not operate electrical switches, and contact emergency services/gas supplier.</b>

If you are unable to resolve an issue, do not attempt repairs yourself. Contact a qualified service technician.

## TECHNICAL SPECIFICATIONS

---

**Model:** KN1G11S

**Brand:** Indesit

**Type:** Freestanding Gas Cooker with Electric Grill

**Dimensions (W x D):** Approximately 50 x 50 cm

**Hob:** 4 Gas Burners with Safety Valves

**Oven Capacity:** 50 Liters

**Oven Fuel Type:** Electric

**Grill Type:** Electric Grill

**Controls:** Knobs

**Item Weight:** 75 kg

**ASIN:** B01F64U7KC

**Manufacturer Model Number:** 121613

## WARRANTY AND CUSTOMER SUPPORT

---

Your Indesit KN1G11S cooker is covered by a manufacturer's warranty. Please refer to the separate warranty document provided with your purchase for specific terms and conditions, including warranty period and coverage details. Keep your proof of purchase for warranty claims.

For technical assistance, spare parts, or to schedule a service appointment, please contact Indesit customer support. Contact details can typically be found on the Indesit official website or in your warranty documentation.