

Signature Design by Ashley 2780125

Signature Design by Ashley Tambo Faux Leather Manual Rocker Recliner User Manual

Model: 2780125

1. SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- Handle all components with care during unpacking and assembly.
- Assembly requires a screwdriver (not included). Ensure proper tools are used to prevent damage or injury.
- Keep small parts away from children to avoid choking hazards.
- Do not stand on the recliner or use it as a step stool.
- Ensure the recliner is placed on a level surface to prevent tipping.
- Keep hands and feet clear of the reclining mechanism during operation.

2. PRODUCT OVERVIEW

The Signature Design by Ashley Tambo Manual Rocker Recliner offers comfort and functionality with its plush cushions and manual reclining feature. This recliner is designed for indoor use in living room settings.



Image 2.1: Front view of the Tambo Manual Rocker Recliner in gray.

Key Features:

- **Manual Reclining Motion:** Activated by a pull tab for easy adjustment.
- **Rocker Function:** Allows for gentle back-and-forth motion.
- **Faux Leather Upholstery:** Durable and easy to maintain.
- **Plush Cushions:** Designed for comfort with foam fill.
- **Sturdy Frame:** Corner-blocked construction for stability.

3. ASSEMBLY AND SETUP

Minor assembly is required. Follow these steps to set up your recliner:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components are present.
2. **Attach Chair Back:** Align the chair back with the base. Slide the back onto the metal brackets on the base until it clicks securely into place. You may need a screwdriver to tighten any pre-drilled screws if applicable (screwdriver not included).
3. **Verify Connection:** Gently lift the chair back to ensure it is firmly attached and does not wobble.
4. **Position Recliner:** Place the recliner in your desired location, ensuring there is at least 12 inches of clearance from the wall for full recline.



FULL ASSEMBLED: 41" W x 41" D x 41" H

Seat depth: 22"
 Seat height: 21"
 Distance between arms: 18"
 Distance between recliner and wall: 12"

Reclined footrest height: 19"
 Fully reclined length: 67"
 Minimum width of doorway for delivery: 32"
 Arm height: 26"
 Top of cushion to top of back: 21"



Image 3.1: Product dimensions for setup planning. Fully assembled: 41"W x 41"D x 41"H. Minimum doorway width for delivery: 32". Distance between recliner and wall: 12".

4. OPERATING INSTRUCTIONS

Reclining Function:

To recline the chair, locate the pull tab on the side of the recliner. Pull the tab firmly to release the footrest and lean back to your desired reclining position. The chair offers multiple reclining positions.



Image 4.1: Detail of the manual pull tab mechanism on the side of the recliner.

To return to the upright position, gently push down on the footrest with your legs until it locks into place. The backrest will simultaneously return to its upright position.



AVAILABLE IN TWO COLORS



Image 4.2: The recliner shown in a partially reclined state with the footrest extended.

Rocker Function:

When the recliner is in the upright position, it functions as a rocker. Gently push back and forth with your feet to initiate the rocking motion.

5. CARE AND MAINTENANCE

Proper care will extend the life of your recliner. Follow these guidelines:

- **General Cleaning:** Dust regularly with a soft, dry cloth.
- **Spot Cleaning:** For spills, blot immediately with a clean, dry cloth. Do not rub. For stubborn stains, use a mild, water-free cleaning solvent or a professional upholstery cleaning service. Always test a small, inconspicuous area first.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading and deterioration of the faux leather upholstery.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, strong detergents, or silicone-based products, as these can damage the finish.
- **Mechanism Maintenance:** Periodically check and tighten any loose screws. Avoid forcing the

reclining mechanism if it feels stiff; check for obstructions.



Image 5.1: Close-up view of the faux leather upholstery, highlighting its texture.

6. TROUBLESHOOTING

If you encounter issues with your recliner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Recliner does not recline or footrest does not extend.	Pull tab not fully engaged; obstruction in mechanism; back not fully attached.	Ensure pull tab is fully pulled. Check for objects under or behind the footrest. Verify the chair back is securely clicked into place.
Recliner wobbles or feels unstable.	Loose connections; uneven floor.	Check all assembly connections and tighten screws if necessary. Ensure the recliner is on a level surface.

Problem	Possible Cause	Solution
Squeaking noise during rocking or reclining.	Friction in moving parts; loose bolts.	Apply a small amount of silicone-based lubricant to moving metal parts (avoiding upholstery). Tighten any visible bolts.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Signature Design by Ashley
Model Name	2780125
Color	Grey
Product Dimensions (D x W x H)	41"D x 41"W x 41"H
Seat Depth	22 inches
Seat Height	21 Inches
Back Style	Tight Back
Arm Style	Pillow-Top
Fill Material	Foam
Maximum Weight Recommendation	283.6 Kilograms (approx. 625 lbs)
Item Weight	89.3 pounds
Furniture Base Movement	Rock
Reclining Position Count	2 (Upright and Reclined)

8. WARRANTY INFORMATION

This product is covered by the manufacturer's limited warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty documentation included with your purchase or visit the official Signature Design by Ashley website. Keep your proof of purchase for warranty claims.

9. CUSTOMER SUPPORT

For further assistance, parts replacement, or to report any issues not covered in this manual, please contact Signature Design by Ashley customer service. You can typically find contact information on the manufacturer's website or on your purchase receipt.

Online Resources: Visit the official Signature Design by Ashley website for FAQs, product registration, and additional support.

Contact Information: Refer to your product packaging or the brand's official website for the most current

contact details (phone number, email, or support portal).

© 2024 Signature Design by Ashley. All rights reserved.