

Beyution XRT500

Beyution XUMO XRT500 TV Remote Control with Keyboard User Manual

Model: XRT500

INTRODUCTION

This manual provides comprehensive instructions for the Beyution XUMO XRT500 TV Remote Control with Keyboard. This dual-sided remote is designed to enhance your control over compatible Vizio TV models, featuring standard TV controls on one side and a full QWERTY keyboard on the reverse for easier text input.

Compatibility

The XUMO XRT500 remote control is compatible with the following Vizio TV models:

- M43-C1, M43C1
- M49-C1, M49C1
- M50-C1, M50C1
- M55-C2, M55C2
- M60-C3, M60C3
- M65-C1, M65C1
- M70-C3, M70C3
- M75-C1, M75C1
- M80-C3, M80C3
- M322I-B1, M322IB1
- M422I-B1, M422IB1
- M492I-B2, M492IB2
- M502I-B1
- M552I-B2, M552IB2
- M602I-B3, M602IBE
- M652I-B2, M652IB2
- M702I-B3, M702IB3

- P502UI-B1, P502UIB1, P502UI-B1E
- P552UI-B2, P552UIB2
- P602UI-B3, P602UIB3
- P652UI-B2, P652UIB2
- P702UI-B3, P702UIB3
- RS65-BL, RS65BL

SETUP

Battery Installation

The remote control requires batteries for operation. No programming is needed; simply insert new batteries, and the remote will be ready for use with your compatible Vizio TV.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover open in the direction indicated by the arrow (if present).
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.



Image 1: The Beyution XUMO XRT500 remote control, displaying its primary TV control side on the left and the full QWERTY keyboard on the right. This image illustrates the dual-sided design of the remote.

OPERATING INSTRUCTIONS

The XUMO XRT500 remote control features two distinct sides for different functionalities: a standard TV control side and a QWERTY keyboard side.

Front Side: TV Controls

This side provides all essential functions for navigating your Vizio TV.

- **INPUT:** Select video input sources.
- **POWER ():** Turn the TV on or off.
- **XUMO, NETFLIX, iHeart Radio:** Dedicated buttons for quick access to these streaming services.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop):** Control media playback.
- **CC (Closed Caption):** Toggle closed captions on or off.
- **MENU:** Access the TV's main menu.
- **EXIT:** Exit current menu or screen.
- **INFO:** Display information about the current program or input.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigate menus and confirm selections.
- **BACK:** Return to the previous screen or menu.
- **GUIDE:** Access the TV program guide.
- **VOL (Volume Up/Down):** Adjust the TV volume.
- **CH (Channel Up/Down):** Change TV channels.
- **MUTE ():** Mute or unmute TV audio.
- **PIC (Picture Mode):** Cycle through picture modes.
- **Numeric Keypad (0-9):** Directly enter channel numbers or other numerical inputs.
- **ENTER:** Confirm selections or input.

Reverse Side: QWERTY Keyboard

Flip the remote over to access the full QWERTY keyboard, ideal for searching, browsing, and entering text in smart TV applications.

- **Alphabetical Keys (A-Z):** Standard QWERTY layout for text input.
- **Numeric Keys (0-9):** Integrated within the keyboard for number entry.
- **CAPS SHIFT:** Toggle capitalization for letters.
- **ALT:** Access alternative characters or symbols.
- **TAB:** Move between input fields.
- **SPACE:** Insert a space.
- **ENTER:** Confirm text input or selection.
- **DEL (Delete):** Delete characters.
- **Directional Arrows:** Navigate within text fields or menus.
- **Special Characters:** Access symbols like @, #, \$, %, &, *, (,), -, =, +, etc.
- **.COM:** Quick access for web addresses.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure fresh batteries are correctly installed with proper polarity (+/-).
 - Point the remote directly at the TV's IR receiver.
 - Remove any obstructions between the remote and the TV.
 - Test the remote with another compatible Vizio TV if available to rule out a TV issue.
- **Keyboard not working:**
 - Ensure the remote is flipped to the keyboard side.

- Some smart TV applications may not fully support external keyboard input.
 - Check if the TV's Bluetooth or Wi-Fi (if applicable for keyboard function) is enabled and connected. (Note: This remote is IR, but some Vizio TVs might have specific requirements for keyboard input).
- **Specific buttons not working:**
 - Clean the remote's surface and buttons to ensure no debris is interfering.
 - If only certain buttons fail, it might indicate internal damage or wear.

SPECIFICATIONS

Model	XRT500
Brand	Beyution (Compatible with Vizio TVs)
Dimensions	Approximately 7 x 5 x 2 inches
Item Weight	Approximately 3 ounces
Color	Black
Special Feature	Ergonomic, Dual-sided (TV controls + QWERTY keyboard)
Power Source	2 x AAA Batteries (not included)
Connectivity	Infrared (IR)

WARRANTY AND SUPPORT

For any questions or issues regarding your Beyution XUMO XRT500 remote control, please contact the seller or manufacturer directly. Specific warranty details may vary and are typically provided at the point of purchase or by the seller.

Refer to your purchase documentation for contact information or visit the seller's support page.