

[Manuals.plus](#) /

› [Ariete](#) /

› Ariete 1342/04-Green Vintage Overflow Coffee Maker Instruction Manual

## Ariete CoffeeMaker\_Green

# Ariete Vintage Overflow Coffee Maker Instruction Manual

Model: 1342/04-Green (CoffeeMaker\_Green)

Brand: Ariete

## INTRODUCTION

Welcome to your new Ariete Vintage Overflow Coffee Maker. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.



Front view of the Ariete Vintage Overflow Coffee Maker, showcasing its green and silver design with the control panel and glass carafe.

## IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Always use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for repair.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off", then remove the plug from the wall outlet.
- Do not use the appliance for other than its intended use.
- The carafe is designed for use with this appliance only. It must never be used on a range top.
- Do not place a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean the carafe with cleansers, steel wool pads, or other abrasive material.
- Scalding may occur if the lid is removed during the brewing cycle.

## PRODUCT COMPONENTS

Familiarize yourself with the parts of your Ariete Vintage Overflow Coffee Maker:

MOD. 1342

# MACCHINA da CAFFÈ' AMERICANO VINTAGE

IL VERO CAFFÈ AMERICANO DIRETTAMENTE A CASA  
TUA



12 TAZZE



FILTRO  
RIMOVIBILE



DISPLAY  
LCD



This diagram illustrates key features of the coffee maker, including its 12-cup capacity, removable filter, and integrated LCD display for easy programming.

- **Water Reservoir:** Located at the top, for filling with water.
- **Filter Basket:** Holds the coffee grounds and reusable filter.
- **Glass Carafe:** Collects the brewed coffee, with a capacity of up to 12 cups.
- **Control Panel:** Features buttons for power, auto-brew, hour, and minute settings, along with an LCD display.
- **Heating Plate:** Keeps the carafe warm after brewing.
- **Removable Filter:** A reusable filter for coffee grounds, eliminating the need for paper filters.

## INITIAL SETUP

Before using your coffee maker for the first time, follow these steps:

1. Unpack the coffee maker and remove all packaging materials, including any protective films or inserts.
2. Clean the glass carafe and the removable filter basket with warm, soapy water. Rinse thoroughly under running water.
3. Wipe the exterior of the coffee maker with a soft, damp cloth. Do not immerse the unit in water.

4. Perform a "cleaning brew" without coffee: Fill the water reservoir to the maximum level. Place the empty filter basket and the carafe in their positions. Run a full brewing cycle. Discard the water after the cycle is complete. Repeat this process once or twice to ensure the system is clean.

## OPERATING INSTRUCTIONS

### Brewing Coffee

1. Open the top lid of the coffee maker.
2. Fill the water reservoir with fresh, cold water to the desired level, indicated by the cup markings (up to 12 cups).
3. Place the reusable filter into the filter basket. If preferred, you may use a standard paper filter instead.
4. Add the desired amount of ground coffee to the filter. A general guideline is one tablespoon of ground coffee per cup, but adjust to your personal taste.
5. Close the top lid securely.
6. Place the empty glass carafe onto the heating plate, ensuring it is centered.
7. Plug the power cord into a standard electrical outlet.
8. Use the control panel buttons (AUTO, HR, MIN) to set the current time or program a delayed start if desired.
9. Press the "Start" or "Brew" button to begin the brewing cycle. The coffee maker will automatically brew and then keep the coffee warm on the heating plate.



The Ariete coffee maker with a full carafe of freshly brewed coffee, ready to be served.

### Programming Auto-Brew

To program the coffee maker to start brewing at a specific time:

1. Ensure the current time is set correctly on the LCD display using the HR and MIN buttons.
2. Prepare the coffee maker with water and coffee grounds as described in the "Brewing Coffee" section.
3. Press the "AUTO" button. The display will show a flashing time.
4. Use the HR and MIN buttons to set the desired future brew time.
5. Press the "AUTO" button again to confirm the programmed time. The indicator light will illuminate, signifying that the auto-brew function is active.
6. The coffee maker will automatically start brewing at the set time.

## **MAINTENANCE AND CLEANING**

### **Daily Cleaning**

1. Always unplug the coffee maker from the electrical outlet before cleaning.
2. Remove the filter basket and glass carafe. Wash them in warm, soapy water. Rinse thoroughly and dry completely. These parts are generally top-rack dishwasher safe, but hand washing is recommended for longevity.
3. Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the finish.



A hand washing the reusable coffee filter under running water, demonstrating proper cleaning of the filter basket.

## Descaling

Mineral deposits from water can build up over time, affecting the performance and taste of your coffee. Descale your coffee maker every 2-3 months, or more frequently if you have hard water.

1. Fill the water reservoir with a mixture of white vinegar and water (1:2 ratio, e.g., 1 cup vinegar to 2 cups water).
2. Place the empty carafe on the heating plate.
3. Run a full brewing cycle with the vinegar solution.
4. After the cycle is complete, let the mixture sit in the carafe for 15-20 minutes to allow the vinegar to work on any remaining deposits.
5. Discard the vinegar mixture and rinse the carafe and filter basket thoroughly.
6. Run 2-3 full brewing cycles with fresh, clean water to remove any residual vinegar taste or odor.

## TROUBLESHOOTING GUIDE

If you encounter issues with your coffee maker, consult the table below for common problems and their solutions:

Problem	Possible Cause	Solution
Coffee does not brew.	Appliance not plugged in; Water reservoir empty; Brew button not pressed.	Ensure the coffee maker is securely plugged into a working outlet; Fill the water reservoir to the desired level; Press the brew/start button.
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio; Grind size is too coarse/fine.	Adjust the amount of coffee grounds used per cup; Use a medium grind for optimal extraction.
Coffee overflows from the filter basket.	Too much coffee grounds; Filter clogged; Carafe not properly placed.	Reduce the amount of coffee grounds; Clean the reusable filter thoroughly; Ensure the carafe is centered on the heating plate.
Coffee maker leaks.	Water reservoir overfilled; Carafe not positioned correctly; Component not seated properly.	Do not exceed the maximum fill line for the water reservoir; Ensure the carafe is fully inserted and centered; Check that the filter basket and lid are correctly seated.

## PRODUCT SPECIFICATIONS

- **Brand:** Ariete
- **Model:** 1342/04-Green (CoffeeMaker\_Green)
- **Type:** Drip Coffee Machine
- **Color:** Green
- **Filter Type:** Reusable
- **Included Components:** Carafe
- **Operation Mode:** Semi-Automatic
- **Human Interface Input:** Buttons
- **Product Dimensions:** 8.27 x 9.25 x 13.58 inches
- **Item Weight:** 6.38 pounds
- **Power:** 2000W
- **Capacity:** 12-Cup

## WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the warranty card included with your product packaging. It is recommended to keep your purchase receipt as proof of purchase for any warranty claims. For further assistance, you may visit the official Ariete website or contact their customer service department directly. Contact details are typically provided in the product documentation or on the manufacturer's website.