

[Manuals.plus](#) /

› [MOB – MOBILITY ON BOARD](#) /

› MOB Mushroom Bluetooth Waterproof Speaker User Manual

## MOB – MOBILITY ON BOARD MUSH-BL

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

[Submit question](#)

## MOB Mushroom Bluetooth Waterproof Speaker User Manual

Model: MUSH-BL

### INTRODUCTION

---

Thank you for purchasing the MOB Mushroom Bluetooth Waterproof Speaker. This compact and versatile speaker is designed to provide high-quality audio and hands-free calling in various environments, including wet conditions. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.

### SAFETY INFORMATION

---

- Do not expose the speaker to extreme temperatures or direct sunlight for prolonged periods.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. This will void the warranty.

- Ensure the charging port cover is securely closed when using the speaker in wet environments to maintain its waterproof integrity.
- Keep out of reach of children.
- Use only the provided charging cable or a certified equivalent.

## PACKAGE CONTENTS

---

Please check the package for the following items:

- MOB Mushroom Bluetooth Waterproof Speaker (Blue)
- USB Charging Cable
- User Manual

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your MOB Mushroom Speaker.



**Figure 1:** Front view of the MOB Mushroom Bluetooth Speaker. It features a vibrant blue mushroom cap, a grey speaker grille, and a base with two small, dark eyes, giving it a playful appearance.



**Figure 2:** Rear view of the MOB Mushroom Bluetooth Speaker. This image highlights the "MOB MOBILITY ON BOARD" logo on the blue cap and the micro-USB charging port located at the bottom of the grey base, which is protected by a waterproof cover.

### **Controls and Indicators:**

- **Power Button:** Located on the speaker's base (often integrated with the charging port area). Press and hold to turn on/off.
- **Microphone:** Integrated for hands-free calling.
- **Charging Port:** Micro-USB port for charging the device.
- **LED Indicator:** (Location may vary) Indicates power status, charging status, and Bluetooth pairing mode.
- **Suction Cup:** Located at the bottom for attaching to smooth surfaces.

## **SETUP**

---

## 1. Charging the Speaker:

1. Connect the micro-USB end of the charging cable to the speaker's charging port.
2. Connect the USB-A end to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will typically show red during charging and turn off or change color when fully charged.
4. A full charge takes approximately 2-3 hours.

## 2. Powering On/Off:

- **To Power On:** Press and hold the Power button for a few seconds until you hear an audible prompt or the LED indicator lights up.
- **To Power Off:** Press and hold the Power button again for a few seconds until you hear an audible prompt or the LED indicator turns off.

---

## OPERATING

### 1. Bluetooth Pairing:

1. Ensure the speaker is powered on and in pairing mode (LED indicator may flash blue rapidly).
2. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings.
3. Search for available devices. You should see "MUSH-BL" or a similar name (e.g., "MOB Speaker") in the list.
4. Select the speaker to pair. Once successfully paired, you will hear a confirmation sound, and the LED indicator will typically turn solid blue or flash slowly.
5. The speaker will automatically connect to the last paired device when powered on, if the device's Bluetooth is active and within range.



**Figure 3:** The MOB Mushroom speaker highlighting its key features: hands-free calling, powerful sound output, Bluetooth stereo connectivity, and a 3-hour battery autonomy.

## 2. Playing Audio:

- Once paired, play music or any audio from your connected device. The sound will be output through the speaker.
- Volume control is typically managed directly from your connected device.

## 3. Hands-Free Calling:

- When a call comes in while connected, the speaker will ring.
- To answer a call: (Specific button action not provided, but usually a short press on the power/multi-function button).
- To end a call: (Specific button action not provided, but usually a short press on the power/multi-function button).
- The integrated microphone allows for clear communication.

## 4. Using the Suction Cup:

- The suction cup on the base allows you to attach the speaker to smooth, flat surfaces like glass, tiles, or the back of a smartphone/tablet.
- Ensure the surface is clean and dry for optimal suction.
- Press the speaker firmly against the surface to create a vacuum seal.



**Figure 4:** The blue MOB Mushroom speaker demonstrating its suction cup functionality, securely attached to the back of a gold-colored smartphone. This allows the speaker to act as a stand or be mounted on various smooth surfaces.

## MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place.
- **Waterproof Care:** Always ensure the charging port cover is sealed tightly when using the speaker near water. After use in wet conditions, dry the speaker thoroughly before charging.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is low or depleted.	Charge the speaker fully.

Problem	Possible Cause	Solution
Cannot pair with Bluetooth device.	Speaker is not in pairing mode; Device's Bluetooth is off; Speaker is too far from device.	Ensure speaker is in pairing mode; Turn on Bluetooth on your device; Move speaker closer to device (within 10 meters).
No sound or low volume.	Volume on connected device is too low; Speaker is not connected.	Increase volume on your device; Re-pair the speaker with your device.
Sound distortion.	Volume is too high; Device is too far from speaker.	Lower the volume on your device; Move speaker closer to device.

## SPECIFICATIONS

---

- **Model:** MUSH-BL
- **Connectivity:** Bluetooth
- **Bluetooth Range:** Up to 10 meters (33 feet)
- **Speaker Output:** 3 Watts
- **Battery:** 280mAh Lithium-ion (rechargeable)
- **Battery Life:** Up to 3 hours
- **Charging Time:** Approximately 2-3 hours
- **Waterproof Rating:** Yes (specific IP rating not provided, but stated as waterproof)
- **Dimensions (L x W x H):** 16 x 17 x 15 cm (6.3 x 6.7 x 5.9 inches)
- **Weight:** 70 grams (2.47 ounces)
- **Included Components:** Bluetooth Speaker, USB Charging Cable

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official MOB – MOBILITY ON BOARD website. Keep your purchase receipt as proof of purchase for any warranty claims.

**Manufacturer:** MOB

**Brand:** MOB – MOBILITY ON BOARD

**Website:** [MOB Official Store on Amazon](#) (Note: This link leads to the brand's store on Amazon, not a direct support site. Users should check packaging for direct support.)

