



Manuals.plus /

› Samsung /

› Samsung DD61-00228A Holder-Nozzle Instruction Manual

Samsung DD61-00228A

Samsung DD61-00228A Holder-Nozzle Instruction Manual

1. PRODUCT OVERVIEW

The Samsung DD61-00228A is an Original Equipment Manufacturer (OEM) authorized holder-nozzle designed as a replacement part for various Samsung brand appliances. This component is crucial for the proper functioning of the appliance, typically involved in securing or directing water flow or other internal mechanisms.

2. SAFETY INFORMATION

WARNING: Always disconnect power to the appliance before attempting any installation, maintenance, or repair. Failure to do so can result in serious injury or death.

- Ensure the appliance is completely unplugged or the circuit breaker is turned off before beginning work.
- Wear appropriate personal protective equipment, such as gloves and eye protection.
- If you are unsure about any step, consult a qualified appliance repair technician.
- Keep small parts away from children.

3. INSTALLATION INSTRUCTIONS

This section provides general guidance for installing the DD61-00228A holder-nozzle. Specific steps may vary depending on your appliance model. Always refer to your appliance's service manual for detailed instructions.

1. **Prepare the Appliance:** Ensure the appliance is disconnected from its power source. Turn off any water supply if applicable.
2. **Access the Component:** Carefully open or disassemble the necessary parts of your appliance to gain access to the existing holder-nozzle. This may involve removing panels, racks, or other components.
3. **Remove the Old Part:** Identify the old DD61-00228A holder-nozzle. Note its orientation and how it is secured. Gently detach any clips, screws, or connections holding it in place.

4. **Install the New Part:** Position the new Samsung DD61-00228A holder-nozzle in the exact location and orientation as the old one. Secure it using the original fasteners or clips. Ensure all connections are firm and properly seated.
5. **Reassemble:** Carefully reassemble any parts of the appliance that were removed. Double-check that all components are correctly installed and secured.
6. **Restore Power:** Once reassembly is complete and verified, restore power to the appliance. Test the appliance to ensure the new part functions correctly.

4. OPERATING FUNCTION

The DD61-00228A holder-nozzle is a passive component designed to hold another part in place or direct fluid within the appliance. Its operation is integral to the overall system, ensuring that other moving or fluid-carrying parts are correctly positioned and function as intended. No direct user interaction is required for the operation of this specific part once installed.

5. MAINTENANCE

Regular maintenance of the DD61-00228A holder-nozzle is generally not required beyond periodic inspection during other appliance servicing. If accessible, you may:

- **Inspect for Wear:** Check for any visible signs of wear, cracks, or damage to the plastic or metal components.
- **Clean:** If the part is exposed to water or debris, gently clean it with a soft cloth and mild detergent. Ensure no residue is left behind.
- **Check for Secureness:** Verify that the holder-nozzle remains firmly in its installed position.

If any damage or excessive wear is observed, replacement of the part may be necessary.

6. TROUBLESHOOTING

If you encounter issues after installing the DD61-00228A holder-nozzle, consider the following:

- **Part Does Not Fit:** Double-check that the DD61-00228A is the correct part number for your specific Samsung appliance model. Refer to your appliance's owner's manual or service manual for compatibility.
- **Appliance Malfunction After Installation:**
 - Ensure all connections are secure and the part is correctly seated.
 - Verify that no other components were dislodged or damaged during the installation process.
 - Confirm that power and water supplies (if applicable) are fully restored.
- **Persistent Issues:** If problems persist, it may indicate an issue with another component of the appliance or an incorrect installation. It is recommended to consult a professional appliance repair technician.

7. SPECIFICATIONS

Brand Name:

Samsung

Model Info:

DD61-00228A

Item Weight:

0.317 ounces

Product Dimensions:

1 x 1 x 1 inches

Part Number:

DD61-00228A

Included Components:

Appliance Parts & Accessories, Appliance Replacement Parts

8. WARRANTY AND SUPPORT

This Samsung DD61-00228A holder-nozzle is an OEM authorized part. For information regarding warranty coverage, please refer to the documentation provided with your original appliance or contact Samsung customer support directly. Keep your purchase receipt as proof of purchase.

For technical assistance or further inquiries, please visit the official Samsung support website or contact their customer service line.

9. MEDIA RESOURCES

No product images or official videos are available for this specific part in the provided data. For visual reference, please consult your appliance's service manual or diagrams.