

## LAMAX SENTINELSE1

# LAMAX BEAT Sentinel SE-1 Mobile Bluetooth Outdoor Speaker User Manual

Model: SENTINELSE1 | Brand: LAMAX

## 1. INTRODUCTION

The LAMAX BEAT Sentinel SE-1 is a versatile mobile Bluetooth outdoor speaker designed for robust performance and portability. It features Bluetooth connectivity, an integrated FM radio, an SD card slot for MP3 playback, a hands-free function, a built-in flashlight, and can even serve as a power bank. Its durable, splash-proof, and dust-resistant design makes it suitable for various outdoor activities. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.

## 2. PRODUCT OVERVIEW

### 2.1 Key Features

- Bluetooth connectivity with up to 6 hours of runtime.
- Can be used as a power bank for charging other devices.
- Hands-free function for calls.
- Built-in flashlight for illumination.
- Integrated MP3 player via SD card slot.
- FM radio for listening to broadcasts.
- Outdoor design resistant to dust and water splashes.

### 2.2 Package Contents

- LAMAX BEAT Sentinel SE-1 Speaker Unit
- Carabiner
- USB Charging Cable
- User Manual

2.3 Device Layout



Figure 1: Angled view of the LAMAX BEAT Sentinel SE-1 speaker, highlighting the top control buttons.



Figure 2: Rear view of the speaker, illustrating the protective cover for the AUX, DC IN (charging), and ON/OFF switch.



Figure 3: Side view of the speaker, featuring the built-in flashlight.

## 3. SETUP

### 3.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied USB charging cable to the DC IN port located under the protective rubber cover on the rear of the speaker (refer to Figure 2). Connect the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator will illuminate, typically red, and turn off or change color when fully charged. A full charge provides up to 6 hours of playback.

### 3.2 Powering On/Off

To power on or off the speaker, locate the ON/OFF switch under the protective rubber cover on the rear of the device (refer to Figure 2). Slide the switch to the 'ON' position to power on, and to 'OFF' to power off.

### 3.3 Bluetooth Pairing

1. Ensure the speaker is powered on. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select 'LAMAX Sentinel SE-1' from the list of devices.
4. Once paired, the speaker will emit a confirmation sound, and the LED indicator will stop flashing and remain solid.

### 3.4 SD Card Insertion

To play music from an SD card, gently insert a microSD card (with MP3 files) into the SD card slot, usually located near the charging port under the protective cover. The speaker will automatically switch to SD card playback mode.

### 3.5 AUX Connection

For wired audio playback, connect one end of a 3.5mm audio cable (not included) to the AUX port on the speaker (under the protective cover) and the other end to the audio output of your device. The speaker will automatically switch to AUX mode.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Basic Controls

The top panel of the speaker features control buttons (refer to Figure 1):

- **Play/Pause Button:** Press to play or pause music.
- **Volume Up (+):** Press to increase volume. Long press to skip to the next track/station.
- **Volume Down (-):** Press to decrease volume. Long press to skip to the previous track/station.
- **Mode Button (M):** Press to switch between Bluetooth, FM Radio, and SD Card modes.

### 4.2 Bluetooth Mode

After successful pairing (Section 3.3), you can stream audio wirelessly from your connected device. Use the Play/Pause, Volume, and Track Skip buttons on the speaker or your device to control playback.

### 4.3 FM Radio Mode

1. Press the **Mode (M)** button to switch to FM Radio mode.
2. Long press the **Play/Pause** button to automatically scan and save available FM stations.
3. Use the **Volume Up (+)** and **Volume Down (-)** buttons (long press) to navigate between saved stations.

### 4.4 SD Card Playback

Once an SD card with MP3 files is inserted, the speaker will automatically begin playback. Use the **Play/Pause**, **Volume**, and **Track Skip** buttons to control your music.

### 4.5 Hands-free Function

When connected via Bluetooth to a smartphone, the speaker can be used for hands-free calls:

- **Answer Call:** Press the **Play/Pause** button once.
- **End Call:** Press the **Play/Pause** button once during a call.
- **Reject Call:** Long press the **Play/Pause** button.

### 4.6 Flashlight Function

The built-in flashlight (refer to Figure 3) can be activated by a dedicated button or switch, typically located near the flashlight itself. Consult the physical device for the exact control mechanism.

### 4.7 Power Bank Function

To use the speaker as a power bank, connect your mobile device's charging cable to the USB output port on the speaker (if available, typically under the protective cover). The speaker's internal battery will then provide power to charge your device.

## 5. MAINTENANCE

### 5.1 Cleaning

Wipe the speaker with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used. Do not use harsh chemicals, abrasive cleaners, or solvents, as these can damage the surface and internal components. Ensure all ports are dry before use or charging.

### 5.2 Storage

When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to charge the battery periodically (e.g., every 3 months) to maintain battery health.

### 5.3 Water and Dust Resistance

The LAMAX BEAT Sentinel SE-1 is designed to be resistant to dust and water splashes. However, it is not fully waterproof. Do not submerge the speaker in water. Ensure the protective rubber cover for the ports is securely closed to maintain its resistance properties.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted. Power switch is off.	Charge the speaker. Ensure the ON/OFF switch is in the 'ON' position.
No sound.	Volume is too low. Device not connected. Incorrect mode selected.	Increase speaker and device volume. Re-pair Bluetooth or check AUX connection. Press 'M' button to select correct mode.
Bluetooth pairing fails.	Speaker not in pairing mode. Device Bluetooth off. Too far from speaker.	Ensure speaker is on and flashing. Enable Bluetooth on your device. Move device closer to speaker (within 10m).
Poor FM radio reception.	Weak signal. Environmental interference.	Relocate the speaker to an area with better reception. Re-scan for stations.
SD card not playing.	Card not inserted correctly. Unsupported file format. Corrupted card.	Re-insert SD card. Ensure files are MP3 format. Try a different SD card.

## 7. SPECIFICATIONS

Feature	Specification
Brand	LAMAX
Model Number	SENTINELSE1

Feature	Specification
Connectivity Technology	Bluetooth, USB, Radiofrequency
Wireless Communication Technology	Bluetooth
Audio Output Mode	Stereo
Maximum Speaker Output Power	10 Watt
Wattage	10 watts
Battery Type	1 Lithium-polymer battery (included)
Battery Life (Runtime)	Up to 6 hours
Product Dimensions	18.7 x 5.6 x 6.2 cm
Item Weight	390 g
Special Features	Wireless, Portable, FM Radio, SD Card Slot, Power Bank Function, Flashlight, Hands-free
Compatible Devices	MP3 Player, Bluetooth-enabled devices
Mounting Type	Tabletop Mount
Manufacturer	True Electronics GmbH

## 8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official LAMAX website. Keep your proof of purchase for warranty claims.



© 2023 LAMAX. All rights reserved.

**Related Documents - SENTINELSE1**

	<p><a href="#">LAMAX WatchY4 Plus User Manual and Operating Instructions</a></p> <p>Comprehensive guide to operating and setting up the LAMAX WatchY4 Plus smartwatch, including charging, SIM card installation, app connection, functions, and technical specifications.</p>
	<p><a href="#">LAMAX W10.1 Action Camera Quick Start Guide</a></p> <p>Get started quickly with your LAMAX W10.1 action camera. This guide covers package contents, camera controls, initial setup including microSD card and charging, and WiFi app connection.</p>
	<p><a href="#">LAMAX WatchY4 Play Operating Instructions</a></p> <p>Comprehensive operating instructions for the LAMAX WatchY4 Play, covering charging, setup, features, and technical specifications. Includes guidance on SIM card insertion, app installation, and device usage.</p>
	<p><a href="#">LAMAX WatchY2 Quick Start Guide</a></p> <p>A quick start guide for the LAMAX WatchY2, detailing setup, SIM card installation, app connection, and basic device settings.</p>
	<p><a href="#">LAMAX X7 Mira Action Camera User Manual - Features, Specs, and Operation</a></p> <p>Comprehensive user manual for the LAMAX X7 Mira Action Camera. Discover its features, waterproof capabilities, Full HD video, 12 MP photos, WiFi connectivity, and detailed operating instructions.</p>



[LAMAX WatchY4 Play Operating Instructions and User Guide](#)

Comprehensive operating instructions for the LAMAX WatchY4 Play smartwatch. Learn about charging, setup, SIM card insertion, app integration, key features like SOS calls and video calls, water resistance, and technical specifications.