



Manuals.plus /

› CANDY /

› CANDY Tumble Dryer Fluff & Lint Filter Instruction Manual

CANDY 09201136

CANDY Tumble Dryer Fluff & Lint Filter Instruction Manual

Model: 09201136

1. INTRODUCTION

This instruction manual provides essential information for the proper installation, operation, and maintenance of your CANDY Tumble Dryer Fluff & Lint Filter, Original Code 09201136. This filter is a crucial component for the efficient and safe operation of your tumble dryer, designed to capture lint and fluff from your laundry. Regular maintenance of this filter ensures optimal drying performance and helps prevent potential hazards.

This is an original replacement part provided by the manufacturer, ensuring compatibility and performance with your Candy appliance.

2. SAFETY INFORMATION

Important Safety Precautions:

- Always disconnect the tumble dryer from the power supply before attempting any installation, cleaning, or maintenance.
- Exercise caution when handling appliance parts.
- If you are unsure about any repair or installation procedure, it is recommended to consult a qualified technician.
- Repairs to gas appliances must only be carried out by a Gas Safe registered engineer. This filter is for electric tumble dryers.
- Keep children and pets away from the appliance during maintenance.

3. PRODUCT OVERVIEW

The CANDY Fluff & Lint Filter (Original Code 09201136) is a genuine replacement part designed to fit various Candy tumble dryer models. Its primary function is to collect lint and debris from the drying air, preventing it from accumulating within the dryer's internal components and ensuring efficient airflow.



Image 1: CANDY Tumble Dryer Fluff & Lint Filter. This image shows the replacement filter, typically a plastic frame with a mesh screen, designed to capture lint.

Compatible Models:

This filter is compatible with a wide range of Candy tumble dryers. Please verify your dryer's model number against the following list to ensure compatibility:

- CC217-80, CC217-88, CC217-SY, CC266-S, CC266T-47, CC267-37, CC267-80, CC267T-01S, CC267T-47, CC267T-84, CC267T-88, CC276T-47, CC277T-86S
- CD6720-ISR, CDC165-83SY, CDC168-SY, CDC179X-88, CDC263, CDC263CH, CDC266X, CDC266XCH, CDC267ESY, CDC268EX, CDC268TEX, CDC268TEXCH, CDC668-37, CDC668-47, CDC668-SY, CDC679X-SY, CDC679XT-88, CDC768-47, CDC779X-86SY, CDC779XT-88, CDC779XT-SY
- CDE5-80, CDE107-80, CDV160-SY, CDV262, CDV262-04ARG, CDV262ES, CDV265E, CDV265EX, CDV660-37, CDV660-47, CDV660-SY, CDV671XSY
- CIC200UK, CIC200X, CIC200XES, CIC209TX, CIC209XCH, CIC258E, CIC259EX, CIC259TEX, CIC259TEXCH, CIC60
- CIV100 ARG, CIV100 EU, CIV100 UK, CIV100ES, CIV100OS, CIV109, CIV109OS, CIV130X EU, CIV145E,

CIV149EX, CIV14M, CIV60, CIVD14EX

- CV116-80, CV116-SY, CV117-04S, CV117-OS, CV166-37, CV166-37/0, CV166-47, CV166-47/0, CV166-S, CV167-47
- GODC778-37, GODC78-01S, GODC78-88, KT6EMAX, ZW2V

4. SETUP AND INSTALLATION

Replacing the fluff and lint filter is a straightforward process. Follow these general steps:

1. **Disconnect Power:** Ensure the tumble dryer is unplugged from the electrical outlet.
2. **Locate Filter:** The lint filter is typically located inside the dryer door opening, at the bottom of the drum, or sometimes in a dedicated compartment at the front of the machine. Refer to your specific dryer's user manual for the exact location.
3. **Remove Old Filter:** Gently pull or lift the old filter out of its housing.
4. **Inspect Housing:** Check the filter housing for any accumulated lint or debris and clean it thoroughly.
5. **Insert New Filter:** Carefully slide the new CANDY Fluff & Lint Filter (09201136) into the housing until it sits securely in place. Ensure it is fully seated to prevent air leaks.
6. **Reconnect Power:** Plug the tumble dryer back into the electrical outlet.

5. OPERATING CONSIDERATIONS

The lint filter operates continuously during the drying cycle, collecting lint from your clothes. For optimal performance and safety, always ensure the filter is clean before starting a new drying cycle. A clogged filter restricts airflow, leading to longer drying times, increased energy consumption, and potential overheating.

6. MAINTENANCE

Regular cleaning of the fluff and lint filter is critical for the efficiency and longevity of your tumble dryer. Follow these maintenance guidelines:

- **Clean After Every Load:** After each drying cycle, remove the filter and gently peel off any accumulated lint. Dispose of the lint properly.
- **Periodic Deep Cleaning:** Every few weeks or months, depending on usage, wash the filter under running water with a soft brush and mild detergent to remove any residue that might clog the mesh.
- **Dry Thoroughly:** Ensure the filter is completely dry before reinserting it into the dryer.
- **Inspect for Damage:** Periodically check the filter for any tears, holes, or damage to the mesh. A damaged filter should be replaced immediately to prevent lint from entering the dryer's internal components.

7. TROUBLESHOOTING

If you experience issues with your tumble dryer, the lint filter can often be a contributing factor. Consider the following troubleshooting steps:

Problem	Possible Cause	Solution
Long drying times	Clogged lint filter, restricted airflow.	Clean the lint filter thoroughly. Ensure no lint remains in the housing.
Dryer overheating	Severely clogged filter, poor ventilation.	Clean the filter. Check the dryer's exhaust vent for blockages. If problem persists, contact service.
Lint on clothes after drying	Damaged or improperly seated filter.	Inspect the filter for tears or gaps. Ensure it is correctly installed. Replace if damaged.

If troubleshooting steps do not resolve the issue, please refer to your tumble dryer's main instruction manual or contact Candy customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	CANDY
Model Number	09201136
Product Dimensions	Approximately 1 x 1 x 1 cm (Note: These dimensions seem generic and might not represent the actual filter size accurately. Refer to your dryer's manual for precise fitment.)
Item Weight	Approximately 1 gram
Part Type	Fluff & Lint Filter (Original Replacement Part)

9. WARRANTY AND SUPPORT

This product is an original replacement part. For information regarding warranty coverage, please refer to the documentation provided with your original Candy tumble dryer or contact Candy customer support directly. Keep your purchase receipt as proof of purchase.

For further assistance or to report any issues, please visit the official Candy website or contact their customer service department. When contacting support, please have your tumble dryer's model number and the filter's original code (09201136) ready.