

[Manuals.plus](#) /

› [B. toys](#) /

› B. toys Whirly Pop Baby Activity Station Instruction Manual

B. toys BX1464Z

B. toys Whirly Pop Baby Activity Station Instruction Manual

Model: BX1464Z

1. INTRODUCTION

The B. toys Whirly Pop Baby Activity Station is an interactive high chair toy designed for infants aged 6 months and older. This colorful activity center features lights, sounds, and various tactile elements to engage your baby's senses and promote developmental skills.

Key features include:

- **Ball Popper:** Push the clear dome to activate colorful lights, playful sounds, and watch soft balls pop and bop.
- **Bead Spiral:** Spin the bead spiral to enhance fine motor skills and hand-eye coordination.
- **Musical Buttons:** Three interactive buttons play nursery songs with different instrument sounds (guitar, piano, flute), or all three in harmony.
- **Suction Cups:** Integrated suction cups on the base ensure the toy remains securely in place on smooth surfaces.



Image 1: Top-down view of the B. toys Whirly Pop Baby Activity Station, highlighting its colorful design and interactive elements.

2. SAFETY INFORMATION

- **Age Recommendation:** This toy is recommended for babies 6 months and older. It is not suitable for children under 6 months.
- **Battery Safety:** Ensure batteries are installed correctly with the correct polarity. Do not mix old and new batteries. Remove exhausted batteries promptly.
- **Cleaning:** Clean the toy with a damp cloth. Do not immerse in water.
- **Supervision:** Always supervise children during play.

3. SETUP

3.1 Battery Installation

The B. toys Whirly Pop requires 3 AAA batteries (included). To install or replace batteries:

1. Locate the battery compartment on the underside of the activity station.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 3 AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.



Image 2: The underside of the activity station, showing the battery compartment and three suction cups.

3.2 Securing the Activity Station

The activity station features three suction cups on its base for secure placement on smooth, flat surfaces such as a high chair tray or table.

1. Ensure the surface is clean and dry.
2. Press the activity station firmly onto the desired surface, applying pressure to each suction cup until it adheres.
3. To remove, gently lift the edge of each suction cup to release the vacuum.

4. OPERATING INSTRUCTIONS

The B. toys Whirly Pop offers multiple interactive features:

4.1 Ball Popper Dome

Press down on the clear dome located on the left side of the activity station. This action will activate colorful lights, playful sounds, and cause the soft balls inside the dome to pop and bop.

4.2 Bead Spiral

Spin the transparent spiral tube located on the right side of the activity station. The colorful beads inside will swirl, providing visual and auditory stimulation.

4.3 Musical Buttons

Press any of the three colored buttons (purple, pink, green) to play different nursery songs. Each button may feature a unique instrument sound (e.g., guitar, piano, flute). Pressing multiple buttons simultaneously may create a harmonious blend of sounds.



Image 3: Visual representation of the activity station's interactive features, including the ball popper, musical buttons, and suction cups.

4.4 Product Overview Video

For a visual demonstration of the product's features and operation, please watch the official overview video below:

Your browser does not support the video tag.

Video 1: Official product overview of the B. toys Whirly Pop, demonstrating its various interactive elements.

5. MAINTENANCE

5.1 Cleaning

To clean the B. toys Whirly Pop, wipe the surface with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the toy is completely dry before storing or allowing continued use.

Important: Do not submerge the activity station in water, as this may damage the electronic components.

5.2 Storage

Store the activity station in a cool, dry place away from direct sunlight when not in use. If storing for an extended period, remove the batteries to prevent leakage.

6. TROUBLESHOOTING

- **No Sound or Lights:**
 - Check if the batteries are correctly installed.
 - Replace with fresh AAA batteries if current ones are depleted.
 - Ensure the battery compartment cover is securely closed.
- **Ball Popper Not Working:**
 - Ensure the dome is pressed firmly and completely.
 - Verify that the batteries have sufficient power.
- **Suction Cups Not Sticking:**
 - Clean the surface and the suction cups to remove any dust or debris.
 - Ensure the surface is smooth, flat, and dry.
 - Apply slight moisture to the suction cups before pressing down for better adhesion.

7. SPECIFICATIONS

Feature	Detail
Brand	B. toys
Model Number	BX1464Z
Age Range	6 Months +
Dimensions	9.15 x 5.75 x 3.9 inches
Item Weight	1.08 Pounds
Material Type	Metal, Plastic
Power Source	Battery Powered
Batteries Required	3 AAA batteries (included)
Educational Objective	Motor Skill Development

Educational Benefits



**Fine Motor Skills
& Hand-eye
Coordination**



**Sensory
Development**



Image 4: The activity station highlighting its educational benefits and physical dimensions.

8. WARRANTY INFORMATION

This product is sold without a manufacturer's warranty. Please refer to the retailer's return policy for any issues.

9. SUPPORT

For additional support or inquiries regarding your B. toys Whirly Pop Baby Activity Station, please visit the official B. toys website or contact their customer service department.

You can find more information at: [B. toys Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question