

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Mabe](#) /

› [Mabe MCL1740PSDG0 17 kg Gas Washer Dryer Center User Manual](#)

## Mabe MCL1740PSDG0

# Mabe MCL1740PSDG0 17 kg Gas Washer Dryer Center User Manual

Model: MCL1740PSDG0

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Mabe MCL1740PSDG0 17 kg Gas Washer Dryer Center. Please read all instructions carefully before using the appliance to ensure proper installation, usage, and maintenance. Keep this manual for future reference.

The Mabe MCL1740PSDG0 is designed to provide comprehensive laundry care, featuring an infusor washing system for deep fabric penetration and a gas drying system. It offers 7 automatic wash programs and various drying cycles to suit different fabric types and soil levels.

## 2. SAFETY INFORMATION

### Important Safety Instructions:

- Read all instructions before using the appliance.
- This appliance must be properly grounded.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not operate the dryer without the lint filter in place.
- Keep flammable materials away from the appliance.
- Ensure proper gas and electrical connections are made by a qualified technician.
- Never reach into the appliance while it is operating.
- Supervise children when they are near the appliance.

## 3. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your washer dryer center. It is recommended that installation be performed by a qualified technician.

### 3.1 Unpacking

Carefully remove all packaging materials, including the shipping bolts and foam blocks, from the appliance. Retain

packaging for potential future transport.

## 3.2 Location Requirements

Install the appliance on a solid, level floor capable of supporting its weight (approximately 112 kg). Ensure adequate clearance around the unit for air circulation and servicing. Avoid installing in areas exposed to freezing temperatures.

## 3.3 Leveling the Appliance

Use a level to ensure the appliance is perfectly balanced. Adjust the leveling feet at the bottom of the unit by turning them clockwise to raise or counter-clockwise to lower. A level appliance reduces vibration and noise during operation.



Figure 1: Front view of the Mabe MCL1740PSDG0 Washer Dryer Center. This image shows the overall design and the location of

the leveling feet at the bottom.

### 3.4 Connections (Gas, Water, Electrical)

- **Gas Connection:** Connect the dryer to a natural gas supply using a new flexible gas connector. Ensure all connections are tight and leak-free.
- **Water Connection:** Connect the hot and cold water inlet hoses to the corresponding valves and to the back of the washer. Ensure rubber washers are in place to prevent leaks.
- **Drain Hose:** Securely attach the drain hose to the standpipe or laundry tub, ensuring it is properly routed to prevent kinks.
- **Electrical Connection:** Plug the power cord into a grounded 120 Volt, 60 Hz electrical outlet. For the dryer, ensure it is connected to a 220V/60Hz bifasic electrical supply as specified.

## 4. OPERATING INSTRUCTIONS

---

This section guides you through the daily operation of your Mabe Washer Dryer Center.

### 4.1 Control Panel Overview



Figure 2: Control panel of the Mabe MCL1740PSDG0. This image highlights the wash cycle selector, temperature and water level controls, and dryer settings.

The control panel features separate dials for washing and drying functions. The left side controls the washer, and the right side controls the dryer. Central buttons manage water temperature and level.

## 4.2 Loading the Washer



Figure 3: Washer drum with lid open. This image shows the internal structure of the washer, including the infusor system.

- Sort laundry by fabric type, color, and soil level.
- Open the washer lid and load items loosely around the infusor. Do not overload the washer.
- Add detergent to the dispenser according to the manufacturer's recommendations and load size.
- Close the washer lid securely.

### 4.3 Selecting a Wash Cycle

Turn the wash cycle selector knob to choose one of the 7 automatic programs:

- **Manchas Difíciles (Heavy Soil):** For heavily soiled items.

- **Ropa Blanca (Whites):** For white fabrics.
- **Ropa de Color (Colors):** For colored fabrics.
- **Jeans:** Specific cycle for denim.
- **Prendas Voluminosas (Bulky Items):** For blankets, comforters, etc.
- **Ciclo Rápido (Quick Cycle):** For lightly soiled items needing a fast wash.
- **Ropa Delicada (Delicates):** For fragile garments.
- **Ciclo de Exprimido Extra (Extra Spin Cycle):** To remove excess water.

Adjust water temperature and level as needed using the central controls.

## 4.4 Operating the Dryer

- Clean the lint filter before each load.
- Load items into the dryer drum. Do not overload.
- Select the desired drying temperature (Alta, Media, Baja) and time using the dryer control knob.
- Press the 'Inicio' (Start) button to begin the cycle.

## 5. MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your appliance.

### 5.1 Cleaning the Lint Filter

The lint filter is located inside the dryer door opening. Clean it before every load to maintain drying efficiency and prevent fire hazards. Pull the filter out, remove lint, and reinsert it.

### 5.2 Cleaning the Dispenser

Periodically remove and clean the detergent dispenser drawer to prevent residue buildup. Rinse with warm water and a soft brush.

### 5.3 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth and mild soap. Avoid abrasive cleaners or solvents.

### 5.4 Water Inlet Filters

Check the water inlet filters on the back of the washer every few months for sediment buildup. Turn off water supply, disconnect hoses, and clean the screens with a brush.

## 6. TROUBLESHOOTING

---

Before calling for service, review the following common issues and their solutions.

Problem	Possible Cause	Solution
Appliance does not start	Power cord unplugged; circuit breaker tripped; lid not closed; gas supply off.	Check power connection; reset breaker; ensure lid is closed; verify gas valve is open.
Washer not filling with water	Water supply valves closed; inlet hoses kinked; water inlet filters clogged.	Open water valves; straighten hoses; clean inlet filters.

Problem	Possible Cause	Solution
Dryer not heating	Gas supply off; lint filter clogged; exhaust vent blocked.	Check gas valve; clean lint filter; ensure vent is clear.
Excessive vibration/noise	Appliance not level; shipping bolts not removed; overloaded.	Level the appliance; remove shipping bolts; reduce load size.

## 7. SPECIFICATIONS

---

Detailed technical specifications for the Mabe MCL1740PSDG0 Washer Dryer Center.

Feature	Specification
Model Number	MCL1740PSDG0
Brand	Mabe
Capacity	17 kg (17000 cubic centimeters)
Dimensions (H x W x D)	192.28 cm x 68 cm x 78.36 cm (78.4prof. x 68an. x 192.3alt. centimeters)
Product Weight	112 kg (99 Kilograms listed in some specs)
Material	Plastic
Color	Grafito (Graphite)
Washer Voltage	120 Volts
Dryer System	Gas
Dryer Electrical	220V/60Hz bifasic
Washing Programs	7 Automatic Programs (Heavy Soil, Whites, Colors, Jeans, Bulky Items, Quick Cycle, Delicates, Extra Spin Cycle)
UPC	757638715782

## 8. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the warranty card included with your purchase or contact Mabe customer service directly. Keep your proof of purchase for warranty claims.

For service or technical assistance, please contact an authorized Mabe service center.