

[manuals.plus](#) /

› [Chefman](#) /

› [Chefman Electric Kettle 1.8L, 1500W Fast Boiling Water Heater, Auto Shutoff, Boil Dry Protection & Cordless Pouring, BPA Free, Removable Tea Infuser, Borosilicate Glass, Stainless Steel Stainless - Tea Infuser](#)

## Chefman RJ11-17-TI

# Chefman Electric Kettle 1.8L with Tea Infuser

Model: RJ11-17-TI

## INTRODUCTION

The Chefman 1.8-Liter Cordless Glass Electric Kettle is designed for rapid water boiling and versatile beverage preparation. Its robust construction features durable borosilicate glass and stainless steel accents, complemented by a removable tea infuser for brewing loose-leaf or bagged teas directly within the kettle. This appliance offers convenience and efficiency for your daily hot beverage needs.



*Image: The Chefman Electric Kettle, showcasing its clear glass body, stainless steel base, and integrated tea infuser.*

## IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the kettle is placed on a stable, flat, heat-resistant surface away from the edge of the countertop.
- Do not immerse the power base, cord, or plug in water or other liquids.
- This appliance is equipped with an automatic shut-off feature and boil-dry protection for safety. The kettle will turn off automatically once water reaches a boil or if it boils dry.
- The handle is designed to remain cool to the touch during operation, but caution should always be exercised when handling hot water.
- Keep the appliance out of reach of children.
- Unplug the kettle from the outlet when not in use and before cleaning.

## PRODUCT COMPONENTS

---

- **Glass Kettle Body:** Made from durable borosilicate glass, allowing visibility of the boiling process.
- **Stainless Steel Base:** Provides stability and houses the heating element.
- **Removable Tea Infuser:** A stainless steel mesh infuser for brewing loose-leaf or bagged teas.
- **360° Swivel Power Base:** Allows for cordless pouring and easy placement from any direction.
- **On/Off Switch with LED Indicator:** Illuminates blue when the kettle is actively heating water.
- **Lid:** Securely covers the kettle opening.
- **Ergonomic Cool-Touch Handle:** Designed for comfortable and safe handling.



*Image: A line drawing illustrating the various components of the Chefman Electric Kettle.*

## SETUP

---

1. **Unboxing:** Carefully remove the kettle and all its components from the packaging. Retain packaging for future storage or transport if needed.
2. **Initial Cleaning:** Before first use, fill the kettle to the 1.8L MAX line with water. Boil the water, then discard it. Repeat this process two more times to ensure the kettle is thoroughly cleaned and any manufacturing residues are removed.

3. **Placement:** Place the 360° swivel power base on a dry, flat, and stable surface. Ensure the power cord is not dangling or in a position where it could be tripped over.



*Image: The Chefman Electric Kettle being removed from its product packaging.*

## OPERATING INSTRUCTIONS

1. **Fill the Kettle:** Open the lid and fill the kettle with fresh, cold water. Do not fill below the 0.5L MIN line or above the 1.8L MAX line. For optimal performance and to prevent mineral buildup, it is recommended to use filtered water.
2. **Using the Tea Infuser (Optional):** If brewing tea, place your desired amount of loose-leaf tea or tea bags into the removable stainless steel tea infuser. Insert the infuser into the kettle before closing the lid.
3. **Place on Power Base:** Position the kettle securely onto the 360° swivel power base.
4. **Start Boiling:** Press the On/Off switch located on the handle. The blue LED indicator light will



illuminate, indicating that the kettle is heating the water.

5. **Automatic Shut-Off:** The kettle will automatically turn off once the water reaches a rolling boil. The blue LED light will extinguish.
6. **Pouring:** Carefully lift the kettle from its power base for cordless pouring. The ergonomic handle is designed to remain cool.

This kettle is versatile and can be used for a variety of hot beverages and instant foods, including hot or iced tea, coffee, hot cocoa, instant oatmeal, and for sterilizing water for baby bottles.

## Easy-Steep 1,8L Kettle



Boils Faster Than The Stove



360° Swivel Base



Removable Tea Infuser



LED Indicator Lights



Boil-Dry Auto-Shutoff



Stay-Cool Handle



Image: The Chefman Electric Kettle in operation, showing water boiling and the blue LED lights at the base.



*Image: An assortment of hot beverages and instant foods, such as tea, coffee, and oatmeal, demonstrating the kettle's versatility.*

## Official Product Videos

Your browser does not support the video tag.

*Video: A detailed demonstration of the Chefman Electric Glass Kettle, highlighting its fast boiling, auto shut-off, boil-dry protection, and tea infuser features.*

Your browser does not support the video tag.

*Video: A comprehensive product overview of the Chefman Electric Kettle, showcasing its design, features, and ease of use.*

## MAINTENANCE

Regular cleaning and maintenance will prolong the life of your Chefman Electric Kettle.

- **Daily Cleaning:** After each use, unplug the kettle and allow it to cool. Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Kettle Interior:** The kettle has a filter to keep water clean. Rinse the interior with hot water. Avoid using soap inside the kettle as it can leave residue.
- **Tea Infuser:** The removable tea infuser can be washed in warm, soapy water and rinsed thoroughly.

- **Descaling (Mineral Deposits):** If mineral deposits (limescale) accumulate, fill the kettle with a mixture of equal parts white vinegar and water. Let it soak for at least 30 minutes, or boil the mixture for 5-10 minutes for stubborn deposits. Discard the mixture and rinse the kettle thoroughly several times with fresh water.
- **Power Base:** Never immerse the power base in water or any other liquid. Wipe it clean with a dry cloth only.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not turn on.	Kettle not properly seated on base; power cord unplugged; no power to outlet.	Ensure kettle is correctly placed on the power base. Check if the power cord is securely plugged into a working outlet.
Water is not boiling.	On/Off switch not activated.	Press the On/Off switch firmly to activate heating. The blue LED light should illuminate.
Unusual taste or smell from water.	New appliance odor; mineral deposits.	For first use, perform initial cleaning steps (boil and discard water 3 times). If due to mineral deposits, descale the kettle as per maintenance instructions.

SPECIFICATIONS

Brand	Chefman
Model Number	RJ11-17-TI
Capacity	1.8 Liters
Power/Wattage	1500 watts
Voltage	120 volts
Material	Stainless Steel, Borosilicate Glass
Product Dimensions	15.24 x 21.59 x 17.78 cm
Item Weight	1.2 kg
Special Features	Auto Shutoff, Boil Dry Protection, Cordless, Removable Tea Infuser, Automatic Shut-Off



Image: The Chefman Electric Kettle with key dimensions indicated.

## WARRANTY AND SUPPORT

The Chefman Electric Kettle comes with a **1-year assurance** provided by Chefman.

For product support, warranty claims, or additional information, please visit the official Chefman website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty purposes.





You can find more information and recipes at [clubchefman.com](https://clubchefman.com).

© 2024 Chefman. All rights reserved.

## Related Documents - RJ11-17-TI

	<p><a href="#">Chefman Fast-Boil 1L Infuser Kettle User Guide</a></p> <p>User guide for the Chefman Fast-Boil 1L Infuser Kettle, covering safety instructions, features, operating instructions, cleaning and maintenance, terms and conditions, and warranty registration.</p>
	<p><a href="#">Chefman Fast-Boil 1L Infuser Kettle User Guide</a></p> <p>Comprehensive user guide for the Chefman Fast-Boil 1L Infuser Kettle. Learn about safety instructions, features, operating procedures, cleaning, maintenance, and warranty information for your Chefman kettle.</p>



	<p><a href="#">Chefman RJ11-GN-P-BLACK Gooseneck Kettle User Guide</a></p> <p>Comprehensive user guide for the Chefman RJ11-GN-P-BLACK Gooseneck Kettle, covering safety instructions, features, operating procedures, cleaning, maintenance, and warranty information for optimal brewing of tea and coffee.</p>
	<p><a href="#">Chefman Electric Kettle+ User Guide and Operating Instructions</a></p> <p>Comprehensive guide for the Chefman Electric Kettle+ (RJ11-17-TCTI), covering features, operation, safety, cleaning, and warranty information.</p>
	<p><a href="#">Chefman 1.8-Liter Rapid-Boil Kettle Quick Start Guide</a></p> <p>Get started quickly with your Chefman 1.8-Liter Rapid-Boil Kettle. This guide covers features, first use, cleaning, operation, and tea brewing tips for model RJ11-17-SS.</p>
	<p><a href="#">Chefman Custom-Temp 1.8L Keep Warm Kettle User Guide</a></p> <p>Comprehensive user guide for the Chefman Custom-Temp 1.8L Keep Warm Kettle (Model RJ11-18-CTI-UK), covering safety instructions, features, operating procedures, cleaning, maintenance, and warranty information.</p>