



[Manuals.plus](#) /

› [Seatcraft](#) /

› Seatcraft Omega Home Theater Seating Loveseat Instruction Manual

Seatcraft Omega 88-4057

Seatcraft Omega Home Theater Seating Loveseat Instruction Manual

Model: Omega (88-4057)

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Seatcraft Omega Home Theater Seating Loveseat. Please read this manual thoroughly before assembly and use to ensure proper function and safety. The Seatcraft Omega Loveseat features power recline, power adjustable headrests, USB charging, lighted cup holders, and a center storage console, designed to enhance your home theater experience.

IMPORTANT SAFETY INFORMATION

WARNING: This product requires assembly. Always follow the assembly instructions carefully to ensure stability and safety. This product is not intended for children or pets. Keep children and pets away from the product when in use to prevent entrapment. Do not exceed the maximum weight recommendation of 350 pounds. Always use the product as intended and follow all safety guidelines to prevent injury or damage.

- Ensure all power connections are secure before operating the recline and headrest functions.
- Keep hands and feet clear of moving parts during operation.
- Do not stand on the footrest or armrests.
- Avoid placing heavy objects on the headrests or armrests.

SETUP AND ASSEMBLY

Your Seatcraft Omega Loveseat arrives partially assembled with backrests detached for easier moving and installation. Assembly typically takes 30 minutes or less. Follow these steps for proper setup:





1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components are present.
2. **Attach Backrests:** Align the metal brackets on the backrests with the corresponding receivers on the seat

base. Slide the backrests down firmly until they lock into place. You should hear an audible click.

3. **Connect Power:** Locate the power cords and connect them to the appropriate ports on the underside of the seating unit. Plug the main power cord into a grounded electrical outlet.
4. **Check Connections:** Verify all power plugs and connections are secure to prevent operational issues.
5. **Positioning:** Place the loveseat in your desired location. Ensure there is sufficient space behind the unit for the "Wall Hugger" recline mechanism to operate without obstruction. The fully reclined depth is 65 inches.

 SEATCRAFT

Seatcraft Omega
Loveseat w/ Storage Console

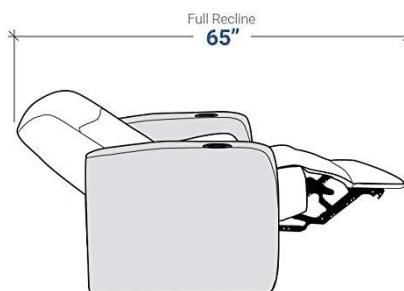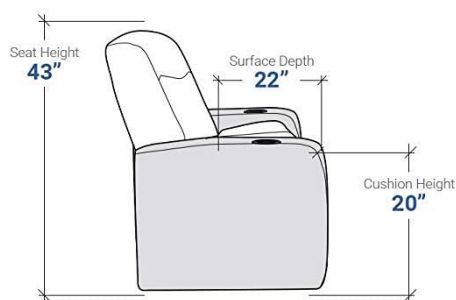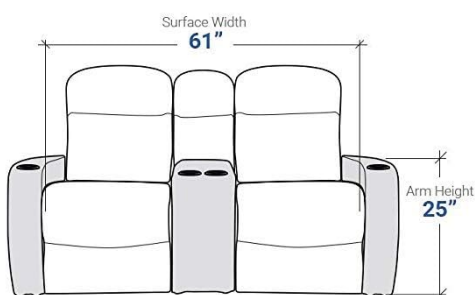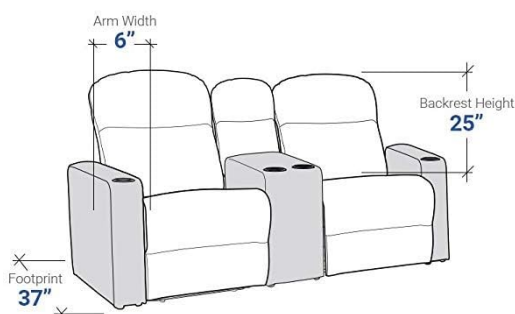

*Rotate Chair 90° to fit through the door before attaching backrest

Distance needed from wall for full recline: 6"

Figure 1: Seatcraft Omega Loveseat dimensions. Overall dimensions are 43" H x 73" W x 37" D. Fully reclined depth is 65". Minimum doorframe width for moving the unit is 28" (rotate chair 90 degrees).

OPERATING INSTRUCTIONS

The Seatcraft Omega Loveseat is equipped with several features for enhanced comfort and convenience:

Power Recline and Power Headrests

Each seating position features independent power recline and power adjustable headrests. Use the control panel located on the inner side of the armrest to adjust your position.

- **Recline:** Press and hold the recline button (typically the outermost buttons) to extend the footrest and recline the backrest. Release the button when your desired position is reached.
- **Headrest Adjustment:** Press and hold the headrest adjustment button (typically the inner buttons) to tilt the headrest forward or backward. Release the button when your desired viewing angle is achieved.
- **Return to Upright:** Press and hold the "Home" button (if available, or the opposite recline button) to return the seat to its fully upright position.



Figure 2: Armrest control panel for recline, headrest, and USB charging.



Figure 3: Power adjustable headrest.



Figure 4: Loveseat in reclined position with footrest extended.

Your browser does not support the video tag.

Video 1: Demonstrates the ComfortView Adjustable Powered Headrests, showing how they adjust to maintain optimal viewing angle when reclined.

USB Charging and Lighted Cup Holders

- **USB Charging:** A USB charging port is integrated into the armrest control panel, allowing you to charge your devices conveniently.
- **Lighted Cup Holders:** The cup holders feature a sky blue ambient lighting. This illumination helps locate your beverages in a darkened room.



Figure 5: Lighted cup holder with ambient blue light.

Storage Console

The center console between the two seats provides ample storage space. Lift the console lid to access the compartment, ideal for remotes, magazines, or other small items.



Figure 6: Center storage console.

Additional Features Overview

Your browser does not support the video tag.

Video 2: Overview of the Seatcraft Omega Sofa and Loveseat, showcasing various features including power recline, power headrests, storage, and accessories.

MAINTENANCE AND CARE

Proper care will extend the life and appearance of your Seatcraft Omega Loveseat, which features Leather Gel upholstery.

- **Regular Cleaning:** Dust regularly with a soft, dry cloth. For spills, blot immediately with a clean, damp cloth. Avoid rubbing.
- **Spot Cleaning:** For stubborn spots, use a mild soap solution and a soft cloth. Test on an inconspicuous area first. Wipe away any soap residue with a clean, damp cloth and dry thoroughly.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or harsh detergents, as these can damage the Leather Gel finish.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading and material degradation.
- **Moving the Unit:** When moving the loveseat, lift it rather than dragging to prevent damage to the legs and

frame.

TROUBLESHOOTING

If you encounter any issues with your Seatcraft Omega Loveseat, please refer to the following common troubleshooting tips:

- **Recline/Headrest Not Working:**
 - Check that the power cord is securely plugged into both the wall outlet and the loveseat's power input.
 - Ensure all internal power connections for motors and lights are firmly seated. These can sometimes come loose during shipment or movement.
 - Verify the wall outlet is functional by plugging in another device.
- **Lighted Cup Holders Not Illuminating:**
 - Check all power connections as described above.
 - If only one cup holder is affected, inspect its specific wiring connection if accessible.
- **Unusual Noises During Operation:**
 - Ensure no objects are obstructing the recline mechanism.
 - If noises persist, contact customer support.

If these steps do not resolve the issue, please contact Seatcraft Customer Support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	Seatcraft
Model Name	Omega
Item Model Number	88-4057
Product Dimensions (D x W x H)	37"D x 73"W x 43"H
Fully Reclined Depth	65"
Size	Loveseat
Color	Black
Upholstery Material	Leather Gel
Fill Material	Foam
Special Features	Power Recline, Power Headrests, USB Charging, Lighted Cup Holders, Center Storage Console, Wall Hugger Recline
Maximum Weight Recommendation	350 Pounds
Item Weight	291 pounds

Feature	Detail
UPC	815876022717
GTIN	00815876020133, 00815876022717

WARRANTY INFORMATION

For detailed warranty information regarding your Seatcraft Omega Home Theater Seating Loveseat, please refer to the warranty card included with your purchase or visit the official Seatcraft website. Warranty terms typically cover manufacturing defects and specific components for a defined period from the date of purchase.

CUSTOMER SUPPORT

If you require further assistance, have questions about your product, or need to report an issue, please contact Seatcraft Customer Support:

- **Online:** Visit the official Seatcraft website for support resources and contact forms.
- **Phone:** Refer to your product packaging or the Seatcraft website for the most current customer service phone number.

Please have your model number (88-4057) and proof of purchase ready when contacting support.