



[Manuals.plus](#) /

> [Bright Starts](#) /

> Bright Starts Pop 'N Jump SE Portable Baby Activity Center Instruction Manual

Bright Starts 13410

Bright Starts Pop 'N Jump SE Portable Baby Activity Center Instruction Manual

Model: 13410 | Brand: Bright Starts

IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these instructions could result in serious injury or death.

- Always keep child in view while in the activity center.
- Discontinue use when child reaches 25 lbs (11.3 kg), 12 months of age, or can climb out.
- Never leave child unattended.
- Ensure all locking mechanisms are securely engaged before each use.
- Do not use if any components are damaged or missing.
- Keep away from open flames, heaters, and other heat sources.
- Only use on flat, level surfaces.
- This product is not intended for sleeping.

PRODUCT OVERVIEW

The Bright Starts Pop 'N Jump SE Portable Baby Activity Center provides a secure and engaging play space for infants. Its compact, foldable design allows for easy setup and storage, making it suitable for both indoor and outdoor use. The activity center includes a removable canopy for sun protection and various sensory toys to entertain the child.

Key Features:

- **Portable Design:** Innovative pop and fold mechanism for quick setup and storage.
- **Adjustable Height:** 3 height positions to accommodate growing infants.
- **Sun Protection:** Removable canopy provides shade for outdoor use.
- **Engaging Toys:** Includes a spinner ball, rattle, teether, and mirror book.
- **Easy Transport:** Comes with a carrying bag with a shoulder strap.
- **Easy Care:** Jumper support seat is machine washable.

Components:

- Activity Center Frame
- Jumper Support Seat
- Removable Canopy
- Sensory Toys (Spinner Ball, Rattle, Teether, Mirror Book)
- Travel/Carrying Bag



Figure 1: Fully assembled Bright Starts Pop 'N Jump SE Activity Center.

SETUP INSTRUCTIONS

1. **Unpack:** Remove all components from the carrying bag.
2. **Unfold Frame:** Place the folded frame on a flat surface. Gently pull the legs apart until the frame locks into its open position. Ensure all four legs are fully extended and locked.
3. **Attach Jumper Seat:** Securely attach the jumper support seat to the designated points on the frame. Ensure all clips or fasteners are firmly engaged.
4. **Install Toys:** Attach the spinner ball, rattle, teether, and mirror book to the activity center's loops or trays as desired.
5. **Attach Canopy (Optional):** For outdoor use or sun protection, attach the canopy to the designated points on the frame. Ensure it is

securely fastened.



Figure 2: Unfolding the activity center frame.



Removable canopy helps provide shade from sun

Figure 3: Attaching the removable canopy for sun protection.

OPERATING INSTRUCTIONS

Placing Child in Activity Center:

- Ensure the activity center is on a stable, level surface.
- Carefully place the child into the jumper support seat.
- Fasten any safety harnesses or straps provided with the seat.

Adjusting Height:


The activity center features 3 adjustable height positions to ensure proper fit for your child. To adjust the height:

1. Locate the height adjustment buttons or levers on the frame legs.
2. Press the buttons and slide the legs to the desired height setting.
3. Ensure both sides are adjusted equally and lock securely into place.
4. Verify the child's feet are flat on the floor of the activity center, not dangling or excessively bent.



3 levels of height adjustment to grow with baby

Figure 4: Height adjustment mechanism.

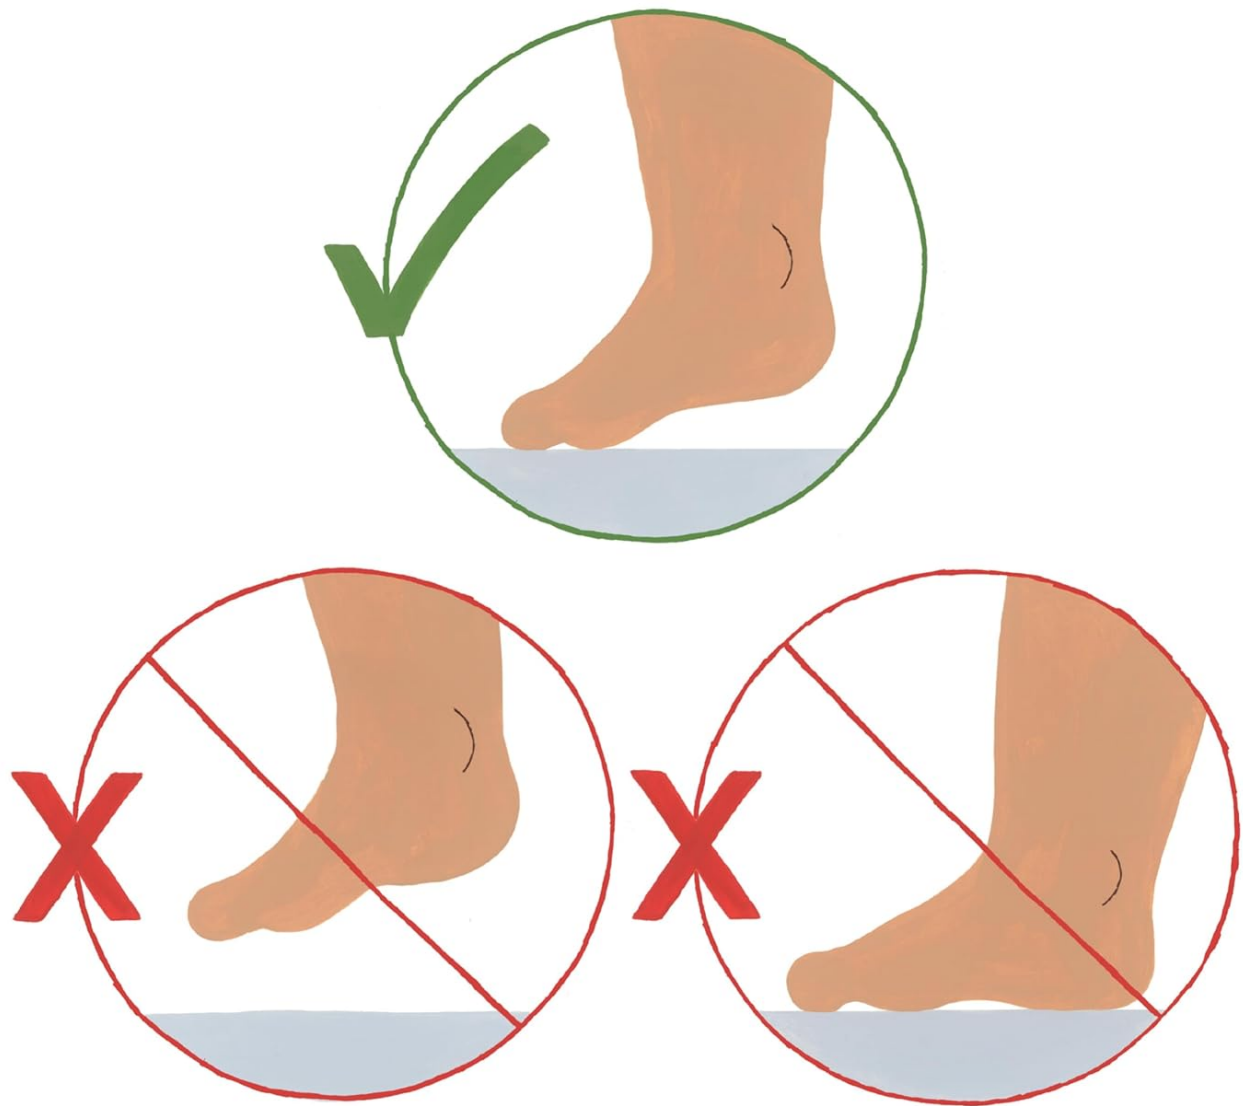

Check child's foot position to ensure proper height adjustment.

Figure 5: Proper foot positioning for height adjustment.

MAINTENANCE AND CARE

Cleaning:

- **Jumper Support Seat:** The fabric jumper support seat is machine washable. Use cold water on a gentle cycle. Do not bleach. Tumble dry low.
- **Frame and Toys:** Wipe down the frame, plastic components, and toys with a damp cloth and mild soap. Rinse thoroughly and air dry. Do not immerse the frame in water.
- **Canopy:** Hand wash with mild soap and water. Air dry.

Storage:

To fold the activity center for storage or transport:

1. Remove the child from the activity center.
2. Remove the canopy and any attached toys.

3. Locate the folding mechanisms on the frame (usually buttons or levers).
4. Press the mechanisms and gently push the legs together until the frame folds compactly.
5. Place the folded activity center and all accessories into the provided carrying bag.



The pop and fold design sets up fast and packs up into the included travel bag

Figure 6: Activity center folded for storage.



Figure 7: Transporting the activity center in its carrying bag.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Activity center does not lock open.	Legs not fully extended.	Ensure all legs are pulled apart until the locking mechanisms click into place.
Child's feet are not touching the floor or are too bent.	Incorrect height adjustment.	Adjust the activity center to a higher or lower setting until the child's feet are flat on the floor. Refer to "Adjusting Height" section.
Canopy does not stay attached.	Canopy not properly fastened.	Ensure all canopy clips or fasteners are securely attached to the frame.
Difficulty folding the activity center.	Folding mechanisms not disengaged.	Locate and press the folding buttons/levers on the frame before attempting to collapse the unit.

SPECIFICATIONS

- **Model Number:** 13410
- **Brand:** Bright Starts
- **Recommended Age:** 6 to 12 months
- **Maximum Weight Capacity:** 25 lbs (11.3 kg)
- **Product Dimensions (Assembled):** Approximately 9.4" L x 9.7" W x 31.3" H (23.9 cm L x 24.6 cm W x 79.5 cm H)
- **Materials:** Polyester, Nylon
- **Features:** 3 Adjustable Heights, Indoor/Outdoor Use, Portable with Travel Bag, UV Canopy

summer™
by ingenuity

Max Weight:
25 lb/ 11.33 kg

Max Age:
12 mos.

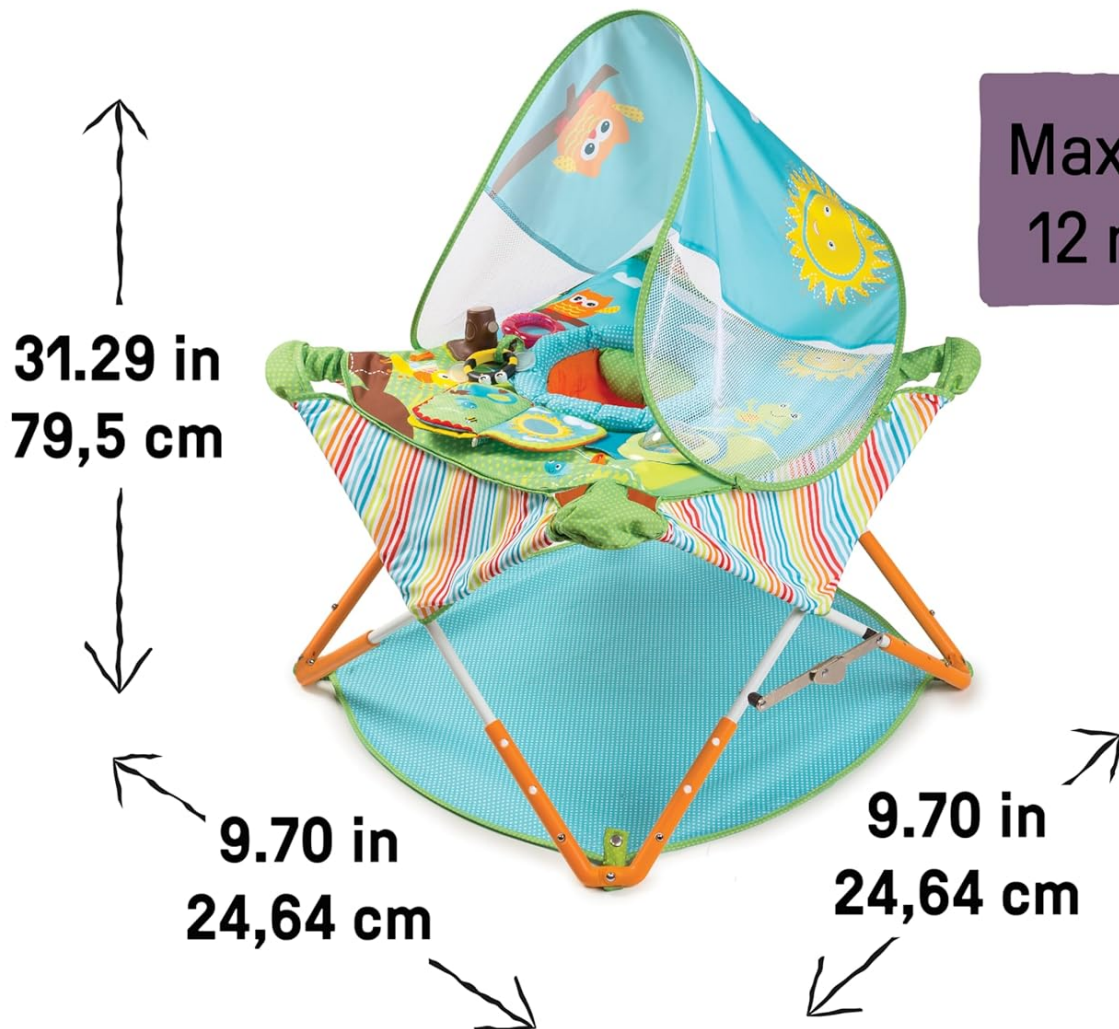


Figure 8: Product dimensions.

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please contact Bright Starts customer service. Refer to the official Bright Starts website or the product packaging for current contact details.

An electronic version of this user guide may be available for download: [Download User Guide \(PDF\)](#)

