

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Exquisit](#) /

› [Exquisit WM 6910-10 Washing Machine User Manual](#)

Exquisit 0720092

Exquisit WM 6910-10 Washing Machine User Manual

Model: WM 6910-10 (0720092)

INTRODUCTION

This user manual provides essential information for the safe and efficient operation, installation, and maintenance of your Exquisit WM 6910-10 washing machine. Please read this manual thoroughly before using the appliance and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not install or store the appliance where it will be exposed to the weather or to freezing temperatures.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials. Check for any transport damage. Keep packaging materials out of reach of children.

Location and Leveling

Place the washing machine on a firm, level floor. Adjust the leveling feet to ensure the machine is stable and does not wobble. Proper leveling is crucial for quiet operation and to prevent vibrations.



Image: Front view of the Exquisit WM 6910-10 washing machine, showing the control panel, detergent drawer, and drum door. This image illustrates the overall appearance of the appliance for installation planning.

Water Connection

Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure all connections are tight to prevent leaks. Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fastened to prevent

displacement during operation.

Electrical Connection

Connect the power cord to a properly grounded electrical outlet. The appliance operates on 240 Volts. Do not use extension cords or adapters.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features a program selector dial, function buttons, and indicator lights. Familiarize yourself with these controls before starting a wash cycle.



Image: Detailed view of the control panel of the Exquisit WM 6910-10 washing machine, showing the program dial with various wash cycles (e.g., Cotton, Synthetics, Wool), temperature settings, and function buttons for pre-wash, rinse, spin, and start/pause.

Loading Laundry

Open the drum door and load laundry, ensuring not to overload the machine. The maximum capacity is 6 kilograms. Distribute items evenly inside the drum.



Image: The Exquisit WM 6910-10 washing machine with its front-loading door open, revealing the stainless steel drum. This view is helpful for understanding how to load and unload laundry.

Adding Detergent and Additives

Add the appropriate amount of detergent and any fabric softeners or pre-treatment agents to the designated compartments in the detergent drawer.

Selecting a Program

Turn the program selector dial to choose one of the 21 available wash programs. Select the program that best suits the type of fabric and soil level of your laundry. Adjust temperature and spin speed if necessary using the corresponding

buttons.

Starting a Wash Cycle

Press the Start/Pause button to begin the selected wash cycle. The indicator lights will show the current stage of the cycle.

MAINTENANCE AND CLEANING

Cleaning the Detergent Drawer

Regularly remove and clean the detergent drawer to prevent detergent residue buildup. Rinse it under running water and dry thoroughly before reinserting.

Cleaning the Drum and Door Seal

Wipe the inside of the drum and the rubber door seal after each wash to remove any moisture or lint. This helps prevent mold and unpleasant odors.

Cleaning the Drain Filter

Periodically clean the drain filter, located at the bottom front of the machine. Refer to the diagram in your physical manual for exact location and procedure. This prevents blockages and ensures efficient drainage.

External Cleaning

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

| Problem | Possible Cause | Solution |
|------------------------------|--|---|
| Machine does not start | Power cord not plugged in; Door not closed properly; Program not selected. | Check power connection; Ensure door is securely latched; Select a wash program and press Start. |
| No water intake | Water tap closed; Water inlet hose kinked; Water pressure too low. | Open water tap; Straighten hose; Check household water pressure. |
| Machine vibrates excessively | Machine not level; Transport bolts not removed; Uneven load. | Adjust leveling feet; Remove transport bolts (if applicable); Redistribute laundry inside drum. |
| Water not draining | Drain hose kinked or blocked; Drain filter clogged. | Check and clear drain hose; Clean drain filter. |

TECHNICAL SPECIFICATIONS

Brand: Exquisit

Model: WM 6910-10

Model Number: 0720092

Capacity: 6 Kilograms

Power/Wattage: 1900 Watts

Voltage: 240 Volts

Noise Level: 59 dB

Number of Programs: 21

Product Dimensions: 47.5 x 59.6 x 84.6 cm (Width x Depth x Height)

Item Weight: 63 kg

First Available Date: December 21, 2019

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your appliance or visit the official Exquisit website. Do not attempt to repair the appliance yourself. Always contact authorized service personnel for repairs.

For further assistance, please contact Exquisit customer service.

© 2024 Exquisit. All rights reserved.