

[Manuals.plus](#) /

› [Deerma](#) /

› Air Fryer Deerma DEM-KZ130W User Manual

Deerma DEM-KZ130W

Deerma DEM-KZ130W Air Fryer User Manual

Comprehensive guide for safe and efficient operation of your Deerma Air Fryer.

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Do not immerse the cord, plug, or the appliance itself in water or other liquids.
- **Placement:** Always place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow adequate air circulation. Do not place it on or near a hot gas or electric burner, or in a heated oven.
- **Usage:** This appliance is for household use only. Do not use it outdoors. Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- **Hot Surfaces:** Surfaces may become hot during use. Do not touch hot surfaces. Use handles or knobs. Always use oven mitts when handling hot components.
- **Children:** Close supervision is necessary when any appliance is used by or near children.
- **Ventilation:** Do not block any ventilation openings. Allow at least 10 cm (4 inches) of free space on the back and sides, and 10 cm (4 inches) above the appliance.
- **Food Preparation:** Do not overfill the basket. Do not cook extremely greasy foods as this may cause smoke.
- **After Use:** Always unplug the appliance from the power outlet when not in use and before cleaning. Allow it to cool down completely before handling or cleaning.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Deerma DEM-KZ130W Air Fryer.



Figure 1: Front view of the Deerma DEM-KZ130W Air Fryer, showing the sleek black and white design, digital control panel on top, and the pull-out basket handle.



Figure 2: Angled view of the Deerma DEM-KZ130W Air Fryer, highlighting the transparent viewing window on the basket, allowing users to monitor cooking progress without opening the drawer.

Components:

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Digital display with touch controls for temperature, timer, and cooking presets.
- **Frying Basket:** Non-stick coated basket for holding food.
- **Basket Handle:** For safely pulling out and inserting the frying basket.
- **Air Inlet/Outlet:** Located at the top and back for proper air circulation.

3. SETUP AND FIRST USE

1. **Unpacking:** Remove all packaging materials, stickers, and labels from the appliance.
2. **Cleaning:** Wash the frying basket and any removable accessories in hot soapy water. Rinse thoroughly and dry completely. Wipe the inside and outside of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is sufficient space around the unit for proper ventilation (at least 10 cm on all sides).
4. **Pre-heating (First Use Only):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to burn off any manufacturing residues. A slight odor may be present; this is normal and will dissipate.
5. **Power Connection:** Plug the power cord into a grounded wall outlet.

4. OPERATING INSTRUCTIONS

Basic Operation:

1. **Prepare Food:** Place the ingredients you wish to air fry into the frying basket. Do not exceed the MAX fill line.
2. **Insert Basket:** Slide the frying basket back into the main unit until it clicks securely into place.
3. **Power On:** Plug the appliance into a power outlet. The power indicator will light up.
4. **Set Temperature and Time:**
 - Use the temperature control buttons (+ / -) to set the desired cooking temperature.
 - Use the timer control buttons (+ / -) to set the desired cooking time.
5. **Start Cooking:** Press the Start/Pause button to begin the cooking process. The fan and heating element will activate.
6. **Shaking/Flipping (Optional):** For even cooking, some foods may require shaking or flipping halfway through the cooking time. Carefully pull out the basket, shake or flip the food, and then reinsert the basket. The air fryer will resume cooking automatically.
7. **End of Cooking:** When the set time has elapsed, the air fryer will beep and automatically shut off.
8. **Remove Food:** Carefully pull out the basket using the handle. Use tongs to remove the cooked food from the basket. Do not tip the basket to pour out food, as excess oil may drip.
9. **Power Off:** Unplug the appliance from the wall outlet after use.

Pre-set Functions:

The Deerma DEM-KZ130W Air Fryer features several pre-set cooking functions for common dishes. Refer to the icons on the control panel for specific functions (e.g., fries, chicken, fish, cake).

- To use a pre-set function, simply press the corresponding icon on the control panel. The air fryer will automatically set the optimal temperature and time for that food type.
- You can adjust the pre-set temperature and time manually if desired after selecting the function.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool Down:** Always unplug the air fryer and allow it to cool completely before cleaning.

- 2. **Clean Basket and Pan:** The frying basket and pan are non-stick. Clean them with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak them in hot water for about 10 minutes. They are generally dishwasher safe, but hand washing is recommended to preserve the non-stick coating.
- 3. **Clean Interior:** Wipe the interior of the appliance with a damp cloth and mild detergent. Do not use abrasive cleaners or steel wool.
- 4. **Clean Exterior:** Wipe the exterior of the air fryer with a soft, damp cloth.
- 5. **Heating Element:** Use a cleaning brush to remove any food residue from the heating element.
- 6. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

6. TROUBLESHOOTING

If you encounter issues with your Deerma DEM-KZ130W Air Fryer, consult the table below for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in. Power outlet not working. Basket not inserted correctly.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Push the basket firmly until it clicks into place.
Food is not cooked evenly.	Basket is overfilled. Food not shaken/flipped.	Do not overfill the basket. Cook in smaller batches if necessary. Shake or flip ingredients halfway through cooking.
White smoke coming from the appliance.	Cooking greasy ingredients. Residue from previous use.	This is normal for very greasy foods. Clean the basket and heating element thoroughly after each use.
Appliance smells during first use.	Manufacturing residues burning off.	This is normal. Run the air fryer empty for 10-15 minutes at 180°C (350°F) before first use. Ensure good ventilation.

7. SPECIFICATIONS

Technical specifications for the Deerma DEM-KZ130W Air Fryer.

- **Model Number:** DEM-KZ130W
- **Brand:** Deerma
- **Color:** Black
- **Capacity:** 5.5 Litres
- **Power:** 1300 Watts
- **Control Method:** Touch
- **Special Features:** Timer
- **Recommended Uses:** Frying, baking, roasting
- **Item Weight:** 5.45 Kilograms

- **Non-stick Coating:** No

8. WARRANTY AND SUPPORT

Your Deerma DEM-KZ130W Air Fryer comes with a manufacturer's warranty and support information.

- **Manufacturer's Warranty:** This product is covered by a 2-year manufacturer's warranty. Please retain your proof of purchase for warranty claims.
- **Return Policy:** For purchases made through Amazon, a 30-day return/replacement policy may apply. Refer to Amazon's return policy for details.
- **Spare Parts:** Information regarding the availability of spare parts is currently unavailable.
- **Software Updates:** Software update information is not applicable/available for this product.
- **Customer Support:** For further assistance, please contact Deerma customer support or your retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B01FJE1LHW>

More documents and user manuals: <https://manuals.plus/>