

Hotpoint KP 59 MS.C(X)/G

Instruction Manual

HOTPOINT INDESIT KP 59 MS.C(X)/G TOP OVEN/GRILL ELEMENT 3050W

Introduction

This manual provides essential information for the safe and effective installation, operation, and maintenance of your Hotpoint Indesit KP 59 MS.C(X)/G Top Oven/Grill Element 3050W. This component is designed specifically for use with the Indesit KP 59 MS.C(X)/G oven model. Please read these instructions thoroughly before proceeding with installation or use.

Safety Information

WARNING: Electrical appliance repair should only be performed by qualified personnel. Improper installation or repair can lead to electric shock, fire, or other hazards.

- Always disconnect the appliance from the main power supply before attempting any installation, maintenance, or repair.
- Ensure the replacement element matches the specifications of the original part.
- Wear appropriate personal protective equipment, such as gloves, during handling and installation.
- Keep children and pets away from the work area.
- After installation, ensure all connections are secure and the appliance is properly reassembled before restoring power.

Product Overview

The Hotpoint Indesit KP 59 MS.C(X)/G Top Oven/Grill Element is a crucial heating component for your oven. It provides the necessary heat for grilling and top oven functions. This element is rated at 3050 Watts, combining a 1050 Watt and a 2000 Watt section for efficient heating.



Image: Hotpoint Indesit KP 59 MS.C(X)/G Top Oven/Grill Element. This image shows the metallic heating element with its electrical terminals and mounting bracket.

Key dimensions and features:

- **Length:** 335mm
- **Width:** 485mm
- **Tags:** 55mm
- **Bracket:** 98mm
- **Cross Bar:** 621mm
- **Power:** 3050 Watts (1050W + 2000W)

Setup and Installation

Installation of this oven element typically involves replacing a faulty existing element. Due to the electrical nature and specific fitting requirements, it is highly recommended that installation be performed by a qualified appliance technician.

General Installation Steps (for qualified technicians):

1. **Disconnect Power:** Ensure the oven is completely disconnected from the main electrical supply at the circuit breaker.
2. **Access Element:** Open the oven door and locate the existing top oven/grill element. Depending on the oven model, you may need to remove screws securing the element or a protective cover.
3. **Disconnect Wiring:** Carefully disconnect the electrical terminals from the old element. Note the position of each wire for correct re-connection.
4. **Remove Old Element:** Unscrew any mounting brackets or screws holding the old element in place and carefully slide it out.
5. **Install New Element:** Insert the new Hotpoint Indesit KP 59 MS.C(X)/G element into position, ensuring it fits correctly into the mounting points.
6. **Connect Wiring:** Reconnect the electrical wires to the new element's terminals, ensuring a secure and correct connection.
7. **Secure Element:** Fasten any mounting screws or brackets to secure the new element firmly.

8. **Reassemble Oven:** Replace any protective covers or panels that were removed.
9. **Test Functionality:** Restore power to the oven and perform a test run to ensure the new element heats up correctly and the oven functions as expected.

Operating Instructions

As this product is a replacement heating element, its operation is integrated into the overall functionality of your Indesit KP 59 MS.C(X)/G oven. Once correctly installed, the element will function automatically when the oven's grill or top heating modes are selected via the oven's control panel. Refer to your oven's primary user manual for specific instructions on selecting cooking modes, setting temperatures, and using the grill function.

Maintenance

Proper maintenance ensures the longevity and efficiency of your oven and its components. While the heating element itself requires minimal direct maintenance, regular care of the oven is beneficial.

- **Cleaning:** Ensure the oven interior is cleaned regularly according to your oven's primary manual. Avoid using abrasive cleaners directly on the heating element.
- **Inspection:** Periodically, with the oven disconnected from power and cooled, visually inspect the heating element for any signs of damage, such as cracks, bulges, or discoloration. If any damage is observed, discontinue use and consult a qualified technician.
- **Avoid Impact:** Be careful not to strike the heating element with cookware or cleaning tools, as this can cause damage.

Troubleshooting

If your oven is not heating correctly after replacing the element, consider the following common issues. Always ensure the oven is disconnected from power before any inspection.

- **No Heat:** Check if the oven is receiving power. Verify that the circuit breaker has not tripped. Ensure the element's electrical connections are secure and correctly wired.
- **Uneven Heating:** This could indicate a partial failure of the element or an issue with the oven's thermostat. If the element is new, re-check connections.
- **Element Not Glowing:** A properly functioning element should glow red when active. If it does not, or only partially glows, it may indicate a faulty element or wiring issue.
- **Burning Smell:** A slight burning smell may occur during the first few uses of a new element as manufacturing residues burn off. If the smell persists or is strong, disconnect power and inspect for foreign objects or wiring issues.

For persistent issues, it is recommended to contact a qualified appliance repair technician.

Specifications

Specification	Detail
Brand	Hotpoint
Model Number	KP 59 MS.C(X)/G (Part localization-B01FMSJQ4U)
ASIN	B01FMSJQ4U

Power Rating	3050 Watts (1050W + 2000W)
Length	335mm
Width	485mm
Tags	55mm
Bracket	98mm
Cross Bar	621mm
Manufacturer	Hotpoint
Date First Available	Oct. 15 2025

Warranty Information

Specific warranty terms for this replacement part are typically provided by the seller or manufacturer at the time of purchase. Please retain your proof of purchase for any warranty claims. For detailed information regarding your warranty coverage, refer to the documentation provided with your purchase or contact the seller directly.

Customer Support

If you require further assistance, have questions regarding installation, or encounter issues not covered in this manual, please contact the retailer or the manufacturer's customer support. When contacting support, please have your product model number (KP 59 MS.C(X)/G) and ASIN (B01FMSJQ4U) available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question