

Manuals.plus /

> [Ikea](#) /

> Ikea Lisabo Ash Veneer Desk (Model LISABO) Instruction Manual

Ikea LISABO

Ikea Lisabo Ash Veneer Desk (Model LISABO) Instruction Manual

1. INTRODUCTION

This manual provides essential information for the assembly, safe use, and maintenance of your Ikea Lisabo Ash Veneer Desk. Please read these instructions carefully before assembly and use to ensure proper function and longevity of the product.

The Lisabo desk features a durable ash veneer tabletop and solid birch legs, designed for a warm and natural aesthetic. Its construction emphasizes ease of assembly and practical functionality.

2. SAFETY INFORMATION

Important Safety Warnings:

- **Assembly Required:** This product requires assembly. Follow all assembly instructions precisely to ensure structural integrity and safety.
- **Maximum Load Capacity:** Do not exceed the maximum load capacity of **50 kg (110 lbs)** on the tabletop. Overloading can cause damage to the desk or lead to injury.
- **Grain Variations:** Natural variations in wood grain are inherent to the product. While these contribute to its unique appearance, ensure all components fit correctly during assembly. Do not force parts together.
- **Drawer Safety:** The integrated lock mechanism prevents the drawer from being pulled out completely and falling. Do not attempt to bypass or remove this safety feature.
- **Stability:** Ensure the desk is placed on a flat, stable surface to prevent wobbling or tipping.

3. SETUP AND ASSEMBLY

The Lisabo desk is designed for straightforward assembly. Each table leg requires only one fitting, simplifying the process.

1. **Unpack Components:** Carefully unpack all parts and hardware from the packaging. Verify that all components listed in the separate assembly instructions are present.
2. **Review Instructions:** Before beginning, thoroughly read the detailed assembly instructions provided with your product. These instructions contain specific diagrams and steps for correct assembly.
3. **Assemble Legs:** Attach the solid birch legs to the tabletop using the provided fittings. Ensure each leg is securely

fastened.

4. **Install Drawer:** Follow the instructions for installing the drawer, ensuring the safety lock mechanism is correctly engaged.
5. **Final Check:** Once assembled, gently test the desk for stability. Tighten any loose fittings if necessary.



Image 1: The assembled Ikea Lisabo desk, showcasing its ash veneer tabletop and solid birch legs. This image provides a visual reference for the final product after successful assembly.

4. OPERATING INSTRUCTIONS

The Lisabo desk is designed for various uses, including work, study, and computer use.

- **Drawer Use:** The integrated drawer is suitable for storing small items or a laptop up to 14 inches. The safety lock prevents the drawer from being pulled out completely, ensuring contents remain secure and preventing accidental detachment.
- **Surface Use:** The ash veneer tabletop provides a durable surface for daily activities. The protective lacquer enhances durability and preserves the natural wood structure.
- **Placement:** Position the desk in a location that supports its intended use, ensuring adequate space for movement and access.

5. MAINTENANCE AND CARE

Proper care will help maintain the appearance and extend the lifespan of your Lisabo desk.

- **Cleaning:** Wipe the desk surface with a damp cloth using a mild detergent. Follow with a dry cloth to remove any moisture. Avoid abrasive cleaners or harsh chemicals that could damage the finish.

- **Spills:** Immediately wipe up any spills to prevent staining or damage to the wood veneer.
- **Heat and Moisture:** Avoid placing hot items directly on the surface. Use coasters or protective pads. Protect the desk from excessive moisture or prolonged exposure to direct sunlight, which can cause fading or warping.
- **Periodic Checks:** Periodically check all fittings and tighten them if necessary to ensure the desk remains stable.

6. TROUBLESHOOTING

If you encounter issues with your Lisabo desk, consider the following:

- **Wobbling Desk:**
 - Ensure the desk is on a level surface.
 - Check all leg fittings and tighten any that are loose.
- **Drawer Not Functioning Smoothly:**
 - Verify that the drawer runners are clean and free of obstructions.
 - Ensure the drawer is correctly seated in its tracks.
- **Damage During Assembly:** If any part appears damaged or does not fit correctly, do not force it. Contact customer support for assistance or replacement parts.

7. SPECIFICATIONS

Ikea Lisabo Desk (Model LISABO)

Brand	Ikea
Model Number	LISABO
Dimensions (L x W x H)	118 cm x 45 cm x 74 cm (46.5 in x 17.7 in x 29.1 in)
Maximum Load	50 kg (110 lbs)
Materials	Ash veneer tabletop, Solid birch legs
Color	Beige
Recommended Use	Work, study, computer use
Care Instructions	Wipe with a damp cloth and mild detergent, then dry with a clean cloth.

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, replacement parts, or further assistance, please contact Ikea customer service. Keep your proof of purchase for any warranty claims.

You can find contact details for Ikea customer support on their official website or through the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01FOW2I9Y>

More documents and user manuals: **<https://manuals.plus/>**