

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SadoTech](#) /

› [SadoTech Wireless Doorbell Instruction Manual](#)

## SadoTech ST-FX-ECBASE-USA

# SadoTech Wireless Doorbell Instruction Manual

Model: ST-FX-ECBASE-USA

Brand: SadoTech

---

## 1. SETUP GUIDE

---

### 1.1 Package Contents

The SadoTech Wireless Doorbell Kit includes the following components:

- 2 Wireless Doorbell Transmitters (Buttons)
- 2 Plug-in Smart Doorbell Receivers (Chimes)
- Double-sided Mounting Tape
- Anchors and Screws
- 1 A23 Battery (for transmitter)



Image: The complete SadoTech Wireless Doorbell Kit, showing two transmitters, two receivers, and all included mounting hardware.

## 1.2 Installation

The SadoTech Wireless Doorbell is designed for quick and frustration-free installation without the need for complex wiring.

1. **Receiver Placement:** Plug the doorbell receivers into any standard electrical outlet within your home, office, or warehouse. Ensure they are placed where the chime can be heard throughout the desired area.
2. **Transmitter Mounting:** Choose a suitable location for the wireless doorbell transmitter (button) near your door. The transmitter can be attached using the provided double-sided mounting tape for easy relocation or secured permanently with the included anchors and screws.



Image: A SadoTech wireless doorbell receiver plugged into a standard electrical outlet, ready for use.



Never compromise  
your family's security  
with SadoTech's  
Crosspoint Alert System

- configurable & expandable doorbell system
- multiple receivers
- Built in receiver memory

Image: A SadoTech wireless doorbell transmitter being mounted on a surface using adhesive tape. The doorbell system offers an impressive range of over 1000 feet in open areas and is proven to work effectively through doors and walls, making it suitable for large homes, apartments, offices, and warehouses.

## 2. OPERATING INSTRUCTIONS

### 2.1 Basic Operation

To activate the doorbell, simply press the button on the transmitter. The receiver will then play the selected chime tone, and its LED indicator will illuminate.

# Sadotech Wireless Doorbells

## Stylish and High Quality Home Security



Image: A close-up of the SadoTech wireless doorbell transmitter, highlighting the button and LED light indicator when pressed.

## 2.2 Adjusting Volume and Chime Tones

The SadoTech Wireless Doorbell offers 4 adjustable volume levels and a selection of 52 total ringtones, including 35 chime tones and 17 music tones. The memory chip stores your chosen selections even when unplugged or turned off.

To adjust the volume, press the volume button on the receiver. To cycle through the available chime and music tones, use the up/down buttons on the receiver.

Your browser does not support the video tag.

Video: This video demonstrates the four volume levels and various chime tones available on the SadoTech Wireless Doorbell. It shows how to cycle through different volume settings and listen to a selection of the 52 available melodies.

## 2.3 Pairing Additional Units

This system is expandable, allowing multiple receivers to be configured with different chimes or ringtones to indicate which transmitter was triggered. For detailed instructions on pairing additional units or configuring specific chimes for different doors, please refer to the comprehensive user guide PDF available online.

## 3. MAINTENANCE

### 3.1 Battery Replacement

The wireless doorbell transmitter uses an A23 battery, which can last up to 3 years. When the transmitter's LED indicator no longer lights up or the signal becomes weak, it's time to replace the battery. A small Phillips screwdriver may be required to open the battery compartment.

### 3.2 Cleaning

To clean the doorbell units, wipe them with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals, as these can damage the finish or internal components.

### 3.3 Weather Resistance

The SadoTech doorbell transmitter is designed to be waterproof and weatherproof, capable of withstanding temperatures from -4°F to 140°F (-20°C to 60°C). This ensures reliable operation in various outdoor conditions.



Image: A SadoTech wireless doorbell transmitter being tested under running water, demonstrating its waterproof design.

## 4. TROUBLESHOOTING

If you encounter issues with your SadoTech Wireless Doorbell, try the following troubleshooting steps:

- **No Chime Sound:** Ensure the receiver is properly plugged into a working electrical outlet. Check the volume level on the receiver. If the transmitter LED does not light up when pressed, replace the A23 battery.

- **Inconsistent Operation:** Verify that the transmitter and receiver are within the effective operating range. While the system has a long range, extreme distances or multiple thick walls can sometimes interfere with the signal.
- **Incorrect Chime for Multiple Units:** If you are using multiple receivers and transmitters, ensure they are paired correctly. When pairing, it is recommended to plug in and pair one receiver at a time to avoid unintended pairings. If units are incorrectly paired, reset the receivers and re-pair them individually.
- **Button Not Responding:** Check the transmitter battery. Ensure the button is not stuck or obstructed.

## 5. SPECIFICATIONS

Feature	Detail
Model Number	ST-FX-ECBASE-USA
Item Weight	11.7 ounces
Package Dimensions	7.13 x 3.74 x 3.11 inches
Color	White
Material	ABS Plastic
Coverage (Range)	Up to 1000 feet (open area)
Number Of Pieces	1 (Kit)
Volume Levels	4
Chime Tones	52 Total (35 Chime, 17 Music)
Weatherproof Rating	Suitable for -4°F to 140°F (-20°C to 60°C)

## 6. WARRANTY AND SUPPORT

SadoTech products are designed for durability and reliability. This product typically comes with a 30-day return policy. For specific warranty details and to access customer support, please refer to the official SadoTech website or contact their customer service directly.

For a more detailed user guide, you can download the PDF version here: [SadoTech Wireless Doorbell User Manual \(PDF\)](#)