

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Giantex](#) /
- › Giantex Portable Basketball Hoop (Model SP34956) Instruction Manual

## Giantex SP34956

# Giantex Portable Basketball Hoop Instruction Manual

Model: SP34956

## INTRODUCTION

---

Thank you for choosing the Giantex Portable Basketball Hoop. This manual provides essential information for the safe assembly, operation, and maintenance of your basketball system. Please read all instructions carefully before use to ensure proper setup and to maximize the lifespan of your product.



Figure 1: Giantex Portable Basketball Hoop in use. This image shows the basketball hoop set up outdoors, demonstrating its use for recreational play.

## SAFETY INFORMATION

---

- Always ensure the base is filled with water or sand to the recommended capacity before use to prevent tipping.
- Do not hang on the rim or backboard. This can cause serious injury and damage the product.
- Regularly inspect all bolts, nuts, and connections to ensure they are tight and secure.
- Keep children away from the unit during assembly and adjustment.
- Do not use the product in strong winds or severe weather conditions. Secure or lay down the unit if necessary.
- Ensure the playing area is clear of obstacles and hazards.
- Recommended age of users: 8+. Adult supervision is advised for younger users.

## PARTS LIST

---

Before beginning assembly, ensure all parts listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Basketball Hoop Assembly (Rim and Net)
- Backboard
- Main Pole Sections
- Base with Wheels
- Support Brackets and Hardware (bolts, nuts, washers)
- Adjustment Mechanism
- 2 Nylon Nets (included)



Figure 2: Key Components Overview. This image highlights the shatterproof PE backboard, the secure screw fixation, the sturdy rim with durable nets, and the thickened, rustproof steel pole.

Follow these steps carefully for proper assembly.

1. **Assemble the Pole Sections:** Connect the main pole sections according to the provided hardware. Ensure all connections are tight and secure.
2. **Attach the Backboard:** Securely attach the backboard to the upper pole section using the provided screws and brackets. Ensure the backboard is firmly fixed and does not wobble.
3. **Install the Rim and Net:** Attach the rim to the backboard using the designated hardware. Then, attach the nylon net to the rim.
4. **Connect Pole to Base:** Insert the assembled pole into the base. Ensure it is properly seated and secured.
5. **Fill the Base for Stability:** The base must be filled with either water or sand for stability. The base can hold approximately 55 lbs of water or 66 lbs of sand. This step is crucial to prevent the hoop from tipping over during use.
6. **Adjust Height:** Use the height adjustment mechanism on the pole to set the desired height between 5.8 feet and 6.8 feet. Ensure the adjustment knobs are securely tightened after setting the height.

## Stable Base

*Can be filled with water or sand for extra stability*



Figure 3: Base Filling for Stability. The base features a triangular structure and can be filled with 55 lbs of water or 66 lbs of sand to ensure maximum stability during play.



Figure 4: Backboard Screw Fixing. This detail shows the robust screw fixing that ensures the backboard is securely attached and not prone to breaking.

## OPERATING INSTRUCTIONS

1. **Height Adjustment:** To change the hoop height, loosen the adjustment knobs on the pole, slide the upper pole section to the desired height (between 5.8 ft and 6.8 ft), and then securely tighten the knobs.
2. **Portability:** The base is equipped with two built-in transport wheels. To move the hoop, tilt the unit slightly and roll it to your desired location. Ensure the base is stable before playing.

## Grow with Your Kids

Adjustable Rim Height from 5.8ft to 6.8ft



Easy Adjustment



Figure 5: Adjustable Height Feature. This graphic demonstrates how the rim height can be adjusted from 5.8 feet to 6.8 feet, accommodating various users, with an easy-to-use adjustment mechanism.

## Easy Movement

*2 built-in transport wheels allow you to move it anywhere with ease*



Figure 6: Easy Movement with Wheels. The base includes two built-in transport wheels, allowing the basketball hoop to be easily moved to different locations.

## MAINTENANCE

- **Regular Inspection:** Periodically check all bolts, nuts, and connections for tightness. Tighten any loose hardware to maintain stability and safety.
- **Base Content:** Ensure the base remains filled with water or sand. Refill as needed, especially after moving the unit or if leaks are detected.
- **Cleaning:** Clean the backboard, pole, and base with a mild soap and water solution. Avoid abrasive cleaners that could damage the finish.
- **Weather Protection:** Although designed for weather resistance, prolonged exposure to extreme weather conditions (heavy rain, snow, strong winds, intense sun) can affect the product's lifespan. Consider storing indoors or covering during harsh weather.
- **Net Replacement:** The nylon net is weather-resistant but may wear over time. Replace the net if it becomes damaged or frayed.



Figure 7: Weather-Resistant Net. The durable nylon net is designed to withstand various weather conditions, ensuring a long service life.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Hoop is unstable or tips easily.	Base not sufficiently filled; loose connections.	Ensure the base is completely filled with 55 lbs of water or 66 lbs of sand. Check and tighten all bolts and nuts.
Backboard or rim wobbles excessively.	Loose mounting hardware; damaged components.	Inspect all screws and bolts connecting the backboard and rim to the pole. Tighten as necessary. If components are damaged, contact customer support.
Height adjustment mechanism is stuck or difficult to operate.	Dirt or debris in the mechanism; overtightened knobs.	Clean the adjustment area. Loosen knobs sufficiently before attempting to adjust. Apply a silicone-based lubricant if needed.

## SPECIFICATIONS

Feature	Detail
Brand	Giantex
Model Number	SP34956
Material	PVC, Steel, Nylon
Product Dimensions (D x W x H)	29" x 21.5" x 84"
Backboard Size	28 inches (width)
Adjustable Height Range	5.8 ft - 6.8 ft (70 inches - 84 inches)
Base Capacity	Approx. 55 lbs water or 66 lbs sand
Mounting Type	Freestanding

Feature	Detail
Usage Environment	Indoor, Outdoor
Special Feature	Adjustable Height, Portable with Wheels

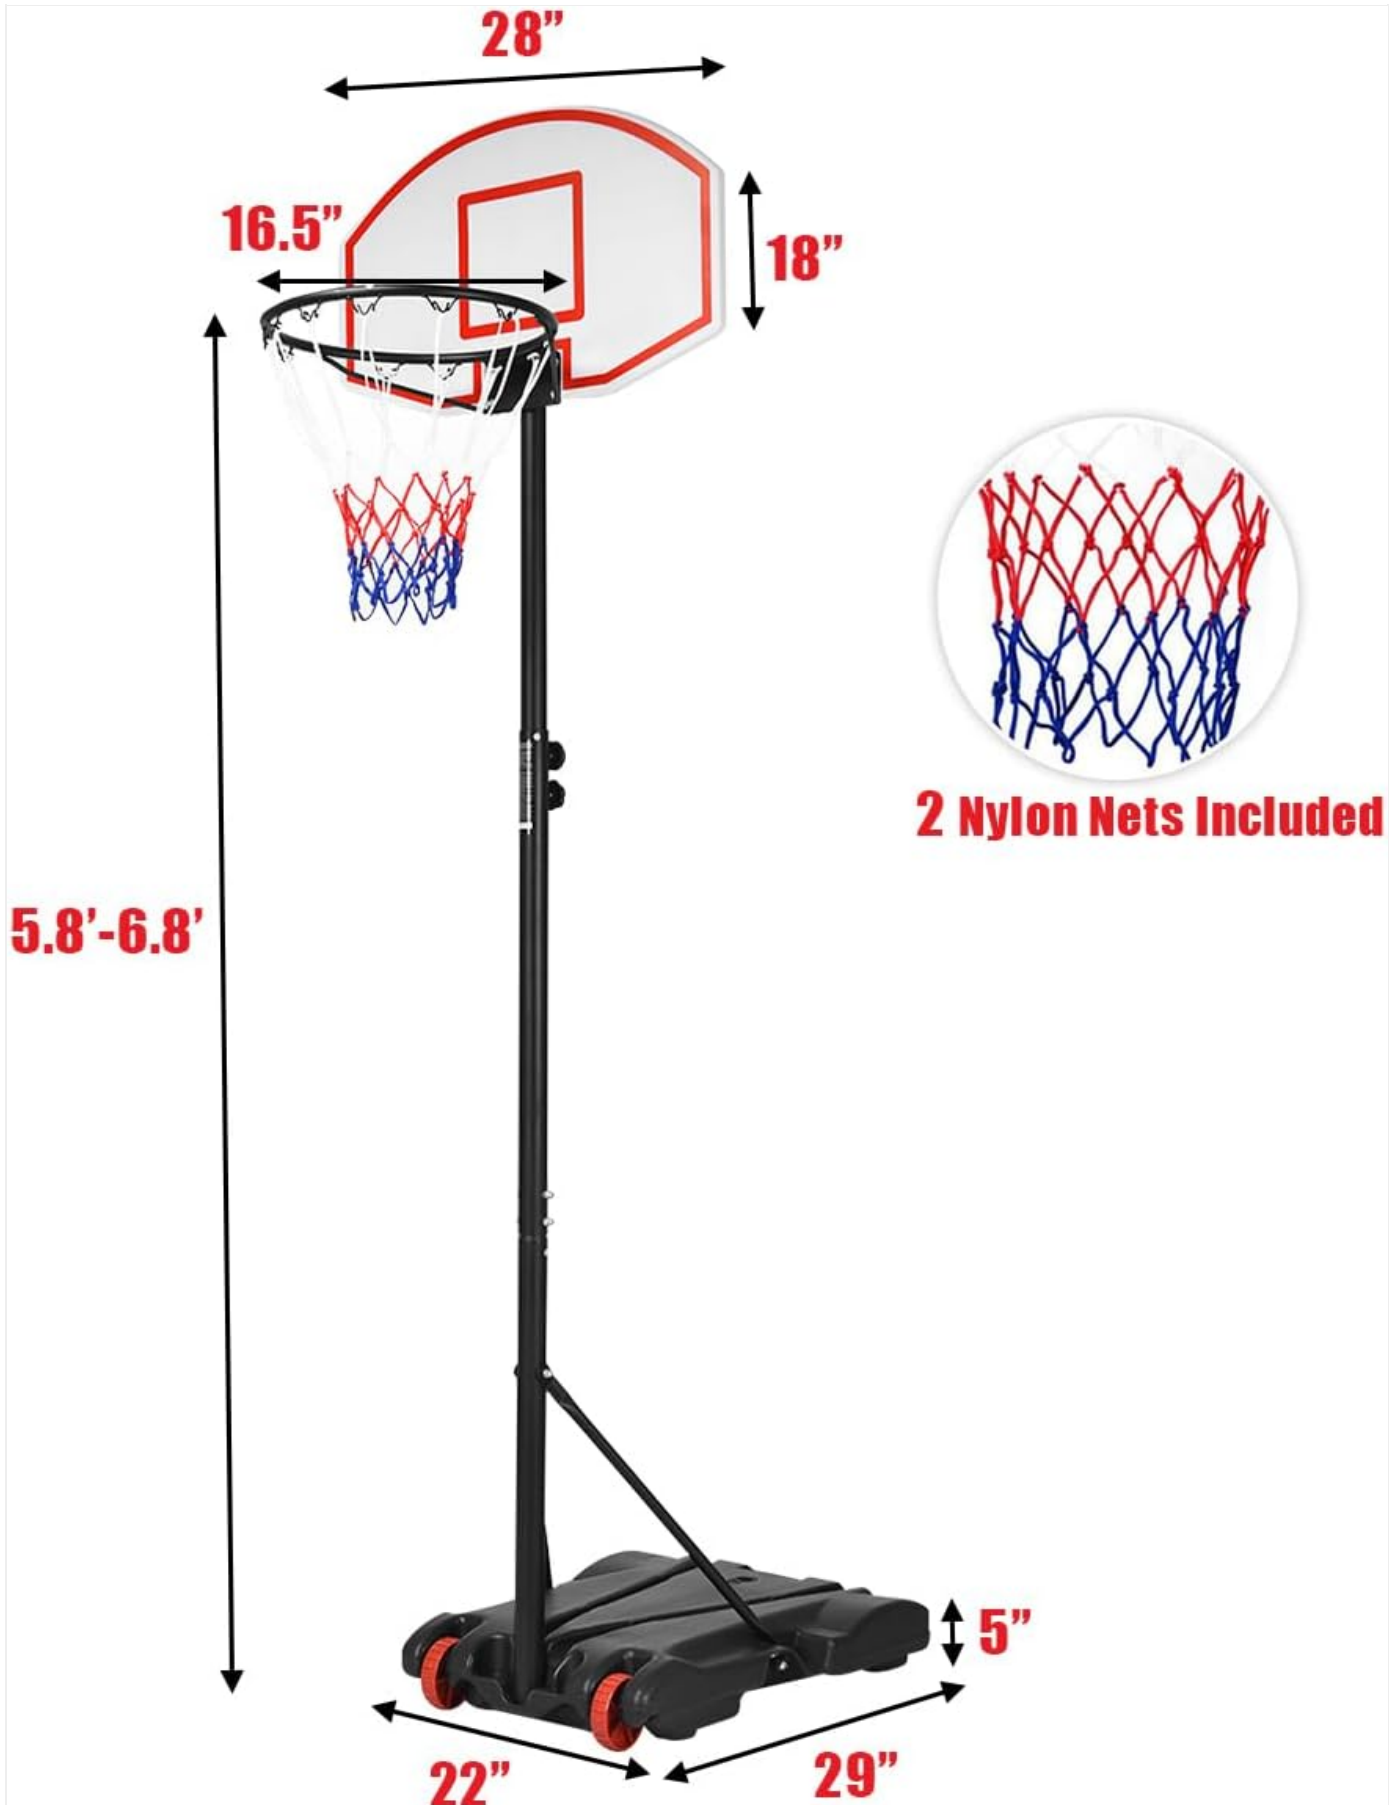


Figure 8: Product Dimensions. This diagram provides a clear overview of the basketball hoop's key measurements, including the 28-inch backboard and the 5.8 to 6.8 feet adjustable height range.

## WARRANTY AND SUPPORT

---

No specific warranty information is provided with this product. For any questions, missing parts, or assistance, please refer to the retailer's customer service or the manufacturer's official website.

Manufacturer: Giantex

Model Number: SP34956

