

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TOPMOVE](#) /

› [TOPMOVE Rolling Travel Bag, Red - Instruction Manual](#)

TOPMOVE Rolling Travel Bag B01FSLASC0

TOPMOVE Rolling Travel Bag, Red - Instruction Manual

Model: B01FSLASC0

INTRODUCTION

Thank you for choosing the TOPMOVE Rolling Travel Bag. This manual provides essential information for the proper setup, operation, and maintenance of your new travel bag. Please read these instructions carefully before first use and retain them for future reference.



SETUP

Unpacking

Remove the travel bag from its packaging. Inspect the bag for any signs of damage during transit. If any damage is found, do not use the product and contact customer support.

Initial Inspection

- Verify that all zippers operate smoothly.
- Check the telescopic handle for proper extension and retraction.
- Ensure the wheels rotate freely.

OPERATING INSTRUCTIONS

Extending the Telescopic Handle

1. Locate the button on the top of the handle.
2. Press and hold the button.
3. Pull the handle upwards until it locks into the desired extended position (up to approximately 102.5 cm).
4. Release the button.

Retracting the Telescopic Handle

1. Press and hold the button on the top of the handle.
2. Push the handle downwards until it is fully retracted.
3. Release the button.

Packing the Main Compartment

The main compartment offers a spacious 68-liter capacity. Distribute weight evenly to maintain balance when rolling. Utilize the various exterior compartments for smaller items requiring quick access.

Using Carrying Handles

The bag features two top handles and one side carrying handle for easy lifting and carrying when rolling is not feasible.

CARE AND MAINTENANCE

Cleaning

- Wipe the exterior fabric with a damp cloth and mild soap.
- Do not use harsh chemicals or abrasive cleaners.
- Allow the bag to air dry completely before storage.

Wheel Maintenance

Periodically check the skater wheels for debris. Clean any obstructions to ensure smooth rolling. The wheels are designed with edge protection for durability.

Storage

Store the bag in a cool, dry place away from direct sunlight when not in use.

TROUBLESHOOTING

Telescopic Handle Sticks

- Ensure the release button is fully pressed.
- Check for any obstructions in the handle mechanism.
- Gently wiggle the handle while pressing the button to free it.

Wheels Not Rolling Smoothly

- Inspect wheels for trapped dirt, hair, or debris. Clean as necessary.
- Ensure the bag is not overloaded beyond its capacity, which can strain the wheels.

Zipper Malfunction

- Check for fabric caught in the zipper teeth. Gently pull the fabric away.
- Apply a small amount of zipper lubricant (e.g., wax or silicone spray) if the zipper is stiff.

SPECIFICATIONS

Feature	Detail
Model	B01FSLASC0
Brand	TOPMOVE
Color	Red
Capacity	Approx. 68 Liters
Dimensions (W x H x D)	Approx. 30 x 31 x 73 cm
Weight	Approx. 2.3 kg
Handle Type	Telescopic (Extendable up to 102.5 cm)
Wheels	2 Skater Wheels with Edge Protection
Water Resistance	Not Waterproof
Features	Reinforced bottom, durable fabric, spacious main compartment, multiple exterior compartments, 2 top handles, 1 side handle, protective rails on back.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

For general inquiries, please visit the official TOPMOVE website or contact their customer service department.