

SKROSS 1.103175

SKROSS PRO World Travel Adapter (Model 1.103175) Instruction Manual

Brand: SKROSS | Model: 1.103175

INTRODUCTION

The SKROSS PRO World Travel Adapter is designed to provide a reliable mains connection for your electronic devices when traveling internationally. This adapter is compatible with 2-pole and 3-pole earthed plugs, ensuring your tablets, cameras, and other devices remain powered across various global destinations. It is important to note that this adapter does not convert voltage.

PRODUCT FEATURES

- Universal compatibility for 2-pole and 3-pole earthed plugs.
- Integrated fuse for enhanced safety.
- Retractable plugs for various international standards (USA, UK, Europe, Australia/China).
- Compact and lightweight design for portability.
- Designed in Switzerland.

SETUP AND INSTALLATION

Before using the SKROSS PRO World Travel Adapter, ensure your device's voltage is compatible with the local power supply. This adapter does not convert voltage.

1. **Identify the Required Plug Type:** Determine the plug standard for your travel destination. The adapter features sliders on its side to extend the appropriate pins.
2. **Extend the Correct Plug:** Gently slide the corresponding button on the side of the adapter to extend the desired plug pins (e.g., USA, UK, Europe, Australia/China). Ensure the pins are fully extended and locked into place.
3. **Connect Your Device:** Plug your device's power cord into the universal socket on the front of the adapter. The adapter accommodates both 2-pole and 3-pole earthed plugs.
4. **Insert into Wall Socket:** Carefully insert the extended adapter plug into the wall socket.

5. **Using the PRO World Adapter with the PRO Light USB (if applicable):** If you have the PRO Light USB attachment (sold separately), it can be connected to the universal socket of the PRO World Adapter to provide additional USB charging ports.



Figure 1: Front view of the SKROSS PRO World Travel Adapter.



Figure 2: Top view showing the universal socket for device connection.

OPERATING INSTRUCTIONS

The SKROSS PRO World Travel Adapter is straightforward to operate once correctly set up.

1. **Powering Devices:** After inserting the adapter into the wall socket and your device into the adapter, power will be supplied to your device.
2. **Changing Plug Types:** To change the plug type, first unplug the adapter from the wall socket. Then, retract the currently extended pins by sliding their respective buttons back. Extend the new desired

plug pins as described in the Setup section.



Figure 3: Adapter with USA plug extended.

-K
SKROSS®
ADAPT TO THE WORLD

DESIGNED IN SWITZERLAND

THE ORIGINAL

**PRO
WORLD**

WORLD TRAVEL ADAPTER



SUITABLE FOR
FOR
2-POLE
AND
3-POLE
EARTHED
PLUGS



Download on the
App Store

GET IT ON
Google play

FOR TRAVELLERS FROM AND TO
MORE THAN 220 COUNTRIES

Figure 5: Adapter with EU plug extended.



Figure 6: Side view illustrating the plug selection sliders.

MAINTENANCE

- **Cleaning:** Clean the adapter with a dry, soft cloth. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place when not in use. Ensure all plug pins are retracted before storage.
- **Fuse Replacement:** The adapter features an integrated fuse. If the adapter stops functioning, the fuse may need replacement. Refer to the detailed instructions provided with the product for fuse replacement procedures.

TROUBLESHOOTING

Device not powering on:

- Ensure the adapter is fully inserted into the wall socket.
- Verify that your device's plug is securely inserted into the adapter's universal socket.
- Check if the correct plug type for the region is fully extended and locked.
- Confirm that your device's voltage is compatible with the local power supply (the adapter does not convert voltage).

- Inspect the adapter's fuse. If blown, replace it according to the manufacturer's instructions.

Adapter feels loose in the wall socket:

- Some wall sockets may be worn or have a loose fit. If the adapter feels unstable, consider using a different socket or providing support to prevent it from falling out.

SPECIFICATIONS

Model Number	1.103175
Product Dimensions (L x W x H)	2.8 x 2.6 x 2.2 inches
Item Weight	6.4 ounces
Input Voltage	250 Volts
Color	White
Manufacturer	Skross

WARRANTY AND SUPPORT

For warranty information, technical support, or inquiries regarding your SKROSS PRO World Travel Adapter, please refer to the documentation included in the product packaging or visit the official SKROSS website. Contact details for customer service are typically available on the manufacturer's website.