

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Electrolux](#) /

› [Electrolux Front Load Washer and Dryer Stacking Kit STACKIT7X Instruction Manual](#)

Electrolux STACKIT7X

Electrolux Front Load Washer and Dryer Stacking Kit Instruction Manual

Model: STACKIT7X | Brand: Electrolux

INTRODUCTION

This instruction manual provides detailed guidance for the safe and correct installation of your Electrolux Front Load Washer and Dryer Stacking Kit, Model STACKIT7X. This kit is designed to maximize your laundry space by securely stacking a compatible Electrolux front-load dryer on top of a front-load washer. Please read all instructions carefully before beginning installation.

IMPORTANT SAFETY INFORMATION

- **Do not attempt installation with one person.** Incorrect installation procedures can cause serious accidents and physical injuries.
- The weight of the dryer and the height of installation make the stacking procedure too risky for one person. This procedure should be performed by **two or more experienced service personnel**.
- To reduce the risk of injury to persons, adhere to all industry-recommended safety procedures including the use of long-sleeved gloves and safety glasses.
- Ensure the washer is placed firmly on a stable, even, and solid floor as described in its owner's manual before stacking.
- Do not use this stacking kit with a gas dryer in potentially unstable conditions like a mobile home.
- Avoid pinching fingers between the washer and dryer during placement.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- 2 x Side Brackets (metal)
- 1 x Front Bracket (metal)

- 1 x Bag of Self-Tapping Screws



Figure 1: Components of the Electrolux stacking kit, including two long metal side brackets, a shorter front metal bracket, and a bag of screws.

SETUP AND INSTALLATION

Follow these steps carefully to install the stacking kit and stack your appliances:

1. **Prepare the Washer:** Ensure your front-load washer is firmly placed on a stable, even, and solid floor. Refer to your washer's owner's manual for proper placement and leveling.
2. **Attach Side Brackets:**
 - Peel the protective paper off the adhesive tape located on the underside of one side bracket.
 - Firmly attach this side bracket to one side of the washer's top plate. Ensure it is aligned correctly.
 - Repeat this process for the second side bracket on the opposite side of the washer's top plate.
 - Secure each side bracket to the washer by inserting a self-tapping screw through the designated hole on the back of the bracket. If no existing holes are present, the self-tapping screws will create them. Increase the torque on the screwdriver at first, then lower it to avoid stripping the screw while tightening.
3. **Place the Dryer:** With the assistance of at least one other person, carefully lift the dryer and place it on top of the washer. Ensure the dryer's feet fit securely into the designated slots on the installed side brackets. Slide the dryer slowly backwards until it rests against the stopper of the kit. **Be careful not to pinch fingers between the washer and dryer.**
4. **Install Front Bracket:** Insert the front stacking kit (the shorter metal piece) into the front of the side stacking brackets. Push it back until it aligns with the stoppers of the side stacking kit.
5. **Secure Front Bracket:** Screw the front bracket into place on both sides using the remaining self-tapping screws.

Your browser does not support the video tag.

Video 1: A visual guide demonstrating the assembly and installation process of a universal washer dryer stacking kit,

including connecting components and placing the dryer.

Your browser does not support the video tag.

Video 2: This video illustrates the step-by-step assembly of a universal 29-inch washer dryer stacking kit, showing how to connect the frame and secure it for stacking.

OPERATION

Once the Electrolux stacking kit is correctly installed, your washer and dryer can be operated as usual. The kit provides a stable platform for the dryer, allowing for efficient use of space. Always ensure both appliances are properly loaded and balanced before starting a cycle to minimize vibration.

MAINTENANCE

Periodically inspect the stacking kit for any signs of wear, damage, or loosening of screws. Ensure the dryer remains securely seated on the kit. Clean the kit components with a soft, damp cloth as needed. Avoid abrasive cleaners that could damage the finish.

TROUBLESHOOTING

- **Wobbling/Vibration:** If the stacked appliances wobble or vibrate excessively, first ensure both the washer and dryer are perfectly level. Check that all screws on the stacking kit are securely tightened. Verify that the dryer's feet are correctly seated in the kit's slots.
- **Missing Parts:** If any parts are missing upon arrival, contact Electrolux customer support immediately for assistance.
- **Dryer Not Fitting:** Ensure your washer and dryer models are compatible with the STACKIT7X kit. While designed for Electrolux front-load models, specific dimensions may vary.

SPECIFICATIONS

Brand	Electrolux
Model Number	STACKIT7X
Product Dimensions	31 x 1 x 10 inches
Item Weight	10.4 ounces
Material	Stainless Steel

WARRANTY INFORMATION


This Electrolux Front Load Washer and Dryer Stacking Kit comes with a **1 Year Manufacturer Warranty**. For specific terms and conditions, please refer to the warranty documentation included with your purchase or contact Electrolux customer support.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty claims, please visit the official Electrolux website or contact their customer service department. Have your product model number (STACKIT7X) and purchase information ready when contacting support.

Related Documents - STACKIT7X

	<p>Electrolux Front Load Dryer Installation Guide</p> <p>Step-by-step installation instructions for Electrolux front load dryers, covering essential safety warnings, venting, water, gas, and electrical connections, leveling, and a final checklist.</p>
	<p>Electrolux Washer Quick Start Guide</p> <p>Get started quickly with your new Electrolux front-load washer. This guide provides essential setup, operation, and care instructions, including FAQs and cycle explanations.</p>
	<p>Electrolux Front Load Washer Use & Care Guide</p> <p>Comprehensive guide for operating, caring for, and maintaining your Electrolux front load washer. Includes safety instructions, features, troubleshooting, and warranty information.</p>
	<p>Electrolux 8.0 Cu. Ft. Front Load Gas Dryer ELFG7637AT, ELFG7637AW Specifications</p> <p>Detailed specifications and dimensions for the Electrolux 8.0 Cu. Ft. Front Load Gas Dryer, models ELFG7637AT and ELFG7637AW, including features, cycles, options, electrical requirements, and certifications.</p>
	<p>Electrolux Front Load Washer Use & Care Guide</p> <p>A comprehensive guide for operating, caring for, and troubleshooting your Electrolux front load washer. Learn about safety instructions, features, cycles, settings, stain removal, and maintenance.</p>

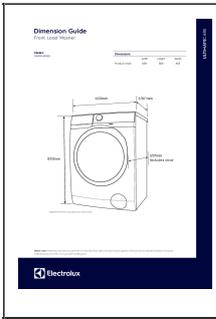

[Electrolux EWF1141R9SB Front Load Washer Dimension Guide](#)

Detailed dimension guide for the Electrolux EWF1141R9SB front load washer, including width, height, depth, and door clearance. Essential information for installation planning.