

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Beetel](#) /
- › [Beetel M64 Caller ID Landline Phone User Manual](#)

Beetel M-64

Beetel M64 Caller ID Landline Phone User Manual

Model: M-64

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Beetel M64 Caller ID Landline Phone. Designed for clarity and ease of use, the M64 features a 16-digit adjustable LCD display, a 2-way adjustable speakerphone, and extensive call memory capabilities. Please read this manual thoroughly to ensure optimal performance and longevity of your device.



Figure 1: Beetel M64 Caller ID Landline Phone. This image shows the black corded phone with its handset resting on the base. The blue backlit LCD screen is visible, along with the numeric keypad and various function buttons for call management and memory storage.

SETUP

1. Unpacking

Carefully remove all components from the packaging. Ensure the following items are present:

- Beetel M64 Phone Base
- Handset
- Coiled Handset Cord
- Telephone Line Cord
- User Manual (this document)
- 2 AA Batteries (for LCD display and memory retention)

2. Battery Installation

The M64 requires 2 AA batteries to power the LCD display and retain call memory during power outages. Locate the battery compartment on the underside of the phone base. Insert 2 AA batteries, observing the correct polarity (+/-) as indicated inside the compartment. Close the battery cover securely.

3. Connecting the Phone

1. Connect one end of the coiled handset cord to the handset and the other end to the port labeled **HANDSET** on the side of

- the phone base.
2. Connect one end of the telephone line cord to the port labeled **LINE** on the back of the phone base.
 3. Connect the other end of the telephone line cord to your wall telephone jack.
 4. Ensure all connections are secure.

Upon successful connection, the LCD display should illuminate, and the phone will be ready for initial setup.

OPERATING INSTRUCTIONS

1. Basic Functions

- **Making a Call:** Lift the handset or press the **SPEAKER** button, then dial the desired number.
- **Answering a Call:** When the phone rings, lift the handset or press the **SPEAKER** button.
- **Ending a Call:** Place the handset back on the cradle or press the **SPEAKER** button again if using speakerphone.
- **Redial:** Press the **REDIAL** button to call the last dialed number.
- **Mute:** During a call, press the **MUTE** button to temporarily disable your microphone. Press again to unmute.
- **Flash:** Use the **FLASH** button for call waiting or transferring calls (requires service from your telephone provider).

2. LCD Display and Settings

The 16-digit LCD display shows caller ID information, time, date, and menu options. Use the **UP/DOWN** navigation buttons (indicated as UP/V- and DN/V+ in the OCR) to scroll through menus and adjust settings.

- **Setting Date and Time:** Press **SET/EXT** to enter the settings menu. Use **UP/DOWN** to navigate to Date/Time settings. Press **SET/EXT** again to select, then use the keypad to enter values and **SET/EXT** to confirm.
- **LCD Display Adjustment:** The display angle can be adjusted for better viewing. Gently tilt the display panel to your preferred angle.

3. Caller ID and Call Memory

The M64 stores up to 99 incoming calls and 18 outgoing calls. (Note: Caller ID service must be subscribed from your local telephone company).

- **Viewing Incoming Calls:** In idle mode, use the **UP/DOWN** buttons to scroll through the incoming call list.
- **Viewing Outgoing Calls:** In idle mode, press **OUT** (or a similar button if available, based on OCR "OUT") to view outgoing calls. Use **UP/DOWN** to scroll.
- **Dialing from Memory:** While viewing a number in the incoming or outgoing call list, lift the handset or press **SPEAKER** to dial the displayed number.
- **Deleting Call Records:** While viewing a specific call record, press the **DEL** button to delete it.

4. One-Touch Memory Dialing

The phone features 3 one-touch memory buttons (M1, M2, M3, based on OCR). These allow for quick dialing of frequently used numbers.

- **Storing a Number:**
 1. Press **STORE**.
 2. Dial the phone number you wish to store.
 3. Press **STORE** again.
 4. Press the desired one-touch memory button (**M1**, **M2**, or **M3**). The number is now stored.
- **Dialing a Stored Number:** In idle mode, simply press the desired one-touch memory button (**M1**, **M2**, or **M3**). The phone will automatically dial the stored number.

5. Speakerphone Function

The 2-way adjustable speakerphone allows for hands-free communication.

- **Activating Speakerphone:** Press the **SPEAKER** button (orange button with speaker icon) to make or answer calls hands-free.
- **Adjusting Speaker Volume:** During a speakerphone call, use the **UP/DOWN** buttons to adjust the speaker volume.
- **Switching to Handset:** During a speakerphone call, simply lift the handset to switch to private conversation.

MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the phone's surface. Do not use abrasive cleaners or solvents.
- **Location:** Place the phone on a stable, flat surface away from direct sunlight, heat sources, and excessive moisture.
- **Battery Replacement:** If the LCD display becomes dim or memory functions are lost during a power outage, replace the 2 AA batteries.
- **Cord Care:** Avoid tangling or stretching the coiled handset cord and telephone line cord excessively to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone.	Telephone line cord is disconnected or faulty.	Ensure the telephone line cord is securely connected to the phone base and the wall jack. Test with another phone if possible.
LCD display is blank or dim.	Batteries are low or incorrectly installed.	Check battery polarity. Replace the 2 AA batteries.
Caller ID not displayed.	Caller ID service not subscribed or active.	Contact your telephone service provider to ensure Caller ID service is active on your line.
Cannot hear caller on speakerphone.	Speaker volume is too low.	During a speakerphone call, press the UP/DOWN buttons to increase volume.
Cannot store one-touch memory numbers.	Incorrect storage procedure.	Follow the "Storing a Number" steps precisely as outlined in the "One-Touch Memory Dialing" section.

SPECIFICATIONS

- **Model:** M-64
- **Brand:** Beetel
- **Telephone Type:** Corded Landline Phone
- **Display:** 16-Digit Adjustable LCD Display
- **Caller ID:** Yes (requires subscription)
- **Speakerphone:** 2-Way Adjustable Speaker Phone
- **Incoming Call Memory:** 99 entries
- **Outgoing Call Memory:** 18 entries
- **One-Touch Memory:** 3 entries (M1, M2, M3)
- **Power Source:** Telephone Line Power, 2 x AA Batteries (for LCD/memory)
- **Color:** Black
- **Product Dimensions (L x W x H):** 7.87 x 2.95 x 5.91 inches (20 x 7.5 x 15 cm)



WICHTIG! **WAS SIE BEI DER WAHL IHRER UHRENBREITE BENÖTIGEN**

• Bitte lesen Sie diese Anweisungen sorgfältig durch, bevor Sie Ihre Uhr bestellen.
• Bitte lesen Sie die Bedienungsanleitung sorgfältig durch, bevor Sie Ihre Uhr verwenden.
• Bitte lesen Sie die Bedienungsanleitung sorgfältig durch, bevor Sie Ihre Uhr verwenden.
• Bitte lesen Sie die Bedienungsanleitung sorgfältig durch, bevor Sie Ihre Uhr verwenden.

WICHTIG! **QUELLE MASSE BEI CORRESPOND**

• Bitte lesen Sie diese Anweisungen sorgfältig durch, bevor Sie Ihre Uhr bestellen.
• Bitte lesen Sie die Bedienungsanleitung sorgfältig durch, bevor Sie Ihre Uhr verwenden.
• Bitte lesen Sie die Bedienungsanleitung sorgfältig durch, bevor Sie Ihre Uhr verwenden.

WICHTIG! **WICHTIG! BEI DER WAHL IHRER UHRENBREITE**

• Bitte lesen Sie diese Anweisungen sorgfältig durch, bevor Sie Ihre Uhr bestellen.
• Bitte lesen Sie die Bedienungsanleitung sorgfältig durch, bevor Sie Ihre Uhr verwenden.
• Bitte lesen Sie die Bedienungsanleitung sorgfältig durch, bevor Sie Ihre Uhr verwenden.

[Ice-Watch Sizing Guide: Find Your Perfect Fit](#)

A comprehensive guide to help you determine the correct size for your Ice-Watch, with detailed measurements and instructions in multiple languages.