

[Manuals.plus](#) /

› [Motorola](#) /

› Motorola SL300 VHF Radio User Manual

Motorola AAH88JCP9JA2AN

Motorola SL300 VHF Radio User Manual

Model: AAH88JCP9JA2AN

INTRODUCTION

The Motorola SL300 VHF Radio is designed for enhanced communication with its slim profile and long battery life, featuring Range Max functionality. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.



Front view of the Motorola SL300 VHF Radio, highlighting its compact design and clear display.

SETUP GUIDE

What's in the Box

- Lithium-ion battery
- Motorola SL300 VHF Radio Unit
- Charging Station
- Belt Clip

Initial Charging

Before first use, fully charge the radio's battery. Place the radio into the provided charging station. The indicator light on the charging station will illuminate to show charging status. A red light typically indicates charging, while a green light indicates a full charge. The radio may also provide an audible notification when placed in the charger.

OPERATING INSTRUCTIONS

Power On/Off

To power on the radio, press and hold the power button (usually marked with a power symbol) located on the top of the unit until the display illuminates. To power off, press and hold the same button until the display turns off.

Channel Selection

The SL300 supports up to 99 channels. Use the 'CH+' and 'CH-' buttons located on the top of the radio, near the power button, to cycle through available channels. The current channel number will be displayed on the screen.



A hand demonstrating the grip and visibility of the display and top controls on the Motorola SL300 radio.

Adjusting Volume

Volume controls are typically located on the side of the radio. Press the '+' button to increase volume and the '-' button to decrease volume. Adjust to a comfortable listening level.

Transmitting and Receiving

To transmit, press and hold the Push-To-Talk (PTT) button, usually located on the side of the radio, and speak clearly into the microphone. Release the PTT button to listen for a response. Ensure you are on the correct channel for communication.



A user operating the Motorola SL300 radio in an indoor environment, demonstrating practical use.

MAINTENANCE

Cleaning

Clean the radio's exterior with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure all ports are dry before charging or connecting accessories.

Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Store the radio in a cool, dry place when not in use for extended periods. Use only genuine Motorola batteries and charging accessories.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	Battery discharged or not properly inserted.	Charge the battery. Ensure battery is securely in place.
Cannot Transmit/Receive	Incorrect channel, out of range, or low battery.	Verify channel. Move closer to other radios. Charge battery.
Poor Audio Quality	Interference, weak signal, or microphone/speaker obstruction.	Move away from sources of interference. Check signal strength. Clear obstructions.

TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Motorola
Model Number	AAH88JCP9JA2AN
Item Weight	6 ounces
Product Dimensions	0.87 x 2.17 x 4.95 inches
Number of Channels	99
Frequency Range	VHF 136-174 MHz
Talking Range Maximum	1 Mile
Water Resistance Level	Waterproof
Voltage	3.7 Volts
Special Feature	Portable

WARRANTY AND SUPPORT

This Motorola product is covered by a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation included with your purchase or visit the official Motorola website.

For additional support, frequently asked questions, or to explore other Motorola products, please visit the [Motorola Store on Amazon](#).

Protection plans are available for extended coverage. Consider a 2-Year or 3-Year Protection Plan for added peace of mind.

© 2024 Motorola. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question