Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- AmazonBasics /
- > AmazonBasics Wireless Presenter P-001 User Manual

AmazonBasics P-001

AmazonBasics Wireless Presenter P-001 User Manual

Model: P-001 | Brand: AmazonBasics

Introduction

This manual provides instructions for the AmazonBasics Wireless Presenter, Model P-001. This device is designed to facilitate smooth navigation through presentations, offering intuitive controls and a bright red laser pointer.



Figure 1: AmazonBasics Wireless Presenter, showing its ergonomic design.

Key Features:

- · Wireless operation for freedom of movement.
- · Bright-red laser pointer for highlighting content.
- · Intuitive one-touch controls for presentation management.
- Plug-and-play USB receiver.
- Wireless range of up to 50 feet (15 meters).
- · Battery-power indicator light.
- · Contoured shape for comfortable handling.
- Includes a cushioned carrying case.

SETUP

1. Insert Batteries:

Locate the battery compartment on the back of the presenter. Open the compartment and insert the two



Figure 2: Battery compartment for AAA batteries.

2. Connect USB Receiver:

The wireless receiver is typically stored within the presenter itself. Gently slide it out. Plug the USB receiver into an available USB port on your computer. The presenter is plug-and-play, requiring no additional software installation.



Figure 3: USB receiver, ready to be plugged into a computer.

3. Power On:

Locate the On/Off switch on the presenter and slide it to the "On" position. The battery-power indicator light will briefly illuminate.

OPERATING INSTRUCTIONS

The AmazonBasics Wireless Presenter features intuitive controls for seamless presentation delivery.



Figure 4: Overview of the presenter's control buttons.

- On/Off Switch: Located on the side or bottom, use this to power the device on or off.
- Laser Pointer Button: Press and hold this button to activate the bright-red laser pointer. Release to turn off.

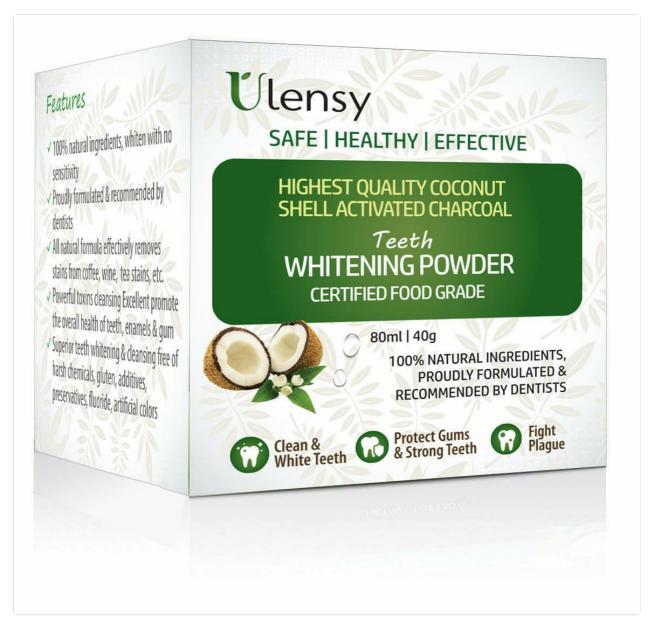


Figure 5: Demonstrating the bright red laser pointer.

- Forward/Backward Buttons: Use these buttons to navigate through your presentation slides.
- Start/End Button: Initiates or concludes the presentation slideshow.
- **Black Screen Button:** Press this button to temporarily black out the screen, drawing attention back to the presenter. Press again to resume the presentation.
- Volume Control: Adjusts the system volume of your computer.

Ensure you are within the wireless range of up to 50 feet (15 meters) from your computer for optimal performance.

MAINTENANCE

- Battery Replacement: When the battery-power indicator light begins to flash or the presenter's performance degrades, replace both AAA batteries with new ones.
- Cleaning: Wipe the presenter with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, store the USB receiver inside the presenter's dedicated slot and place the presenter in its cushioned carrying case for protection.



Figure 6: The included cushioned carrying case for storage and portability.

TROUBLESHOOTING

Problem	Solution	
Presenter is not responding.	 Ensure the presenter is powered on. Check if the batteries are correctly inserted and have sufficient charge. Replace if necessary. Verify the USB receiver is securely plugged into the computer's USB port. Try plugging the USB receiver into a different USB port. Ensure the presenter is within the 50-foot (15-meter) wireless range. 	
Laser pointer is dim or not working.	 Replace the batteries. Ensure the laser button is pressed and held firmly. 	

Problem	Solution
Controls are erratic or delayed.	 Move closer to the USB receiver. Ensure there are no significant obstructions between the presenter and the receiver. Check for potential interference from other wireless devices.

SPECIFICATIONS

Brand	AmazonBasics
Model Number	P-001
Colour	Black
Connectivity	Wireless (USB Receiver)
Wireless Range	Up to 50 feet (15 meters)
Power Source	2 x AAA Batteries
Item Weight	72.6 g
Item Dimensions (LxWxH)	13 x 3.8 x 2.8 Centimeters
Controller Type	Touch Control

WARRANTY INFORMATION


The AmazonBasics Wireless Presenter P-001 comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. Please retain your proof of purchase for warranty claims.


For detailed terms and conditions, please refer to the warranty documentation provided with your product or visit the AmazonBasics official website.

CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your AmazonBasics Wireless Presenter P-001 that are not covered in this manual, please contact Amazon customer support or visit the AmazonBasics brand store for further assistance.

AmazonBasics Store: Visit the AmazonBasics Store

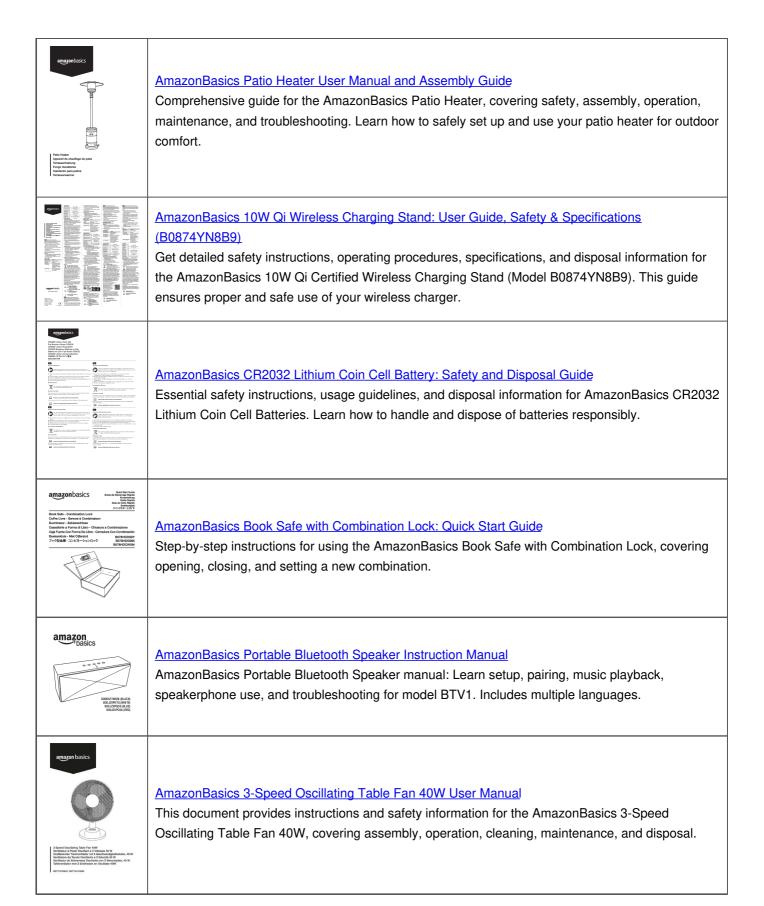

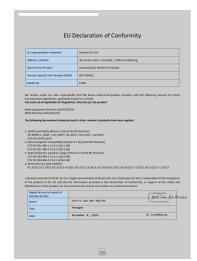

[pdf] Decleration of Conformity

Minnie Xu B01FV0FAL2 AmazonBasics Wireless Presenter EU Declaration of Conformity UK FR DE IT ES m media amazon images G 03 Amazon Private Brand Declarations |||

DocuSign Envelope ID: A430CD85-7D2E-4FCA-BBAD-0647B23AE989 CC EUDC 00096261 2018 TR EU Declaration ... zon EU Sarl 38 avenue John F. Kennedy, L-1855 Luxembourg AmazonBasics Wireless Presenter B01FV0FAL2 **P-001** We declare under our sole responsibility that the above referenced product complies with the ...

lang:en score:19 filesize: 320.34 K page_count: 5 document date: 2018-11-22



[pdf] Label

Microsoft Word Yeswanth Reddy 300507072 Masters Thesis report docx Exploring the Factors Affecting Purchase Likelihood of e Amazon Basics and DigiShack product manufacturers details are manipulated to study purchase likelihood effects The questionnaire is designed in such a way thesis access openaccess wgtn ac nz articles Tailer Private Labels 14614800 1 files 28061883 |||

Exploring the Factors Affecting the Purchase Likelihood of e-Tailer Private Labels by Y Yeswanth Reddy A Thesis submitted in the fulfilment of the requirements for the degree of Master of Commerce Marketing School of Marketing and International Business Victoria University of Wellington Acknowle...

lang:en score:11 filesize: 3.46 M page_count: 142 document date: 2021-05-18