

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hisense](#) /

› [Hisense 32-inch 720p LCD TV \(Model 32H3B1\) User Manual](#)

Hisense 32H3B1

Hisense 32-inch 720p LCD TV (Model 32H3B1) User Manual

Model: 32H3B1 | Brand: Hisense

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Hisense 32-inch 720p LCD TV, model 32H3B1. Please read this manual thoroughly before operating your television to ensure proper use and to maximize your viewing experience. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury.

- Do not block any ventilation openings.
- Do not install near any heat sources.
- Protect the power cord from being walked on or pinched.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. WHAT'S IN THE Box

Carefully unpack your television and ensure all items are present:

- Hisense 32-inch 720p LCD TV (Model 32H3B1)
- TV Stand (2 pieces)
- Remote Control
- Power Cord
- Screws for Stand Assembly
- User Manual (this document)

4. SETUP

4.1 Attaching the TV Stand

1. Place the TV face down on a soft, clean surface to prevent screen damage.
2. Align each stand piece with the corresponding slots on the bottom of the TV.
3. Secure each stand piece with the provided screws using a screwdriver. Ensure they are tightened firmly.



Figure 4.1: Front view of the Hisense 32-inch TV with its stand attached, ready for use.

4.2 Wall Mounting (Optional)

This TV is compatible with VESA standard wall mounts. For wall mounting, remove the stand and follow the instructions provided with your wall mount kit. Ensure the wall mount can support the weight of the TV (approximately 10.8 pounds).



Figure 4.2: Rear view of the Hisense 32-inch TV, highlighting the VESA mounting points and various input ports for connectivity.

4.3 Connecting External Devices

Your TV offers multiple input options for connecting various devices.

- **HDMI:** Connect Blu-ray players, game consoles, or cable/satellite boxes. The TV has 3 HDMI inputs.
- **USB:** Connect USB drives for media playback. The TV has 1 USB input.
- **RF Input:** Connect an antenna or cable for over-the-air or basic cable channels.
- **RCA Component/Composite:** Connect older devices like DVD players or VCRs.
- **Digital Audio Output:** Connect to a soundbar or home theater system for enhanced audio.



Figure 4.3: Side profile of the Hisense 32-inch TV, illustrating the accessible input ports including HDMI, USB, and audio/video connections.

4.4 Powering On

1. Connect the power cord to the TV's power input and then to a wall outlet.
2. Press the **Power** button on the remote control or on the TV itself.
3. The TV will display the Hisense logo and then the initial setup screen (if it's the first power-on).

5. OPERATING YOUR TV

5.1 Remote Control Functions

Familiarize yourself with the remote control for easy navigation.

- **Power:** Turns the TV on or off.
- **Input:** Selects the input source (HDMI 1, HDMI 2, AV, etc.).
- **Volume +/-:** Adjusts the volume level.
- **Channel +/-:** Changes TV channels.
- **Menu:** Accesses the main menu for settings adjustments.
- **Navigation Buttons (Up/Down/Left/Right):** Moves cursor in menus.
- **OK/Enter:** Confirms selections.

5.2 Selecting an Input Source

To switch between connected devices:

1. Press the **Input** button on your remote control.
2. Use the **Up/Down** navigation buttons to highlight the desired input source (e.g., HDMI 1, AV).
3. Press the **OK** button to select it.

5.3 Adjusting Picture and Sound Settings

To customize your viewing and listening experience:

1. Press the **Menu** button on your remote.
2. Navigate to **Picture** or **Sound** settings using the navigation buttons.
3. Select the desired setting (e.g., Brightness, Contrast, Bass, Treble) and adjust using the **Left/Right** buttons.
4. Press **Menu** again to exit.

6. MAINTENANCE

6.1 Cleaning Your TV

- Always unplug the TV before cleaning.
- Use a soft, dry cloth to wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner. Never spray cleaner directly onto the screen.
- Avoid using alcohol, benzene, thinners, or other volatile substances.

6.2 Storage

If you need to store the TV, ensure it is kept in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to use the original packaging for protection during storage or transport.

7. TROUBLESHOOTING

Before contacting customer service, try the following solutions for common issues:

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
No power	Check if the power cord is securely plugged into the TV and the wall outlet. Test the outlet with another device.
No picture, but sound is present	Ensure the correct input source is selected. Check cable connections to external devices.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Verify audio cable connections.
Remote control not working	Replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Poor picture quality	Adjust picture settings (brightness, contrast, sharpness). Check the quality of the input signal or source device.

8. SPECIFICATIONS

Feature	Detail
Brand	Hisense
Model Number	32H3B1
Screen Size	32 Inches
Display Technology	LED
Resolution	720p
Refresh Rate	60Hz (Native)
Aspect Ratio	16:9
Product Dimensions (W x D x H)	28.9 x 7.1 x 18.8 inches
Item Weight	10.8 Pounds
Connectivity Technology	HDMI, USB
Inputs	3 HDMI, 1 USB, 1 RF input, 1 RCA component input, 1 RCA composite input
Outputs	1 Digital Audio Output
Voltage	120 Volts (AC)
Special Feature	Flat Screen

9. WARRANTY AND SUPPORT

Your Hisense TV is covered by a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Hisense website. For technical support, troubleshooting assistance, or service inquiries, please contact Hisense customer support through their official channels.

Note: Warranty details and support contact information may vary by region and are subject to change.

Related Documents - 32H3B1

<p>LCD Service Service Manual</p> <p>Version: 3.000</p> <p>Model: 32H3B1</p> <p>Hisense Electronics Co., Ltd</p> <p>December 3, 2019</p>	<p>Hisense LCD Television Service Manual MSD6886</p> <p>This service manual provides detailed technical information, troubleshooting guides, and software upgrade procedures for Hisense LCD Televisions, specifically models with the MSD6886 chassis.</p>
<p>LCD Television Service Manual</p> <p>Version: 4.000</p> <p>Model: 32H3B1</p> <p>Hisense Visual Technology Co., Ltd</p> <p>Sept 20, 2020</p>	<p>Hisense LCD Television Service Manual NT72690</p> <p>Service manual for Hisense LCD Television, chassis NT72690, detailing precautions, board layouts, software upgrades, and troubleshooting procedures.</p>
<p>LCD Television Service Manual</p> <p>Version: 4.000</p> <p>Model: 32H3B1</p> <p>Hisense Visual Technology Co., Ltd</p> <p>May 27, 2020</p>	<p>Hisense MT9602 Chassis LCD Television Service Manual</p> <p>This service manual for Hisense LCD Televisions, featuring the MT9602 chassis, offers detailed technical information for service professionals. It covers safety precautions, board layouts, OSD menu adjustments, software upgrades, troubleshooting, and schematic diagrams for effective repair and maintenance.</p>
 <p>Hisense</p> <p>User's Manual Please read this manual carefully before using this product. Model Number: HLE66P69 / HLE81P69 Part Number: 000000000000 http://www.hisense.com.au</p>	<p>Hisense HLD66P69/HLD81P69 Series User Manual and Warranty Information</p> <p>Comprehensive user manual and warranty details for Hisense HLD66P69 and HLD81P69 series televisions, covering setup, operation, features, safety precautions, remote control usage, TV settings, DVD player functions, troubleshooting, and specifications. Includes warranty terms and claims procedure for Hisense Australia.</p>
<p>LCD Service Service Manual</p> <p>Chassis: MTK5655EPDJ Product Type: South America</p> <p>Ver 1.0 November, 2019</p>	<p>Hisense LCD Television Service Manual - MTK5655EPDJ</p> <p>This service manual provides detailed technical information, specifications, troubleshooting guides, and software upgrading procedures for Hisense LCD Televisions with the MTK5655EPDJ chassis.</p>

[Hisense MSD6886 LCD Television Service Manual](#)

Comprehensive service manual for Hisense LCD Televisions featuring the MSD6886 chassis.

Covers safety precautions, troubleshooting, board diagrams, OSD menu operations, and software upgrades for technicians.