

NEEWER NW860RP90

Neewer NW860RP90 Wireless DSLR Remote Control User Manual

Model: NW860RP90

1. INTRODUCTION

The Neewer NW860RP90 Wireless DSLR Remote Control system provides a convenient way to trigger your camera's shutter wirelessly, preventing camera shake and allowing for remote operation. This manual will guide you through the setup, operation, and maintenance of your remote control.

Package Contents

- 1x Transmitter (NW-860 Tx)
- 1x Receiver (NW-860 Rx)
- 1x Connected Cable (for camera connection)
- 2 x 1.5V AAA Batteries (for transmitter)
- 1 x 3V CR-2 Lithium Battery (for receiver)

2. SETUP

2.1 Battery Installation

Ensure proper battery installation for both the transmitter and receiver before use.



Figure 1: Transmitter Battery Installation

Open the battery compartment on the back of the transmitter and insert two AAA batteries, observing polarity.



Figure 2: Receiver Battery Installation

Open the battery compartment on the back of the receiver and insert one CR-2 Lithium battery, observing polarity.

2.2 Connecting the Receiver to Your Camera

The receiver connects to your camera's remote control port using the provided cable.



Figure 3: Receiver Connected to Camera

Attach the receiver to your camera's hot shoe (optional, for stability) and connect the cable from the receiver to your camera's remote port. Ensure the cable is securely plugged into both devices.

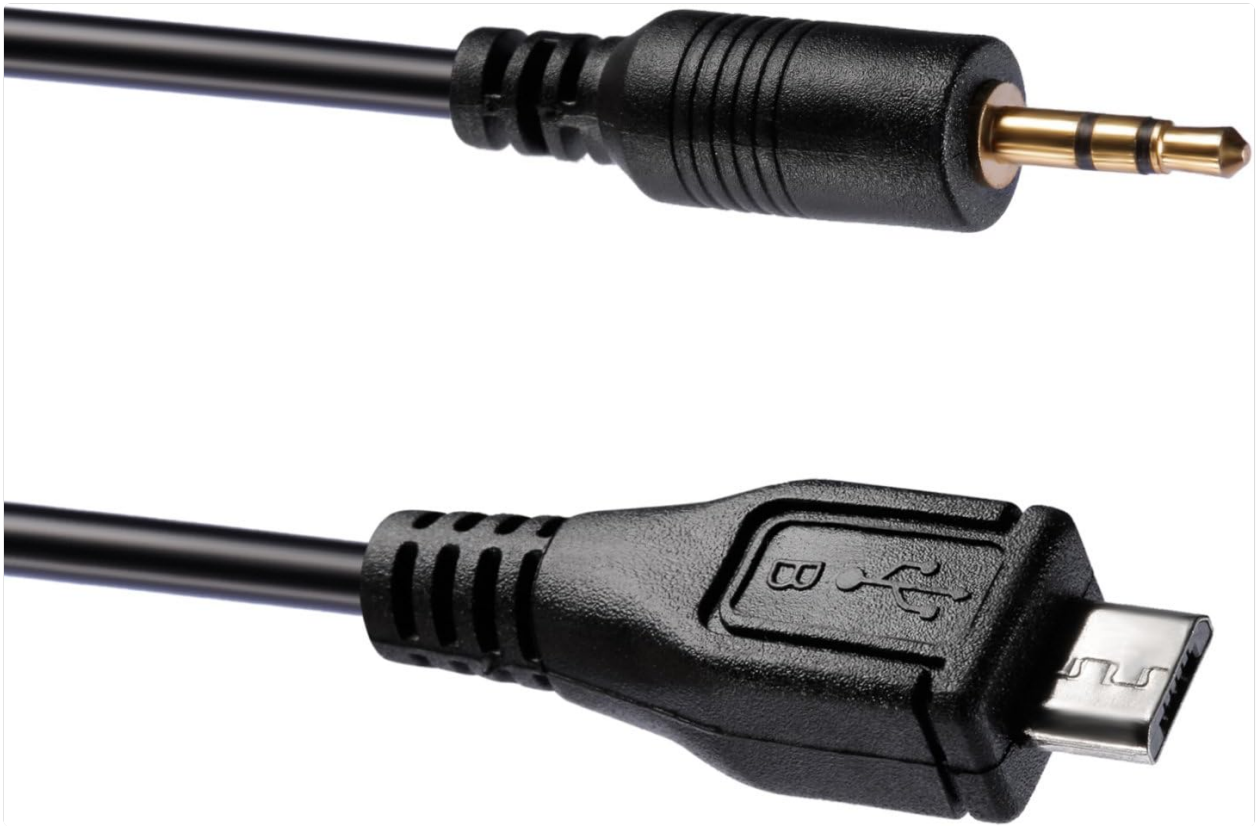


Figure 4: Connection Cable Detail

The cable features a 2.5mm jack for the receiver and a micro-USB connector for compatible Fujifilm cameras.

3. OPERATING INSTRUCTIONS

The remote control offers various shooting modes to suit your photographic needs.



Figure 5: Transmitter Controls

Familiarize yourself with the buttons and switches on the transmitter.

3.1 Shutter Release Function

- **Half-Press:** Lightly press the shutter button on the transmitter to activate your camera's autofocus system. The camera will focus on your subject.
- **Full-Press:** Press the shutter button completely down to trigger the camera's shutter and take a photograph.

3.2 Shooting Modes

The transmitter supports the following shooting modes, selectable via the switch on the device:

- **Single Shot:** For taking a single photograph with each full press of the shutter button.
- **Continuous Shot:** For taking multiple photographs in quick succession as long as the shutter button is held down.
- **Bulb Setting:** Allows for extended exposure times. In this mode, the shutter remains open for as long as the shutter button is held down.
- **4-Second Delay:** Triggers the shutter after a 4-second delay, useful for self-portraits or ensuring complete camera stability.

3.3 Compatible Cameras

This remote control is compatible with the following Fujifilm camera models (replacement for Fuji RR-90):

- FinePix S1
- Fujifilm X-T1
- Fujifilm X-T10
- Fujifilm X-E2
- Fujifilm X-M1
- Fujifilm X-A2
- Fujifilm X-A1
- Fujifilm X100T
- Fujifilm X30
- Fujifilm XQ2
- Fujifilm XQ1

4. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the remote control. Do not use liquid cleaners or solvents.
- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Impact:** Protect the device from drops and impacts, which can damage internal components.

5. TROUBLESHOOTING

If you encounter issues with your Neewer NW860RP90 remote control, refer to the following common problems and solutions:

- **Remote control does not trigger the camera:**
 - Check if batteries are correctly installed and have sufficient charge. Replace if necessary.
 - Ensure the connection cable is securely plugged into both the receiver and the camera's remote port.

- Verify that your camera is set to a compatible remote control mode (refer to your camera's manual).
- Ensure the receiver is powered on (if applicable).
- **Limited range or intermittent connection:**
 - Replace batteries in both the transmitter and receiver.
 - Ensure there are no significant obstructions between the transmitter and receiver.
 - Avoid strong electromagnetic interference sources.
- **Camera does not autofocus when half-pressing:**
 - Check camera settings to ensure autofocus is enabled.
 - Ensure the half-press action is firm enough to activate the camera's autofocus.

6. SPECIFICATIONS

Model	NW860RP90
Transmitter Battery	2 x AAA Batteries (1.5V)
Receiver Battery	1 x CR-2 Lithium Battery (3V)
Shutter Release	Half-press / Full-press
Shooting Modes	Single Shot, Continuous Shot, Bulb Setting, 4-second Delay
Connectivity Technology	Infrared
Maximum Range	10 Meters (approx. 33 feet)
Compatible Devices	FinePix S1, Fujifilm X-T1 / X-T10 / X-E2 / X-M1 / X-A2 / X-A1 / X100T / X30 / XQ2 / XQ1
Color	Black
Item Weight	1.6 Ounces (approx. 45g)

7. WARRANTY AND SUPPORT

Neewer products are designed for reliability and performance. For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Neewer website. Keep your proof of purchase for any warranty claims.