

Whirlpool MWD122SL

Whirlpool MWD122SL Microwave Oven Instruction Manual

Model: MWD122SL | Brand: Whirlpool

INTRODUCTION

This instruction manual provides essential information for the safe and efficient operation of your new Whirlpool MWD122SL microwave oven. Please read this manual thoroughly before using the appliance and retain it for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your microwave.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions before use.
- Do not operate the oven if the cord or plug is damaged, if it is not working properly, or if it has been damaged or dropped.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Do not use corrosive chemicals or vapors in this appliance.
- Do not allow children to use the microwave without supervision.
- Only use utensils suitable for microwave ovens.
- Do not use metal containers or foil in the microwave mode.
- Ensure proper ventilation around the appliance.
- Always supervise food being heated to prevent overheating or ignition.

PRODUCT OVERVIEW



Figure 1: Front view of the Whirlpool MWD122SL microwave oven. This image displays the silver exterior, the dark glass door, and the digital control panel on the right. The display shows "12:00". Below the display are various function buttons including Grill, Power, Combi, Auto Cook, Auto Defrost, Memo, Timer, Clock, Stop, and Start.

Control Panel Features:

- **Digital Display:** Shows time of day, cooking time, and program indicators.
- **+/- Buttons:** Adjust time, weight, or power levels.
- **Grill:** Activates the grill function for browning and crisping.
- **Power:** Selects microwave power levels.
- **Combi:** Combines microwave and grill cooking.
- **Auto Cook:** Pre-programmed settings for various food types.
- **Auto Defrost:** Pre-programmed settings for defrosting food by weight.
- **Memo:** Stores and recalls frequently used cooking settings.
- **Timer:** Functions as a kitchen timer.
- **Clock:** Sets the current time.
- **Stop:** Cancels a program or stops cooking.
- **Start:** Begins a cooking program or adds 30 seconds of cooking time.

SETUP AND INSTALLATION

1. Unpacking:

Remove all packaging materials from inside and outside the microwave oven. Check for any damage. If the oven is damaged, do not operate it and contact your retailer.

2. Placement:

Place the microwave on a flat, stable surface strong enough to hold its weight and the heaviest food likely to be cooked in it. Ensure there is adequate ventilation: leave at least 10 cm of space at the back, 20 cm at the top, and 5 cm on each side for proper airflow. Do not block any ventilation openings.

3. Power Connection:

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the rating label on the

appliance.

4. Initial Clock Setting:

Upon first connection, the display will show "0:00" or "12:00". Press the **Clock** button, then use the +/- buttons to set the current time. Press **Clock** again to confirm.

OPERATING INSTRUCTIONS

1. Basic Microwave Cooking:

1. Place food in a microwave-safe container on the turntable.
2. Close the oven door.
3. Press the **Power** button repeatedly to select the desired power level (e.g., 100%, 80%, 50%).
4. Use the +/- buttons to set the cooking time.
5. Press **Start** to begin cooking.

2. Grill Function:

The grill function is ideal for browning and crisping food. Use a heat-resistant dish.

1. Place food on the grill rack (if provided) or a suitable heat-resistant dish.
2. Press the **Grill** button.
3. Use the +/- buttons to set the grilling time.
4. Press **Start** to begin grilling.

3. Combi Function (Combined Cooking):

This function combines microwave energy with the grill for faster cooking and browning.

1. Place food in a microwave and grill-safe dish.
2. Press the **Combi** button repeatedly to select the desired combination mode (e.g., C-1 for microwave + grill, C-2 for grill + microwave).
3. Use the +/- buttons to set the cooking time.
4. Press **Start** to begin combined cooking.

4. Auto Cook:

The Auto Cook function provides pre-set programs for common foods. Refer to the internal oven sticker or a separate quick guide for specific program numbers and food types.

1. Place food in a suitable container.
2. Press the **Auto Cook** button.
3. Use the +/- buttons to select the desired program number.
4. Press **Start** to begin.

5. Auto Defrost:

This function allows for efficient defrosting based on food weight.

1. Place the frozen food in a microwave-safe dish.
2. Press the **Auto Defrost** button.
3. Use the +/- buttons to select the food type and/or enter the weight of the food.
4. Press **Start** to begin defrosting.

6. Timer Function:

The timer can be used independently of cooking functions.

1. Press the **Timer** button.
2. Use the +/- buttons to set the desired countdown time.
3. Press **Start** to activate the timer. An audible signal will sound when the time expires.

7. Memo Function:

To save a cooking setting:

1. Set your desired cooking program (e.g., power level and time).
2. Press and hold the **Memo** button until a confirmation appears on the display.

To recall a saved setting, simply press the **Memo** button and then **Start**.

8. Stop/Cancel:

Press the **Stop** button once to pause cooking, or twice to cancel the current program and return to standby mode.

MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and appearance of your microwave oven.

- **Interior:** Clean the oven cavity after each use with a damp cloth and mild detergent. For stubborn stains, boil a cup of water with lemon juice inside the oven for a few minutes to loosen residue, then wipe clean.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- **Turntable:** The glass turntable can be removed and washed in warm soapy water or in a dishwasher. Ensure it is completely dry before placing it back in the oven.
- **Door Seal:** Keep the door seal and adjacent parts clean to ensure proper sealing.
- **Safety:** Always unplug the microwave before cleaning. Do not immerse the appliance in water.

TROUBLESHOOTING

If you encounter issues with your microwave, consult the following table before contacting service.

Problem	Possible Cause	Solution
Oven does not start.	Door not closed properly; Power cord not plugged in; Fuse blown or circuit breaker tripped.	Ensure door is securely closed; Check power cord connection; Check household fuse/circuit breaker.
Food not heating.	Incorrect cooking time/power level set; Door not closed properly.	Adjust cooking time/power; Ensure door is securely closed.
Light not working.	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Sparking inside oven.	Metal in oven; Food residue on cavity walls.	Remove any metal objects; Clean oven interior thoroughly.

SPECIFICATIONS

- **Brand:** Whirlpool
- **Model:** MWD122SL
- **Capacity:** 20 litres
- **Microwave Power:** 700 watts
- **Grill Power:** 800 watts
- **Installation Type:** Independent (Freestanding)
- **Material:** Stainless Steel
- **Product Dimensions (W x D x H):** 44.2 x 35.5 x 26 cm
- **Item Weight:** 10.5 kg
- **Human Interface Input:** Touchscreen

WARRANTY AND SUPPORT

Your Whirlpool MWD122SL microwave oven comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. For technical support, service requests, or to purchase genuine spare parts, please visit the official Whirlpool website or contact their customer service department directly. Contact information can typically be found on the Whirlpool website or in the documentation provided with your appliance.

For further assistance, you may visit the [Whirlpool official website](#).