

Manuals.plus /

- › Deco Breeze /
- › DecoBREEZE Pedestal Standing Fan User Manual

## Deco Breeze 843730053393

# DecoBREEZE Pedestal Standing Fan User Manual

Model: 843730053393 | Brand: Deco Breeze

## 1. INTRODUCTION AND OVERVIEW

---

Thank you for choosing the DecoBREEZE Pedestal Standing Fan. This manual provides essential information for the safe and efficient operation, assembly, and maintenance of your new fan. Please read it thoroughly before use and retain it for future reference.

This 18-inch fan features a prestigious antique design with deep copper tones and hand-wrought metal scrollwork, offering both aesthetic appeal and powerful air circulation. It is designed for both indoor and outdoor use, featuring UV-resistant all-weather paint and a weighted base for stability.





Figure 1: DecoBREEZE Pedestal Standing Fan, showcasing its antique copper finish and elegant design.



Figure 2: The DecoBREEZE fan is versatile, perfect for enhancing comfort in both indoor and outdoor living spaces.

## 2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using this fan.
- Use this fan only as described in this manual. Other uses not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- Always unplug the fan when not in use, when moving the fan from one location to another, and before cleaning.
- Do not immerse fan in water or other liquids.
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- Do not place fan or any parts near an open flame, cooking or other heating appliance.
- Avoid contact with moving parts.
- The use of attachments not recommended or sold by the fan manufacturer may cause hazards.
- Do not use outdoors if not specifically designed for outdoor use. This fan is designed for outdoor use, but ensure the power outlet is suitable for outdoor conditions.
- Do not allow children to play with the fan.
- Always place the fan on a stable, flat surface to prevent it from tipping over.

### 3. PRODUCT COMPONENTS

---

Before assembly, ensure all components are present and undamaged. Refer to the diagram below for identification.

- Fan Head Assembly (includes motor, blades, front and rear guards)
- Adjustable Height Pole
- Decorative Base with Scrollwork
- Weighted Base Plate
- Power Cord with Plug
- Assembly Hardware (screws, washers, nuts - typically pre-attached or in a small bag)

## Packs a punch

*Upgrade up your style and add an elegant flair to your space.*

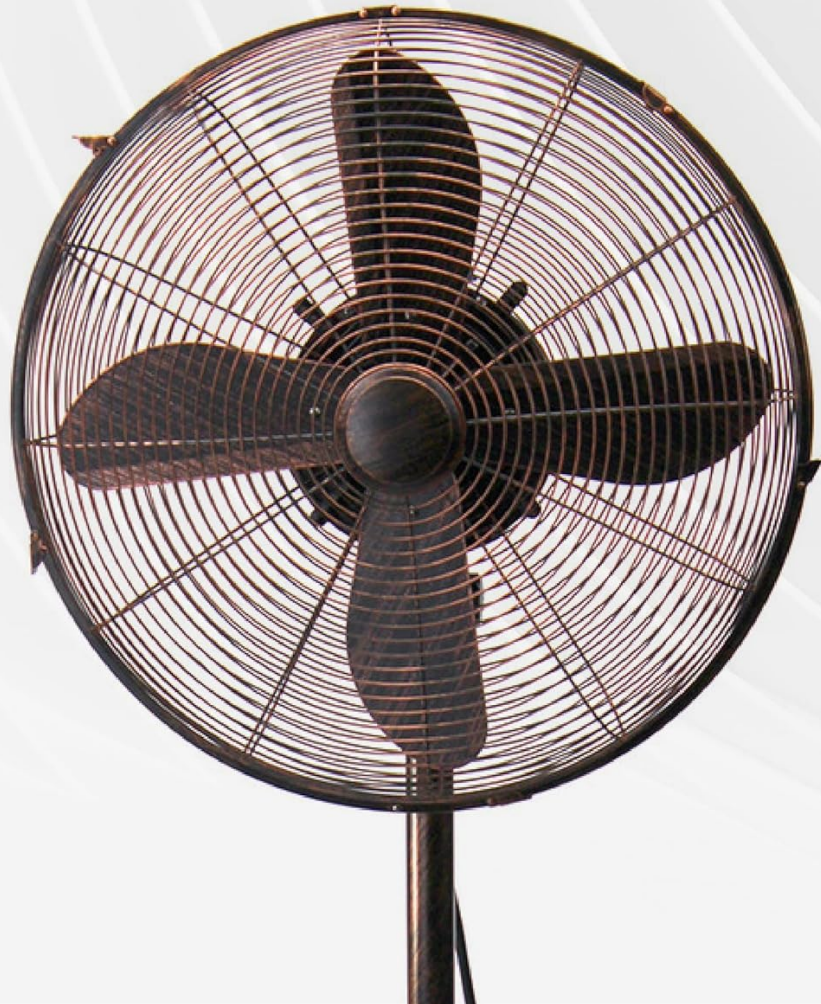 


Figure 3: A close-up view of the fan head, showcasing the protective metal grill and the four fan blades.

### 4. SETUP AND ASSEMBLY

---

Follow these steps to assemble your DecoBREEZE Pedestal Fan:

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Assemble Base:** Attach the decorative base with scrollwork to the weighted base plate using the provided screws

and tools. Ensure it is stable and secure.

3. **Attach Pole:** Insert the adjustable height pole into the assembled base. Secure it firmly, typically with a large screw or knob at the base.
4. **Mount Fan Head:** Carefully place the fan head assembly onto the top of the adjustable pole. Align the mounting holes and secure with the designated screws or locking mechanism.
5. **Adjust Height:** Loosen the height adjustment knob on the pole, extend or retract the pole to your desired height (adjustable from 38 to 50 inches), and then firmly tighten the knob.
6. **Position Fan Head:** The fan head can be tilted to direct airflow. Adjust the angle as needed.
7. **Power Connection:** Ensure the fan is in the "OFF" position before plugging the power cord into a suitable electrical outlet.

## 5. OPERATING INSTRUCTIONS

---


Your DecoBREEZE fan is designed for ease of use. It features a 3-speed setting and an oscillating function.

- **Power On/Off:** Locate the control knob/switch, typically on the fan motor housing or pole. Turn it to the desired speed setting to power on, and to "OFF" to power off.
- **Speed Settings:** The fan offers three distinct speeds to customize airflow:
  - **Low Speed:** Approximately 900 RPM
  - **Medium Speed:** Approximately 1100 RPM
  - **High Speed:** Approximately 1280 RPM
- **Oscillation:** To activate the oscillation feature (where the fan head sweeps from side to side), locate the oscillation pin/button on top of the motor housing. Push it down to engage oscillation, and pull it up to stop oscillation and fix the fan in one direction.
- **Vertical Tilt:** The fan head can be manually tilted up or down to direct airflow. Loosen the tilt adjustment knob on the side of the fan head, adjust to the desired angle, and then tighten the knob firmly.

# *Three-Speed* **Floor Fan**



Figure 4: Illustration of the three-speed settings available on the fan, indicating their respective RPMs for different airflow intensities.

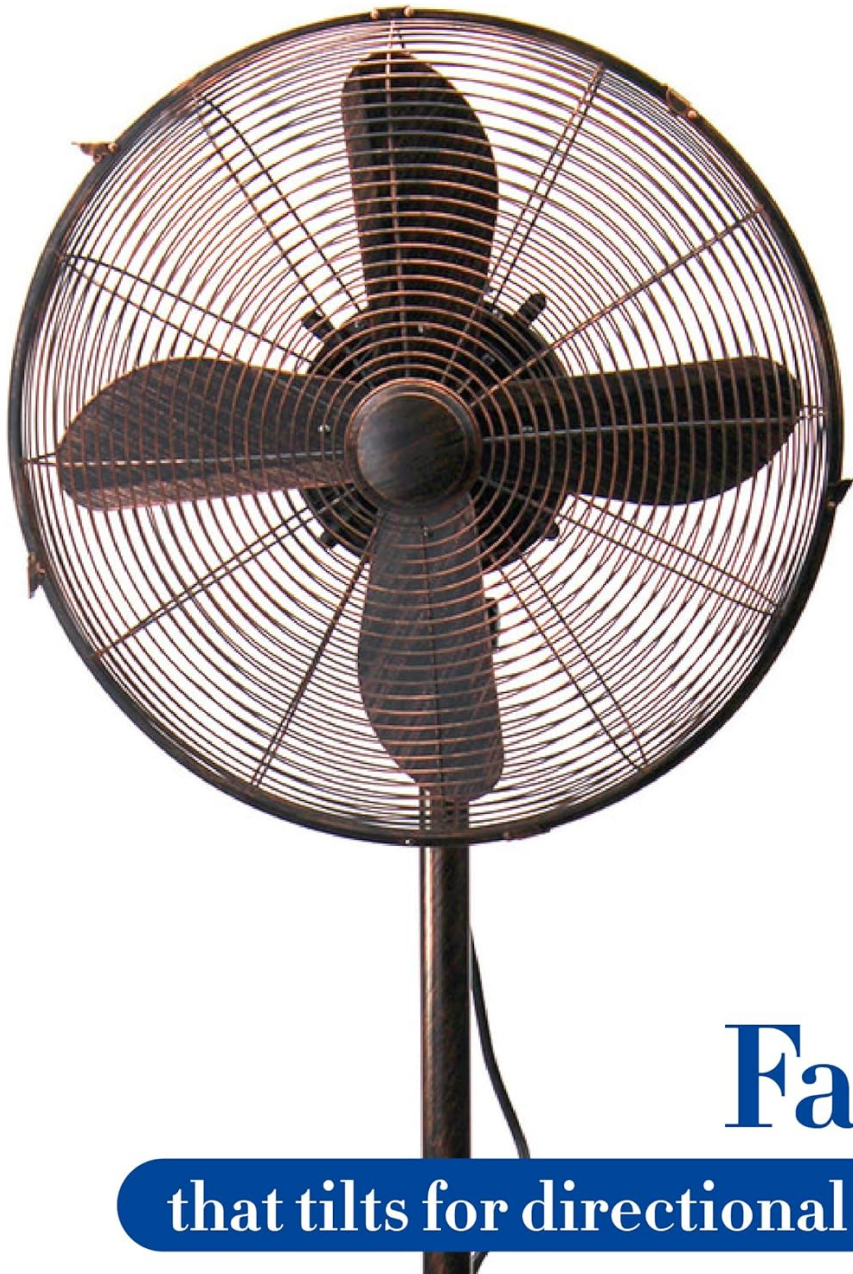

# Fan head

that tilts for directional air circulation

Figure 5: The fan head can be tilted to direct air precisely where needed, allowing for customized air circulation.



# Customize *the airflow*

rustic-looking height adjustable  
metal fan.

Coated in All-Weather, UV paint for outdoor use.

Figure 6: The fan allows users to customize airflow with its adjustable height and tilting head, ensuring optimal comfort.

## 6. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your fan.

- **Cleaning:** Always unplug the fan before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents. For dust accumulation on the fan blades or inside the guard, use a vacuum cleaner with a brush attachment or compressed air. The fan guards may be removed for thorough cleaning if necessary (refer to assembly instructions in reverse).
- **Storage:** When not in use, store the fan in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.
- **Motor Lubrication:** The fan motor is permanently lubricated and requires no additional lubrication.
- **Cord Care:** Regularly inspect the power cord for any signs of damage. If the cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

## 7. TROUBLESHOOTING

If your fan is not operating correctly, consult the following common issues and solutions:

Problem	Possible Cause	Solution
Fan does not operate.	No power to the fan.	Ensure the fan is plugged into a working electrical outlet. Check the circuit breaker.
Fan is noisy.	Loose parts or obstruction.	Check that all screws and connections are tight. Ensure no foreign objects are caught in the fan blades or guard. Clean any dust buildup.
Fan does not oscillate.	Oscillation pin not engaged.	Push down the oscillation pin on top of the motor housing firmly.
Reduced airflow.	Dust buildup on blades/guard.	Unplug the fan and carefully clean the blades and guards as described in the Maintenance section.

If the problem persists after trying these solutions, please contact customer support.

## 8. SPECIFICATIONS

---

**Brand:** Deco Breeze

**Model Number:** 843730053393

**Electric Fan Design:** Floor Fan

**Color:** Copper

**Style:** Scrolls (Antique)

**Product Dimensions:** 21"D x 23"W x 10"H

**Adjustable Height:** 38 inches to 50 inches

**Fan Head Diameter:** 18 Inches

**Number of Blades:** 3

**Number of Power Levels:** 3 (900 RPM, 1100 RPM, 1280 RPM)

**Special Feature:** Oscillating

**Power Source:** Corded Electric

**Wattage:** 45 watts

**Voltage:** 5 Volts

**Finish Type:** Brushed

**Blade Material:** Plastic


**Indoor/Outdoor Usage:** Indoor

**Item Weight:** 24.4 pounds

**Control Method:** Touch

**Certification:** ETL

# Designer Oscillating Floor Fan

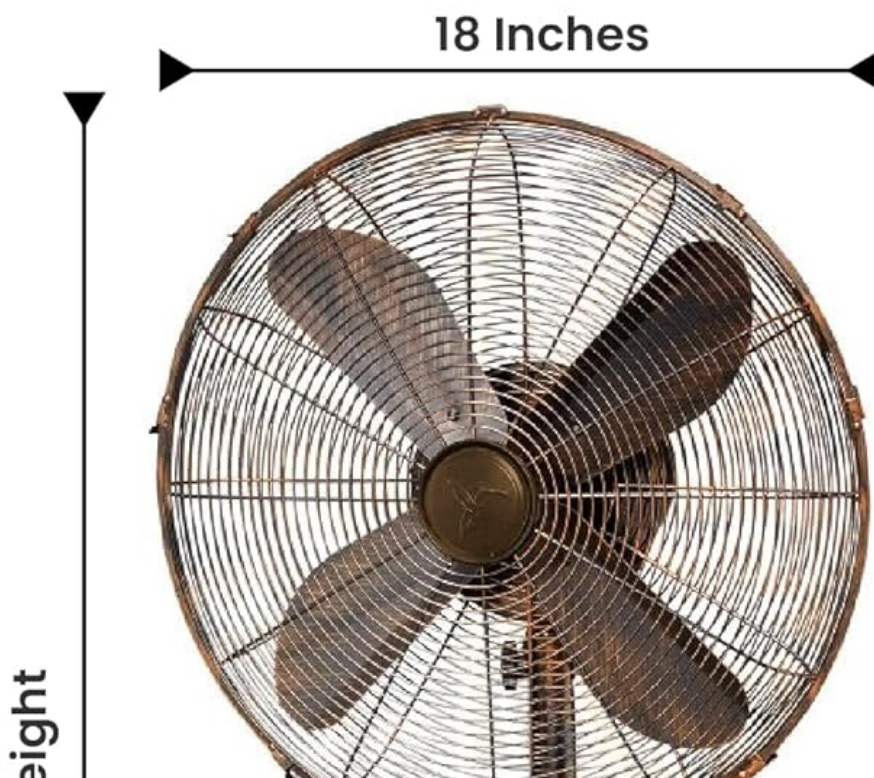

Adjustable 40-51 inches h



Figure 7: Key dimensions of the DecoBREEZE Pedestal Fan, highlighting its 18-inch diameter and adjustable height range.

## 9. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official Deco Breeze website. Keep your purchase receipt as proof of purchase for any warranty claims.

**Manufacturer:** Designer Aire

**UPC:** 843730053393