

KRUPS 8010000467

KRUPS 4-Slice Belgian Waffle Maker

INSTRUCTION MANUAL

1. Introduction

Welcome to the world of delicious homemade waffles with your new KRUPS 4-Slice Belgian Waffle Maker. This manual provides detailed instructions for the safe and efficient use, maintenance, and troubleshooting of your appliance. Please read all instructions carefully before first use and keep them for future reference.

2. Important Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. Product Components

Your KRUPS 4-Slice Belgian Waffle Maker is designed for ease of use and durability. Familiarize yourself with its main parts:

- Main Unit with Stainless Steel Housing
- Removable Nonstick Waffle Plates (4 sections)
- Temperature Control Dial (5 Browning Levels)
- Power Indicator Light (Red)
- Ready Indicator Light (Green)
- Audible "Ready" Beep
- Handle with Locking Latch
- Cord Wrap for Storage



Image: The KRUPS 4-Slice Belgian Waffle Maker with its lid open, revealing the four square waffle plates.

4. Initial Setup

Before using your waffle maker for the first time, follow these steps:

1. Unpack the appliance and remove all packaging materials.
2. Wipe the exterior of the waffle maker with a damp cloth.
3. Remove the nonstick waffle plates by pressing the red release tabs on the side of the unit. Wash the plates with warm, soapy water or place them in the dishwasher. Rinse thoroughly and dry.
4. Insert the clean, dry waffle plates back into the unit until they click securely into place.



**FEEDS A FAMILY -
MAKES 4 BELGIAN
WAFFLES**

Image: The waffle maker opened, displaying its four nonstick cooking plates ready for use.



CORD WRAP & LOCKING LID FOR EASY STORAGE

Image: The removable waffle plates placed in a dishwasher for easy cleaning.

5. Operating Instructions

Follow these steps to make perfect Belgian waffles:

1. **Preheating:** Close the waffle maker and plug it into a 120V AC electrical outlet. The red 'ON' light will illuminate. The green 'READY' light will illuminate and an audible beep will sound when the waffle maker has reached the optimal cooking temperature. This typically takes 5-6 minutes.
2. **Adjusting Browning:** Use the temperature control dial on the front of the unit to select your desired browning level from 1 (lightest) to 5 (darkest).



REMOVABLE PLATES DISHWASHER SAFE

Image: The browning control dial, allowing selection of 5 different levels for waffle crispness.



READY INDICATOR LIGHT & AUDIBLE BEEP

Image: The red 'ON' light and green 'READY' light on the waffle maker's control panel.

3. **Adding Batter:** Once the 'READY' light is green, open the lid and pour your waffle batter evenly onto the lower waffle plates. For best results, ensure the batter spreads to all four sections.
4. **Cooking:** Close the lid. The 'READY' light may turn off during cooking. An audible beep will sound again and the 'READY' light will illuminate when your waffles are done. Cooking time varies based on batter type and selected browning level. Steam may escape from the sides during cooking.
5. **Removing Waffles:** Once cooked, open the lid and carefully remove the waffles using a heat-resistant plastic or wooden utensil. Avoid using metal utensils as they can damage the nonstick coating.



5 BROWNING LEVELS

Image: A cooked waffle being carefully removed from the waffle maker using tongs.



Image: Four perfectly cooked Belgian waffles, ready to be served.

Recipe Videos (Seller Content)

Video: Learn how to make delicious Waffle S'mores using your Krups Waffle Maker. This video demonstrates the process from preparing the waffles to adding toppings.

Video: A step-by-step guide to creating Cinnamon Roll Waffles with your Waffle Maker. This video covers preparing the cinnamon rolls and cooking them to perfection.

6. Care and Maintenance

Proper cleaning ensures the longevity and performance of your waffle maker.

- Cool Down:** Always unplug the appliance and allow it to cool completely before cleaning.
- Remove Plates:** Press the red release tabs on the side of the unit to remove the waffle plates.
- Clean Plates:** The nonstick waffle plates are dishwasher safe for easy cleanup. Alternatively, you can wash them by hand with warm, soapy water and a non-abrasive sponge. Do not use metal scouring pads or abrasive cleaners.
- Clean Exterior:** Wipe the exterior stainless steel housing with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
- Storage:** Once completely cool and clean, the waffle maker can be stored upright to save space. The cord can be wrapped around the designated area at the back of the unit.

7. Troubleshooting Guide

If you encounter any issues with your waffle maker, refer to the common problems and solutions below:

Problem	Possible Cause	Solution
Waffles sticking to plates	Plates not properly seasoned or batter too sticky.	Ensure plates are clean and lightly greased (if not using non-stick spray). Adjust batter consistency.
Waffles not cooking evenly	Insufficient preheating or uneven batter distribution.	Allow waffle maker to fully preheat until 'READY' light illuminates. Distribute batter evenly across all four sections.
Waffle maker not heating	Not plugged in or power issue.	Check if the appliance is securely plugged into a working outlet. Ensure the 'ON' light is illuminated.
Audible beep not sounding	Sensor malfunction or unit not reaching temperature.	Ensure unit is properly plugged in and allowed sufficient time to preheat. If issue persists, contact customer support.

8. Technical Specifications

- Model:** 8010000467
- Brand:** KRUPS
- Power:** 1200 Watts
- Voltage:** 120 Volts
- Dimensions:** 18.9"D x 9.84"W x 9.84"H
- Item Weight:** 9.1 Pounds
- Material:** Stainless Steel (exterior), Nonstick (plates)
- Special Features:** Dishwasher Safe Parts, 5 Browning Levels, Audible Ready Beep, Removable Plates, Cord Wrap

- **GTIN/UPC:** 00010942220626
- **Manufacturer:** Groupe SEB
- **Country of Origin:** China

9. Warranty and Customer Support

Your KRUPS 4-Slice Belgian Waffle Maker comes with a manufacturer's warranty. Please refer to the official user manual PDF for detailed warranty terms and conditions. For any product inquiries, technical support, or warranty claims, please contact KRUPS customer service.

Official User Guide (PDF): [Download Here](#)

© 2025 KRUPS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question