

Cutex 1

Cutex 6 Watt 12 Volt Light Bulb Instruction Manual for Sewing Machines (Model 1)

Model: 1 | Brand: Cutex

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Cutex 6 Watt 12 Volt Light Bulb. This bulb is designed as a replacement for various home portable sewing machines, offering reliable illumination for your sewing projects. Please read this manual thoroughly before installation and retain it for future reference.

2. SAFETY INFORMATION

- Always disconnect the sewing machine from the power supply before attempting to replace the light bulb.
- Allow the old bulb to cool completely before removal to prevent burns.
- Handle the new bulb by its base to avoid touching the glass, as oils from your skin can reduce bulb life.
- Ensure the replacement bulb matches the voltage and wattage specifications of your sewing machine to prevent damage. This bulb is 12 Volts and 6 Watts.
- Dispose of old bulbs responsibly according to local regulations.

3. PRODUCT COMPONENTS

The Cutex 6 Watt 12 Volt Light Bulb is a single unit designed for easy installation. It features a clear glass bulb and a push-in turn & lock base (BA15D) for secure fitting.



Figure 1: Cutex 6 Watt 12 Volt Light Bulb. This image shows the clear glass bulb and its metallic push-in turn and lock base, ready for installation into compatible sewing machines.

4. SETUP AND INSTALLATION

Follow these steps to safely replace the light bulb in your sewing machine:

1. **Power Disconnection:** Unplug your sewing machine from the electrical outlet to ensure no power is supplied during bulb replacement.
2. **Access Bulb Compartment:** Refer to your sewing machine's original manual to locate and open the light bulb compartment. This often involves removing a cover plate or unscrewing a panel.
3. **Remove Old Bulb:** Allow the old bulb to cool down completely. Gently push the old bulb inward and twist it counter-clockwise to unlock it from its socket. Carefully pull it straight out.
4. **Insert New Bulb:** Align the pins on the base of the new Cutex light bulb with the slots in the socket. Push the bulb gently into the socket and twist it clockwise until it locks securely into place. Do not force the bulb.
5. **Secure Compartment:** Replace any covers or panels that were removed to access the bulb compartment.
6. **Test:** Plug your sewing machine back into the electrical outlet and turn it on to verify that the new light bulb is functioning correctly.

5. OPERATING INSTRUCTIONS

Once installed, the light bulb operates in conjunction with your sewing machine's power switch. Simply turn on your sewing machine, and the bulb will illuminate, providing light to your work area. No additional controls are required for the bulb itself.

6. MAINTENANCE

- **Cleaning:** If the bulb becomes dusty, ensure the machine is unplugged and the bulb is cool. Gently wipe the glass with a soft, dry cloth. Avoid using liquid cleaners.
- **Replacement:** Replace the bulb when it burns out or if its light output significantly diminishes. Refer to the "Setup and Installation" section for replacement procedures.

7. TROUBLESHOOTING

Bulb Does Not Light Up

- **Check Power:** Ensure the sewing machine is properly plugged into a working electrical outlet.
- **Check Installation:** Verify that the bulb is securely seated in its socket. Unplug the machine, remove the bulb, and re-insert it, ensuring it is twisted clockwise until locked.
- **Inspect Bulb:** Visually inspect the bulb for any broken filaments or cracks. If damaged, replace with a new bulb.
- **Machine Issue:** If the new bulb still does not light up after verifying the above, there may be an issue with the sewing machine's electrical system. Consult a qualified technician or your sewing machine's service manual.

8. SPECIFICATIONS

Feature	Specification
Brand	Cutex
Model Number	1
Part Number	1111
UPC	747465121238
Light Type	Incandescent
Wattage	6 Watts
Voltage	12 Volts
Bulb Base	BA15D (Push-in Turn & Lock)
Light Color	White
Compatible Machines	Babylock: BL3200, BL5180, BL3-418, BL3-426, BL4-428, BL4-436, BL4-436DF, BL4-625, BL4-714 Riccar: RL613, RL613E Simplicity: SL660, SL850, SL880, SL880D Singer: 14U244, 14U34B, 14U44, 14U64A, 14U234B, 14U286B White: 1500 Speedylock, 1600 Speedylock

9. WARRANTY AND SUPPORT

For information regarding warranty, returns, or technical support, please refer to the retailer's policy where the product was purchased or contact Cutex customer service directly. Contact details are typically available on the product packaging or the official Cutex website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01FZ13NVQ>

More documents and user manuals: <https://manuals.plus/>