

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Weston](#) /

› [Weston WEL-3200S 32-inch HD LED Smart TV User Manual](#)

Weston WEL-3200S

Weston WEL-3200S 32-inch HD LED Smart TV User Manual

Model: WEL-3200S

1. INTRODUCTION

This user manual provides comprehensive instructions for the installation, operation, and maintenance of your Weston WEL-3200S 32-inch HD LED Smart TV. Please read this manual thoroughly before using your television and retain it for future reference. Following these instructions will ensure optimal performance and extend the lifespan of your device.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, fire, or damage to the television, please observe the following safety precautions:

- **Power Source:** Connect the TV only to an AC power outlet with the correct voltage as indicated on the TV's label.
- **Ventilation:** Ensure adequate ventilation around the TV. Do not block ventilation openings or place the TV on soft surfaces that may obstruct airflow.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids, such as vases, on the TV.
- **Cleaning:** Unplug the TV from the power outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Placement:** Place the TV on a stable, level surface or mount it securely to a wall according to installation instructions. Avoid placing it in direct sunlight or near heat sources.
- **Lightning:** During lightning storms or when left unattended for long periods, unplug the TV from the wall outlet and disconnect the antenna or cable system.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- 1 x Weston WEL-3200S LED TV
- 1 x Table Top Stand
- 1 x Wall Mount Bracket

- 1 x User Manual
- 1 x Warranty Card
- 1 x Remote Control

4. PHYSICAL OVERVIEW

4.1 Front View



Figure 4.1: Front view of the Weston WEL-3200S Smart TV, showing the screen and branding.

The front of the television features the 32-inch HD LED display and the Weston brand logo. The slim bezel design maximizes the viewing area.

4.2 Connectivity Ports



Figure 4.2: Rear/side view illustrating the various connectivity options available on the TV, including HDMI, USB, Wi-Fi, and LAN ports.

The television is equipped with multiple ports for connecting external devices:

- **HDMI Ports (x2):** For connecting high-definition devices such as set-top boxes, Blu-ray players, and gaming consoles.
- **USB Ports (x2):** For connecting USB storage devices to play media files (videos, music, photos) or for software updates.
- **LAN (Ethernet) Port:** For a wired internet connection.
- **Wi-Fi:** Integrated for wireless internet connectivity.
- **Audio/Video Input:** Standard analog inputs for older devices.

5. SETUP AND INSTALLATION

5.1 Attaching the Table Top Stand

1. Carefully place the TV face down on a soft, clean surface to prevent screen damage.
2. Align the stand with the mounting holes on the bottom of the TV.
3. Secure the stand using the provided screws. Ensure all screws are tightened firmly.
4. Carefully lift the TV to its upright position on a stable, level surface.

5.2 Wall Mounting (Optional)

If you choose to wall mount your TV, use the provided wall mount bracket and follow the instructions included with the bracket. It is recommended to seek professional assistance for wall mounting to ensure safety and proper installation.

5.3 Initial Power-Up and First-Time Setup

1. Connect the power cord to the TV and then to a wall outlet.
2. Press the power button on the TV or the remote control to turn on the TV.
3. Upon first power-up, the TV will guide you through the initial setup process. This typically includes:
 - Language selection.
 - Network connection (Wi-Fi or Ethernet).
 - Time zone and date settings.
 - Channel scanning (if connecting an antenna/cable).
4. Follow the on-screen prompts to complete the setup.

6. OPERATING YOUR SMART TV

6.1 Remote Control Functions

The provided remote control allows you to navigate the TV's features. Key functions include:

- **Power Button:** Turns the TV on or off.
- **Volume Up/Down:** Adjusts the audio level.
- **Channel Up/Down:** Changes TV channels.
- **Navigation Buttons (Arrow Keys, OK):** Used to move through menus and select options.
- **Home/Smart Button:** Accesses the Smart TV interface.
- **Input/Source:** Selects the input source (HDMI, USB, AV, TV).
- **Back/Exit:** Returns to the previous screen or exits a menu.

6.2 Smart TV Interface



Figure 6.2: The Smart TV home screen displaying various application icons for easy access to features like Google Play, media playback, and web browsing.

Your Weston Smart TV runs on an Android operating system, providing access to a variety of applications and online

services. The home screen displays icons for pre-installed apps and allows you to download more from the Google Play Store.

- **Accessing Apps:** Use the navigation buttons on your remote to select and launch applications like YouTube, Facebook, Wikipedia, and others.
- **Screen Mirroring:** This feature allows you to display content from your compatible smartphone or tablet directly onto the TV screen. Refer to your device's instructions for initiating screen mirroring.
- **Internet Browsing:** Use the built-in browser to access websites.

7. CONNECTIVITY

7.1 Connecting External Devices

- **HDMI:** Connect HDMI cables from your external devices (e.g., set-top box, game console) to the HDMI ports on the TV. Select the corresponding HDMI input using the "Input" or "Source" button on your remote.
- **USB:** Insert a USB drive into one of the USB ports. The TV's media player will typically launch automatically, allowing you to browse and play media files.
- **Analog AV:** For older devices, connect composite video and stereo audio cables to the AV input ports.

7.2 Internet Connection

- **Wi-Fi:** Navigate to the TV's settings menu, select "Network," and then "Wi-Fi." Choose your home network from the list and enter the password.
- **Ethernet (LAN):** Connect an Ethernet cable from your router or modem to the LAN port on the TV. The TV should automatically detect the wired connection.

8. MAINTENANCE

8.1 Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner (do not spray directly onto the screen).
- **Cabinet:** Use a soft, dry cloth to wipe the TV cabinet. Avoid using abrasive cleaners, waxes, or solvents.
- Always unplug the TV before cleaning.

8.2 Software Updates

Periodically check for software updates in the TV's settings menu to ensure optimal performance and access to the latest features. Updates can often be performed over the internet (OTA - Over-The-Air) or via USB.

9. TROUBLESHOOTING

Before contacting customer support, please refer to the following common issues and solutions:

Problem	Possible Cause / Solution
No power	Check if the power cord is securely connected to the TV and the wall outlet. Ensure the outlet has power. Try a different outlet.

Problem	Possible Cause / Solution
No picture, but sound is present	Ensure the correct input source is selected. Check cable connections (HDMI, AV). Adjust brightness/contrast settings.
No sound, but picture is present	Check volume level and mute status. Ensure external audio devices are correctly connected and powered on. Check audio settings.
Remote control not working	Replace batteries. Ensure there are no obstructions between the remote and the TV's IR sensor. Point the remote directly at the TV.
Cannot connect to Wi-Fi	Ensure Wi-Fi is enabled on the TV. Check if the Wi-Fi password is correct. Restart your router and the TV. Ensure the TV is within range of your Wi-Fi router.
Smart features are slow or unresponsive	Check your internet connection speed. Close unused applications. Restart the TV. Consider a factory reset if issues persist (note: this will erase all settings and installed apps).

10. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Weston
Model	WEL-3200S
Screen Size	32 Inches (80 cm)
Display Technology	LED
Resolution	HD Ready (1366 x 768 pixels)
Refresh Rate	60 Hz
Operating System	Android
Audio Output	24 Watts (Surround Sound)
HDMI Ports	2
USB Ports	2
Connectivity	Wi-Fi, Ethernet (LAN)
Viewing Angle	178 Degrees
Aspect Ratio	16:9
Product Dimensions (LxWxH)	70 x 65 x 10 cm
Item Weight	6 kg

Note: Specifications are subject to change without prior notice.

11. WARRANTY AND SUPPORT

11.1 Warranty Information


This Weston WEL-3200S television comes with a **1-year manufacturer's warranty** from the date of purchase. The warranty covers manufacturing defects and issues arising from normal use. Please retain your purchase receipt and warranty card for any claims.

The warranty does not cover damage caused by misuse, accidents, unauthorized repairs, power surges, or normal wear and tear. For detailed terms and conditions, refer to the warranty card included in your package.

11.2 Customer Support

For technical assistance, service requests, or inquiries regarding your Weston TV, please contact Weston customer support. Contact details can typically be found on the warranty card or the official Weston website.

Related Documents - WEL-3200S

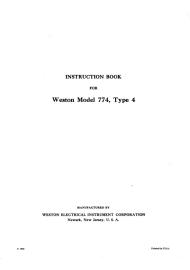	<p>Weston Model 310 Portable Wattmeters Instruction Manual 1919</p> <p>Detailed instructions and technical specifications for the Weston Model 310 Portable Wattmeters, first published in 1919. Covers operation, forms, corrections, and connection diagrams for this electrodynamometer wattmeter.</p>
	<p>Weston Model 774, Type 4 Analyzer and Tube Checker Instruction Book</p> <p>Comprehensive instruction manual for the Weston Model 774, Type 4, a versatile electronic test instrument combining an analyzer and a tube checker. Details operation, testing procedures, and technical specifications.</p>
	<p>Weston 73-0501-RT Vertical Sausage Stuffer User Manual</p> <p>Comprehensive user manual for the Weston 73-0501-RT Vertical Sausage Stuffer. Includes assembly, operation, cleaning, food safety guidelines, and warranty information. Make your own sausages at home.</p>
	<p>Weston Professional Advantage Vacuum Sealer 65-0501-W User Manual and Guide</p> <p>This comprehensive user manual for the Weston Professional Advantage Vacuum Sealer (Model 65-0501-W) provides detailed instructions on operation, safety, maintenance, and food preservation techniques. Learn how to extend food freshness and reduce waste with this essential kitchen appliance.</p>




**#5 ELECTRIC
MEAT GRINDER**

82-0301-W

[Weston #5 Electric Meat Grinder & Sausage Stuffer User Manual](#)

Comprehensive user manual for the Weston #5 Electric Meat Grinder & Sausage Stuffer (Model 82-0301-W), detailing safety instructions, assembly, operation, cleaning, and food safety guidelines.

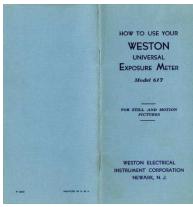

[Weston Universal Exposure Meter Model 617 User Manual](#)

User manual for the Weston Universal Exposure Meter Model 617, providing detailed instructions for use in still and motion picture photography, including scene classification, film speed charts, and color photography guidance.