

tectake 401995

tectake XXL Hammock with Wooden Stand

Model: 401995

INTRODUCTION

Thank you for choosing the tectake XXL Hammock with Wooden Stand. This product is designed to provide a comfortable and relaxing experience in your outdoor space. This manual contains important information regarding the safe assembly, operation, and maintenance of your hammock. Please read it thoroughly before use and retain it for future reference.

SAFETY INFORMATION

WARNING: Ensure the hammock and stand are securely fixed before use. Do not use near children without supervision. Verify the maximum load capacity before use.

- Always assemble the hammock on a flat, stable surface.
- Regularly inspect all components for wear, damage, or loose connections. Do not use if any part is damaged.
- Do not exceed the maximum weight capacity of 200 kg (approximately 440 lbs).
- Keep children and pets away from the hammock during assembly and ensure they are supervised when near the hammock during use.
- Avoid sudden movements or excessive swinging, which could cause instability.
- Do not stand on the hammock or use it as a trampoline.
- Store the hammock and stand indoors or cover them during adverse weather conditions to prevent damage and prolong product life.

PACKAGE CONTENTS

Please check that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact customer support.

- 1 x XXL Wooden Hammock Stand
- 1 x XXL Hammock (Cotton)
- Assembly Hardware (galvanized hooks, steel chains, screws)
- Instruction Manual

SETUP INSTRUCTIONS

Follow these steps carefully to assemble your hammock and stand.

Step 1: Assemble the Wooden Stand

Lay out all wooden components and hardware on a clean, flat surface. Identify the curved main beams and the support feet.



Image: Curved wooden stand components laid out.

Connect the main curved wooden beams using the provided screws and bolts. Ensure all connections are tight and secure. Attach the horizontal support feet to the bottom of the main beams, ensuring the stand is stable and balanced.

Step 2: Attach the Hammock

Unfold the cotton hammock. Locate the galvanized hooks and steel chains. Attach one end of the hammock to the designated attachment point on one side of the wooden stand using the hooks and chains. Repeat for the other end of the hammock.



Image: Step-by-step assembly of the wooden stand and hammock.

Jardin



Terrasse



Sable

tectake
jardin

Profitez d'un repos de rêve en plein air, seul ou à deux, dans ce hamac confortable. C'est l'endroit parfait pour lire, discuter et oublier le quotidien en vous balançant doucement : créez votre propre oasis de bien-être chez vous.

Image: Detail of the secure chain connection to the wooden stand.

Step 3: Adjust Height (Optional)

The hammock's height can be adjusted by changing the link on the steel chains where the hooks are attached. Ensure both sides are adjusted evenly for a balanced lying surface.

tectake

jardin



Hamac chic

pour 2 personnes pour
une détente garantie



Suspension sécurisée

grâce à des chaînes et
crochets en acier solide



Hauteur variable

réglable par les maillons
des 2 chaînes



Structure inoxydable

en bois résineux huilé
avec vis



Surface robuste

grâce au mélange de
coton et polyester



Capacité de charge élevée

peut supporter un poids
allant jusqu'à 200 kg



POUR UNE DÉTENTE
inoubliable.

Image: The tectake XXL Hammock fully assembled and ready for use.

OPERATING INSTRUCTIONS

To ensure a safe and enjoyable experience, please observe the following guidelines:

- **Entering the Hammock:** Approach the hammock from the center. Sit down gently in the middle of the fabric, then slowly recline. Avoid jumping or diving into the hammock.
- **Exiting the Hammock:** Sit up slowly, place your feet on the ground, and stand up carefully.
- **Weight Distribution:** The hammock is designed for up to two people, with a maximum combined weight of 200 kg. Distribute weight evenly.
- **Supervision:** Always supervise children when they are using or near the hammock.



Image: Two individuals enjoying the spacious tectake XXL Hammock.

MAINTENANCE

Proper maintenance will extend the life of your hammock and stand.

Wooden Stand Care

- **Cleaning:** Wipe the wooden stand with a damp cloth to remove dirt. Avoid harsh chemicals.
- **Protection:** The stand is made of oiled pine wood. To maintain its appearance and protect it from weather, re-oil the wood periodically (e.g., annually) with a suitable outdoor wood oil.
- **Storage:** During prolonged periods of non-use or harsh weather (rain, snow, extreme sun), store the wooden stand indoors or cover it with a protective cover.

Hammock Fabric Care

- **Cleaning:** The cotton fabric can be hand-washed with mild soap and water. Do not bleach. Allow to air dry completely before storing.
- **Storage:** Remove the hammock from the stand and store it in a dry, protected area when not in use or during bad weather to prevent mildew and fading.

Hardware Inspection

- Periodically check all screws, bolts, hooks, and chains for tightness and signs of rust or wear. Tighten any loose fasteners. Replace rusted or severely worn components immediately.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Hammock feels unstable or wobbly.	Loose connections in the stand; uneven ground.	Ensure all screws and bolts on the stand are tightened. Move the stand to a flat, level surface.
Hammock sags too much.	Hammock fabric has stretched; incorrect chain adjustment.	Adjust the chains to a higher link to raise the hammock. Note that cotton hammocks naturally stretch over time.
Wood stand shows signs of weathering (fading, cracking).	Exposure to sun and rain without protection.	Apply outdoor wood oil to nourish and protect the wood. Store indoors or cover during harsh weather.
Hammock fabric has mildew or stains.	Left exposed to moisture; not cleaned regularly.	Hand-wash the fabric with mild soap and water. Ensure it is completely dry before storing. Store in a dry place.

SPECIFICATIONS

Key technical details for your tectake XXL Hammock with Wooden Stand:

- **Brand:** tectake
- **Model Number:** 401995
- **Material:** Pinewood (Stand), Cotton (Hammock)
- **Color:** White (Hammock)
- **Total Dimensions (L x W x H):** 415 x 150 x 124 cm (approximately 163.4 x 59.1 x 48.8 inches)
- **Lying Surface (L x W):** 205 x 150 cm (approximately 80.7 x 59.1 inches)
- **Adjustable Lying Height:** 80 - 110 cm (approximately 31.5 - 43.3 inches)
- **Maximum Weight Recommendation:** 200 Kilograms (approximately 440 lbs)
- **Item Weight:** 30 Kilograms (approximately 66 lbs)
- **Seating Capacity:** 2
- **Country of Origin:** China

DIMENSIONS

Dimensions totales

415 x 150 x 124 cm

Surface de couchage

205 x 150 x 80 - 110 cm

Largeur des pieds

120 cm

Épaisseur des poutres

6 x 6 cm

Les mesures sont approximatives

TECHNICITÉS

Capacité de charge 200 kg

Poids env. 30 kg

Matériaux coton, polyester, bois résineux huilé, acier galvanisé

CONTENU

Hamac

Support pour hamac

Matériel de montage

Instructions de montage

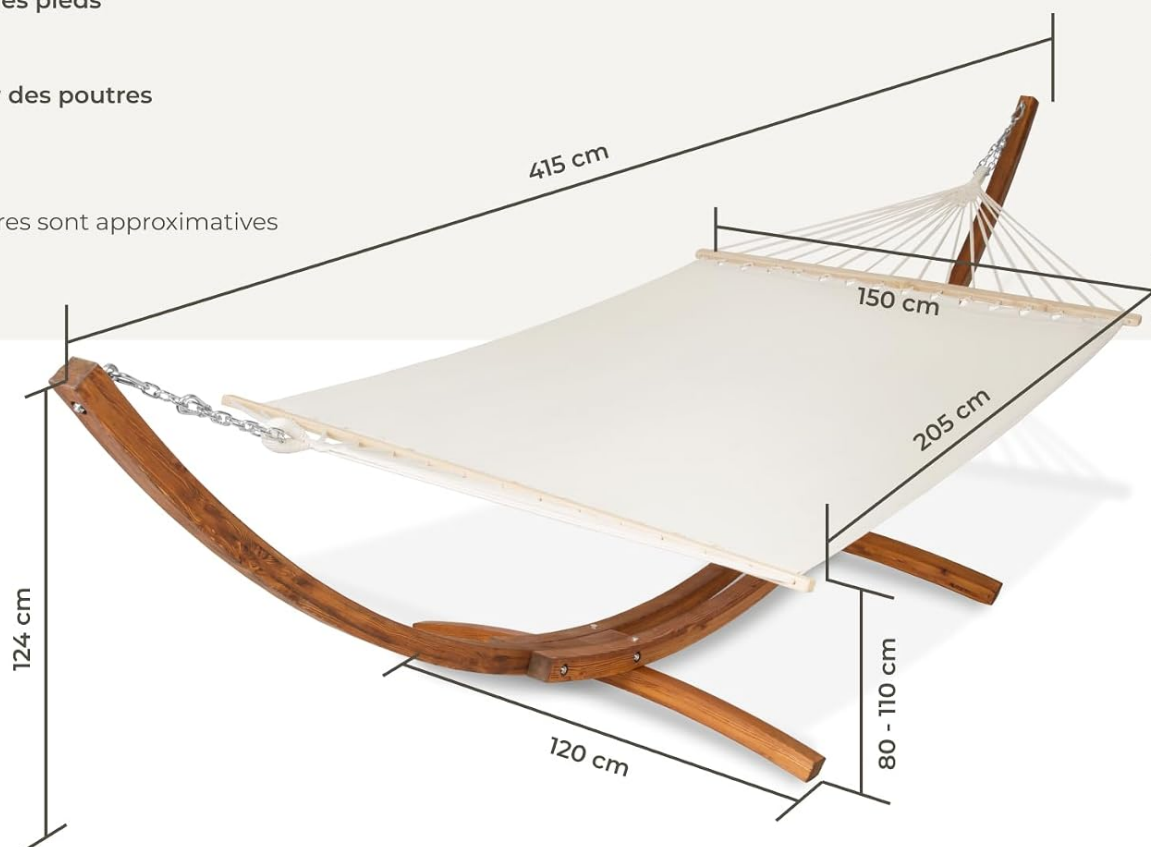


Image: Product dimensions for the tectake XXL Hammock.

WARRANTY AND SUPPORT

Your tectake XXL Hammock with Wooden Stand is covered by a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the documentation provided at the time of purchase or visit the official tectake website.

If you have any questions, require assistance with assembly, or need to report a defect, please contact tectake customer support. Contact information can typically be found on the product packaging or the brand's official website.

Please have your model number (401995) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question