

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BISSELL](#) /

› [BISSELL PowerFresh Deluxe Steam Mop Model 1806C User Manual](#)

BISSELL 1806C

BISSELL PowerFresh Deluxe Steam Mop Model 1806C User Manual

Brand: BISSELL | Model: 1806C

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using your steam mop. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always connect to a properly grounded outlet.
- Do not immerse in water or liquid.
- Do not leave appliance unattended when plugged in.
- Unplug from outlet when not in use and before servicing.
- Do not use with damaged cord or plug.
- Use only as described in this manual.
- Use only manufacturer's recommended attachments.
- Do not use on unsealed hardwood floors.
- Always use distilled or demineralized water to prevent mineral buildup.

2. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your BISSELL PowerFresh Deluxe Steam Mop.



Image: Front and side view of the BISSELL PowerFresh Deluxe Steam Mop, showcasing its upright design and detachable handheld unit.

Included Components:

- PowerFresh Deluxe Steam Mop Unit
- Water Tank
- Mop Handle
- Measuring Cup
- 1 Soft Microfiber Mop Pad
- 1 Scrubby Microfiber Mop Pad
- 2 Spring Breeze Fragrance Discs
- SpotBoost Brush


Includes:



1 SOFT PAD



1 SCRUBBY PAD

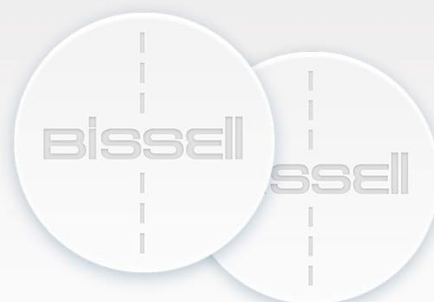

2 SPRING BREEZE SCENT DISCS

Image: A visual representation of the included accessories: one soft microfiber pad, one scrubby microfiber pad, and two Spring Breeze scent discs.

3. SETUP AND ASSEMBLY

1. **Attach Handle:** Insert the handle into the main body of the steam mop until it clicks securely into place. A screwdriver may be required for some models to secure the handle with a screw.

2. Fill Water Tank:

- Open the water tank cap located on the front of the unit.
 - Use the provided measuring cup to fill the tank with distilled or demineralized water. Do not overfill.
 - Close the water tank cap securely.
3. **Attach Mop Pad:** Select either the soft pad for everyday cleaning or the scrubby pad for tougher messes. Align the pad with the mop head and press firmly to attach it using the hook and loop fasteners.
4. **Insert Fragrance Disc (Optional):** Open the scent disc tray on the mop head and insert one Spring Breeze fragrance disc. Close the tray.

4. OPERATING INSTRUCTIONS

4.1 General Floor Cleaning

1. **Prepare Area:** Vacuum or sweep the floor thoroughly before using the steam mop to remove loose dirt and debris.
2. **Plug In:** Plug the power cord into a grounded electrical outlet. The power indicator light will illuminate.
3. **Select Steam Level:** Press the power button. Once the unit heats up (approximately 30 seconds), select your desired steam level (low or high) using the digital steam control buttons.

Choose Your Steam Level

with Digital Steam Control



Image: Digital steam control panel with power button and steam level selection buttons.

4. **Begin Cleaning:** Slowly move the steam mop across the floor surface. The steam will activate as you move the mop. For sanitization, hold the mop over the area for at least 15-20 seconds.
5. **Fragrance Release:** As you clean, the inserted Spring Breeze fragrance disc will release a refreshing scent.

Built-In Scent Disc Tray Releases Refreshing Scent



Image: A hand demonstrating how to open the built-in scent disc tray on the mop head.

6. **Finish Cleaning:** When finished, press the power button to turn off the steam, then unplug the unit.

4.2 Using the SpotBoost Brush

The detachable SpotBoost Brush is designed for tackling tough, sticky messes and grout lines.

1. **Detach Handheld Unit:** Press the release button to detach the handheld unit from the main body.
2. **Activate Brush:** The SpotBoost Brush is located on the bottom of the handheld unit. Ensure the unit is powered on and steam is active.
3. **Clean Spot:** Hold the handheld unit with the SpotBoost Brush directly over the tough mess or grout line. Scrub gently while steam is applied.

Tackle Tough, Sticky Messes with the SpotBoost™ Brush



Image: The detachable SpotBoost Brush being used to clean a sticky mess on a hard floor, demonstrating its targeted cleaning capability.

4. **Reattach:** Once the spot is clean, reattach the handheld unit to the main body until it clicks into place.

4.3 Compatible Floor Surfaces

The PowerFresh Deluxe Steam Mop is safe for use on sealed hard floors, including:

- Hardwood
- Linoleum
- Ceramic
- Tile
- Marble
- Granite

Important: Do not use on unsealed hardwood floors or floors that are sensitive to heat or moisture. Always test on an inconspicuous area first.

Safe to Use on Sealed Surfaces:



Image: Visual guide indicating safe surfaces for steam mop use, including hardwood, ceramic & tile, marble, and linoleum.

5. MAINTENANCE

5.1 Cleaning Mop Pads

- Remove mop pads after each use.
- Machine wash pads in warm water with mild detergent. Do not use bleach or fabric softeners.
- Tumble dry low or air dry.
- Replace pads when they become worn or lose their cleaning effectiveness.

5.2 Emptying Water Tank

After each use, or before storing, empty any remaining water from the tank. This helps prevent mineral buildup and prolongs the life of the unit.

5.3 Descaling (Recommended Periodically)

To maintain optimal steam performance, periodically descale your steam mop, especially if using tap water (though

distilled water is recommended). Consult the full product manual for detailed descaling instructions, which typically involve using a vinegar solution.

5.4 Storage

Store the steam mop in a dry, protected area. Ensure the water tank is empty and the mop pad is removed and cleaned before storage. The power cord can be wrapped around the cord wraps on the unit.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or reduced steam	Water tank empty; Mineral buildup; Unit not heated	Refill water tank; Perform descaling procedure; Allow 30 seconds for heating
Mop not sanitizing effectively	Mop moved too quickly	Hold mop over area for 15-20 seconds for sanitization
Streaks on floor	Dirty mop pad; Too much steam; Floor not swept/vacuumed	Change/clean mop pad; Use lower steam setting; Pre-clean floor thoroughly
Unit not turning on	Not plugged in; Power outlet issue	Ensure unit is securely plugged in; Test outlet with another appliance

7. SPECIFICATIONS

- **Brand:** BISSELL
- **Model Name:** PowerFresh Deluxe
- **Item Model Number:** 1806C
- **Special Feature:** 3-in-1 With Handheld Steam Cleaner
- **Surface Recommendation:** Floor (Sealed Hardwood, Linoleum, Ceramic, Tile, Marble, Granite)
- **Wattage:** 12 watts
- **Item Weight:** 6.2 Pounds
- **Tank Volume:** 0.56 Liters
- **Heat Time:** 0.5 Minutes (30 seconds)
- **Power Source:** Corded
- **Product Dimensions:** 30"D x 8"W x 6"H
- **UPC:** 011120230871
- **Manufacturer:** BISSELL Homecare, Inc.

8. WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your purchase or visit the official BISSELL website.

For customer support, replacement parts, or additional information, please contact BISSELL Customer Service or visit their official support portal.

Online Support: www.bissell.com/support

