

Swiss Eagle SE-9070-22

Swiss Eagle SE-9070-22 Chronograph Watch User Manual

Model: SE-9070-22

1. INTRODUCTION

Thank you for choosing the Swiss Eagle SE-9070-22 Chronograph Watch. This manual provides detailed instructions for the proper setup, operation, and care of your timepiece. Please read this manual carefully to ensure correct usage and to maintain the watch's performance and appearance.

2. PRODUCT OVERVIEW

The Swiss Eagle SE-9070-22 is a sophisticated quartz chronograph watch featuring a black dial, rose gold-tone metal band, and water resistance up to 100 meters. It is designed for precision and durability.

Watch Components

- **Crown:** Used for setting time and date.
- **Pushers (A & B):** Used to operate the chronograph functions.
- **Dial:** Displays time, date, and chronograph measurements.
- **Hands:** Hour, minute, second, and chronograph hands.
- **Sub-dials:** Display chronograph minutes, seconds, and 24-hour time (if applicable).
- **Bracelet:** Metal band for securing the watch to your wrist.
- **Foldover Clasp:** Secures the bracelet.



Figure 2.1: Side view of the watch, illustrating the crown and chronograph pushers.



Figure 2.2: Front view of the watch, showing the main dial, sub-dials, and hands.

3. SETUP

3.1 Setting the Time

1. Pull the crown out to position 2 (the outermost click).
2. Rotate the crown to set the hour and minute hands to the correct time. Ensure you distinguish between AM and PM if your watch has a 24-hour indicator or date changes at midnight.
3. Push the crown back into position 0 (normal operating position).

3.2 Setting the Date

Note: Avoid setting the date between 9:00 PM and 3:00 AM, as this can damage the movement. If the current time falls within this period, first set the time outside this range, then adjust the date, and finally reset the time.

1. Pull the crown out to position 1 (the first click).
2. Rotate the crown (usually clockwise) to set the date.
3. Push the crown back into position 0.

3.3 Bracelet Adjustment and Clasp Operation

The metal bracelet may require professional adjustment to fit your wrist comfortably. This typically involves removing or adding links. Please consult a qualified watch technician for this service.

To operate the foldover clasp:

1. To open: Gently press the release buttons on the sides of the clasp (if present) or lift the safety latch and

then the main clasp.

2. To close: Fold the main clasp over until it clicks securely, then engage the safety latch (if present).



Figure 3.1: Back view of the watch, showing the foldover clasp in an open position.

4. OPERATING THE CHRONOGRAPH

Your Swiss Eagle SE-9070-22 features a chronograph function for measuring elapsed time.

1. **Start:** Press pusher A (top pusher) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press pusher A again to stop the chronograph. The elapsed time will be indicated by the chronograph hands on the sub-dials.
3. **Reset:** After stopping the chronograph, press pusher B (bottom pusher) to reset all chronograph hands to their zero positions.
4. **Intermediate (Split) Time:** Some chronographs allow for split time measurement. If your model supports this, press pusher B while the chronograph is running to display an intermediate time. Press B again to catch up to the running time. Press A to stop, then B to reset.

5. WATER RESISTANCE

Your watch is water resistant up to 100 meters (10 ATM). This rating makes it suitable for swimming and

snorkeling, but not for high-impact water sports or diving.

Important Precautions:

- **Do not operate the crown or pushers when the watch is wet or submerged in water.** This can compromise the water resistance.
- Avoid exposing the watch to hot water, steam, or extreme temperature changes (e.g., hot showers, saunas, hot tubs), as this can damage the seals.
- After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly with a soft cloth.
- Water resistance is not a permanent condition and may decrease over time due to wear and tear, aging of gaskets, or accidental impact. It is recommended to have the water resistance checked periodically by a qualified watch technician.

6. MAINTENANCE

6.1 Cleaning

To maintain the appearance of your watch:

- Wipe the case and bracelet regularly with a soft, dry cloth.
- For metal bracelets, a soft brush and mild soapy water can be used, followed by thorough rinsing with fresh water and drying. Ensure the crown is pushed in completely before cleaning with water.
- Avoid using harsh chemicals, solvents, or abrasive cleaners.

6.2 Battery Replacement

Your watch is powered by a single LR44 battery. When the battery is depleted, the watch will stop running. Battery life typically ranges from 2 to 3 years, depending on usage.

Battery replacement should only be performed by a qualified watch technician. Attempting to replace the battery yourself may damage the watch and void the warranty. A professional will ensure the correct battery type is used and that the water resistance seals are properly re-seated.

6.3 General Care

- Avoid exposing your watch to extreme temperatures (above 60°C / 140°F or below 0°C / 32°F).
- Protect your watch from strong impacts or shocks.
- Keep the watch away from strong magnetic fields (e.g., speakers, refrigerators, mobile phones), as these can affect the accuracy of the quartz movement.

7. TROUBLESHOOTING

7.1 Watch Not Running

- Check if the crown is pushed in completely to position 0.
- The battery may be depleted. Contact a professional watch technician for battery replacement.

7.2 Incorrect Time or Date

- Refer to Section 3.1 and 3.2 to reset the time and date correctly.
- Ensure the crown is fully pushed in after setting.

7.3 Chronograph Hands Not Resetting to Zero

If the chronograph hands do not return to their zero positions after pressing pusher B, they may need calibration. This procedure varies by movement, but typically involves:

1. Pull the crown out to position 2.
2. Press pusher A or B repeatedly to advance the chronograph hands to their zero positions.
3. Once aligned, push the crown back into position 0.

If the issue persists, professional service may be required.

8. SPECIFICATIONS

Feature	Specification
Model Number	SE-9070-22
Movement Type	Quartz
Display Type	Analog Chronograph
Case Material	Stainless Steel
Case Diameter	30 mm
Case Thickness	10 mm
Band Material	Metal
Band Color	Rose Gold
Band Width	18 mm
Crystal Material	Plastic
Water Resistance Depth	100 Meters (10 ATM)
Battery Type	1 x LR44 (included)
Item Weight	120 Grams

9. WARRANTY INFORMATION

This Swiss Eagle watch is covered by a **2-Year Manufacturer Warranty** from the date of purchase. The warranty covers manufacturing defects in materials and workmanship under normal use.

Please note that the warranty does not cover:

- Normal wear and tear (e.g., scratches on case, crystal, or bracelet).
- Damage resulting from improper handling, lack of care, accidents, or unauthorized repairs.
- Battery life.
- Water damage if the watch was opened or if the crown/pushers were operated while wet.

For warranty claims, please retain your proof of purchase and contact customer support.

10. CUSTOMER SUPPORT

If you have any questions or require assistance with your Swiss Eagle SE-9070-22 watch, please contact the retailer where you purchased the product or visit the official Swiss Eagle website for support information. For general inquiries, you may visit the [Swiss Eagle Store on Amazon](#).