

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Innovative Technology](#) /

› [Innovative Technology ITSBO-358P5 Premium 5W Bluetooth Outdoor Rock Speakers User Manual](#)

Innovative Technology ITSBO-358P5

Innovative Technology ITSBO-358P5 Premium 5W Bluetooth Outdoor Rock Speakers User Manual

Model: ITSBO-358P5

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all safety instructions before using this product. Keep these instructions for future reference.

- Do not expose the speakers to extreme temperatures or direct sunlight for prolonged periods.
- Ensure charging ports are dry before connecting power adapters.
- Use only the provided charging adapters and cables.
- Do not attempt to disassemble or modify the speakers. This will void the warranty and may cause damage or injury.
- Keep speakers away from open flames or heat sources.
- Dispose of batteries according to local regulations. Do not incinerate.
- While waterproof, avoid submerging the speakers in water.

PACKAGE CONTENTS

- 2 x Innovative Technology ITSBO-358P5 Rock Speakers
- 2 x USB Charging Adapters
- 2 x USB Charging Cords
- Instruction Manual (this document)

PRODUCT OVERVIEW

The Innovative Technology ITSBO-358P5 rock speakers are designed for outdoor use, featuring Bluetooth connectivity and a durable, waterproof construction. They blend seamlessly into garden or patio environments.

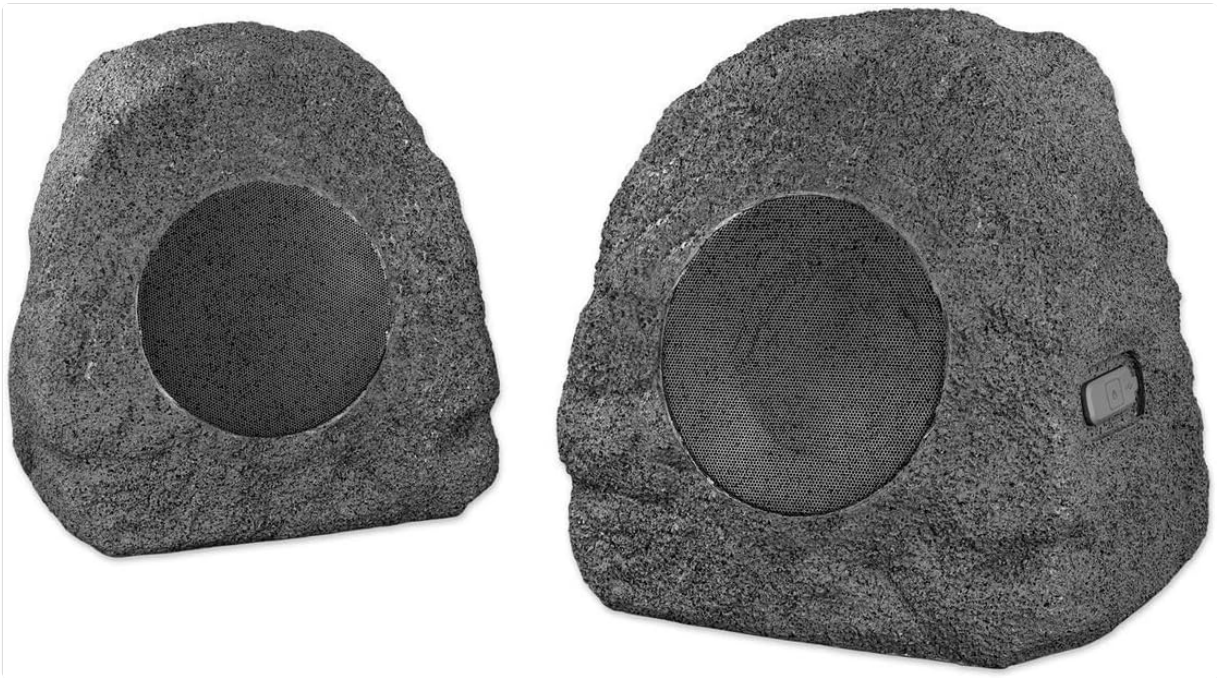


Figure 1: Front view of the ITSBO-358P5 rock speakers.



Figure 2: ITSBO-358P5 rock speakers integrated into an outdoor landscape.

Speaker Components

- **Speaker Grille:** Protects the speaker driver.
- **Power Button:** Turns the speaker on/off.
- **Charging Port:** For connecting the USB charging cable.
- **LED Indicator:** Displays charging and Bluetooth status.

CHARGING THE SPEAKERS

Each speaker contains a built-in rechargeable 5200mAh battery, providing up to 10 hours of playback on a full charge.

1. Locate the charging port on each speaker. Ensure the port is dry before charging.
2. Connect one end of the provided USB charging cord to the speaker's charging port.

3. Connect the other end of the USB charging cord to a USB charging adapter.
4. Plug the USB charging adapter into a standard wall outlet.
5. The LED indicator will illuminate during charging and change color or turn off when fully charged.
6. Allow approximately 4-5 hours for a full charge.

Note: For optimal battery life, fully charge the speakers before first use and periodically if not used for extended periods.

SETUP

1. Speaker Pairing (Stereo Mode)

The two rock speakers are designed to pair with each other automatically for a stereo sound experience. For best performance, ensure the speakers are within close proximity (typically within 10-12 feet) of each other.

1. Power on both speakers by pressing and holding their respective power buttons.
2. The speakers will automatically attempt to pair with each other. You may hear an audible confirmation tone once paired.
3. One speaker will act as the primary (master) unit, and the other as the secondary (slave) unit. The primary unit will then be ready for Bluetooth connection to your device.

2. Bluetooth Connection to Your Device

After the speakers have paired with each other, connect them to your Bluetooth-enabled audio source (e.g., smartphone, tablet).

1. Ensure both speakers are powered on and have successfully paired with each other. The LED indicator on the primary speaker will typically flash, indicating it's in pairing mode.
2. On your audio source device, enable Bluetooth and search for available devices.
3. Select "ITSBO-358P5" (or similar name) from the list of found devices.
4. Once connected, the LED indicator on the primary speaker will typically stop flashing and remain solid, and you may hear an audible confirmation.
5. You can now play audio from your device through the rock speakers.

Bluetooth Range: The maximum operating range for Bluetooth connectivity is approximately 33 feet (10 meters) from your audio source device to the primary speaker. Obstacles and interference may reduce this range.

OPERATING INSTRUCTIONS

Playing Audio

Once connected via Bluetooth, simply start playing audio from your paired device. The sound will be transmitted wirelessly to the rock speakers.

Volume Control

Adjust the playback volume directly from your connected Bluetooth audio source device (e.g., smartphone, tablet). The speakers do not have independent volume controls.

Powering Off

To turn off the speakers, press and hold the power button on each speaker until the LED indicator turns off.

MAINTENANCE

Cleaning

Wipe the speakers with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure charging ports are clean and dry before charging.

Water Resistance

The speakers feature a waterproof design, making them suitable for outdoor use and resistant to splashes and rain. However, they are not designed to be submerged in water. Always ensure the charging port cover (if present) is securely closed when not charging.

Storage

When not in use for extended periods, store the speakers in a cool, dry place. It is recommended to fully charge the batteries every 3-6 months to maintain battery health.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---|--|---|
| Speakers do not power on. | Low or depleted battery. | Charge the speakers using the provided adapters and cables. |
| Speakers do not pair with each other. | Speakers are too far apart or interference. | Ensure speakers are within 10-12 feet of each other. Power cycle both speakers. |
| Cannot connect to Bluetooth device. | Speakers not in pairing mode; Bluetooth off on device; device too far. | Ensure primary speaker is flashing (pairing mode). Enable Bluetooth on your device. Move device closer to the primary speaker (within 33 feet). Forget previous connections on your device and try again. |
| No sound or distorted sound. | Volume too low; speakers not paired; Bluetooth connection unstable. | Increase volume on your audio source device. Ensure speakers are paired with each other and your device. Move speakers closer to each other and to the audio source. |
| Charging issues (e.g., not charging, LED not indicating). | Faulty cable/adaptor; dirty charging port; internal battery issue. | Try a different USB cable or adapter. Ensure charging port is clean and dry. If problem persists, contact customer support. |

SPECIFICATIONS

| | |
|--------------|-------------|
| Model Number | ITSBO-358P5 |
|--------------|-------------|

| | |
|----------------------------------|--|
| Speaker Type | Wireless, Outdoor Rock Speaker |
| Connectivity | Bluetooth, USB (for charging) |
| Bluetooth Range | Up to 33 feet (10 meters) |
| Speaker Output Power | 5 Watts per speaker |
| Battery | Built-in Rechargeable 5200mAh Lithium Ion |
| Battery Life | Up to 10 hours (at moderate volume) |
| Waterproof Rating | Yes (resistant to splashes and rain) |
| Dimensions (each speaker) | Approximately 52.07 x 26.67 x 20.32 cm (20.5 x 10.5 x 8 inches) |
| Weight (pair) | 5.99 kg (13.2 lbs) |
| Included Components | 2 Rock Speakers, 2 USB Charging Adapters, 2 USB Charging Cords, Instruction Manual |

WARRANTY AND SUPPORT

Innovative Technology products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Innovative Technology website.

Please retain your proof of purchase for warranty claims.