

[Manuals.plus](#) /

› [Home Decorators Collection](#) /

› Home Decorators Collection Petersford 52 in. LED Oil Rubbed Bronze Ceiling Fan User Manual

Home Decorators Collection Petersford 52 in. LED Oil Rubbed Bronze Ceiling Fan (Model 14426)

Home Decorators Collection Petersford 52 in. LED Oil Rubbed Bronze Ceiling Fan User Manual

Model: 14426

[Introduction](#) [Safety Information](#) [Package Contents](#) [Setup & Installation](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the Home Decorators Collection Petersford 52 in. LED Oil Rubbed Bronze Ceiling Fan. This fan is designed to provide efficient air movement and illumination for indoor spaces. It features a durable oil-rubbed bronze finish, five reversible blades, and an integrated LED light kit. This manual provides detailed instructions for safe installation, operation, and maintenance of your new ceiling fan.



This image displays the Petersford 52-inch ceiling fan in an oil-rubbed bronze finish. It features five reversible blades, a central integrated LED light with a white acrylic lens, and a sleek, modern design suitable for various indoor settings.

2. SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or personal injury, always follow these safety guidelines.

- Read all instructions carefully before beginning installation.
- Ensure the power is turned off at the circuit breaker or fuse box before wiring.
- All electrical connections must be in accordance with local codes, ordinances, and the National Electric Code (NEC). If you are unfamiliar with proper electrical wiring, consult a qualified electrician.
- The mounting structure must be capable of supporting the weight of the fan (at least 35 lbs).
- Do not operate the fan with damaged blades. Replace all blades if one is damaged.
- Avoid placing objects in the path of the fan blades.

- This fan is designed for indoor use only.

3. PACKAGE CONTENTS

Carefully unpack your fan and inspect the contents. Keep all packaging materials until you are satisfied with the product. The package should contain the following items:

- Fan Motor Housing (Oil Rubbed Bronze finish)
- 5 Reversible Fan Blades (Dark Walnut/Medium Maple)
- Integrated LED Light Kit with White Acrylic Lens
- Handheld Remote Control with Wall Mount
- 4.5-inch Downrod
- Mounting Bracket and Hardware
- Instruction Manual

4. SETUP & INSTALLATION

This section outlines the general steps for installing your ceiling fan. For detailed diagrams and specific wiring instructions, refer to the included installation guide.

4.1 Pre-Installation Checklist

- Ensure power is disconnected at the circuit breaker.
- Verify you have all necessary tools (screwdriver, wire strippers, ladder, etc.).
- Confirm the electrical box is securely mounted and rated for ceiling fan support.

4.2 Mounting the Fan

1. Attach the mounting bracket to the electrical junction box in the ceiling.
2. Assemble the downrod with the canopy and hang the fan motor assembly onto the mounting bracket. This fan supports dual mount installation for standard and sloped ceilings.

4.3 Wiring Connections

- Connect the fan's electrical wires to the household wiring according to the provided wiring diagram. Ensure all connections are secure using wire nuts.
- Connect the ground wire to the ground terminal in the junction box.

4.4 Attaching Blades and Light Kit

1. Securely attach the five reversible blades to the motor housing.
2. Install the integrated LED light kit and attach the white acrylic lens.

5. OPERATING INSTRUCTIONS

Your Petersford ceiling fan is operated using the included handheld remote control.

5.1 Remote Control Functions

- **Fan Speed Control:** The remote allows you to select between 3 fan speeds (Low, Medium, High).
- **Light Control:** Turn the integrated LED light ON or OFF. The remote also provides independent light control, allowing for dimming capabilities.
- **Reverse Airflow:** A button on the remote or a switch on the fan motor housing (depending on model revision) controls the direction of blade rotation.

5.2 Airflow Direction

- **Summer Operation (Downward Airflow):** For cooling, set the fan to rotate counter-clockwise, pushing air downward to create a cooling breeze.
- **Winter Operation (Upward Airflow):** For warming, set the fan to rotate clockwise, drawing air upward to circulate warm air near the ceiling.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your ceiling fan.

- **Cleaning:** Periodically clean the fan blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Blade Balance:** Check fan blades for wobble. If wobble occurs, ensure all blade screws are tight and blades are properly balanced using a balancing kit (not included).
- **Light Kit:** The integrated LED light is designed for long life. If issues arise, consult the troubleshooting section or contact customer support.
- **Tighten Fasteners:** Periodically check all screws and fasteners on the fan for tightness.

7. TROUBLESHOOTING

Before attempting any repairs, ensure the power is turned off at the circuit breaker.

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control not paired.	Check circuit breaker; Verify all wire connections are secure; Pair remote control according to instructions.
Fan wobbles	Loose blade screws; Unbalanced blades; Loose mounting bracket.	Tighten all blade screws; Use a blade balancing kit; Ensure mounting bracket is securely fastened.
Light does not work or flickers	Loose wire connection in light kit; Faulty LED component; Remote control issue.	Check light kit wiring; If LED component is faulty, contact customer support; Ensure remote battery is good and paired.

Problem	Possible Cause	Solution
Remote control not working	Dead battery; Remote not paired with fan.	Replace remote battery; Re-pair remote control with the fan.

8. SPECIFICATIONS

- **Brand:** Home Decorators Collection
- **Model Number:** 14426
- **Product Dimensions:** 52"D x 52"W x 12.4"H
- **Fan Blade Length:** 20.31 in.
- **Fan Blade Width:** 5.6 in.
- **Number of Blades:** 5
- **Blade Material:** Walnut Wood (Reversible Dark Walnut/Medium Maple)
- **Finish Type:** Oil Rubbed Bronze
- **Light Type:** Integrated LED (17-Watt)
- **Number of Speeds:** 3
- **Air Flow Capacity:** 5219 CFM
- **Electricity Use:** 73.5 Watts
- **Motor Speed:** 167 RPM
- **Control Method:** Remote Control
- **Downrod Length:** 4.5 inches
- **Installation Type:** Dual Mount (Standard and Sloped Ceiling)
- **Indoor/Outdoor Usage:** Indoor Only

9. WARRANTY & SUPPORT

For warranty information or technical assistance, please refer to the warranty card included with your product or contact Home Decorators Collection customer support. Keep your proof of purchase for any warranty claims.

Customer Support: Please refer to the contact information provided in your product packaging or visit the official Home Decorators Collection website for support options.

© 2023 Home Decorators Collection. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question