

[Manuals.plus](#) /

› [URPOWER](#) /

› URPOWER Garment Steamer User Manual

URPOWER UGT-01

URPOWER Garment Steamer User Manual

Model: UGT-01

PRODUCT OVERVIEW

The URPOWER Portable Handheld Garment Fabric Steamer is designed for fast and effective wrinkle removal from various fabrics. Its compact size makes it ideal for both home use and travel.



Image: Front view of the URPOWER Portable Handheld Garment Steamer, white in color, emitting steam from the nozzle.

Key Features:

- **Perfect Design:** New nozzle design for powerful and consistent steam, effectively removing stubborn wrinkles. Compact for easy storage and travel.
- **Safety Protection:** Automatic shut-off function activates when the unit overheats or water level is too low, ensuring safe operation on all fabric types.
- **Fast-Heat:** Heats up quickly in 2 minutes, providing 7-10 minutes of continuous steaming from a 130ML water tank.

- **8FT Long Power Cord:** Offers extended reach for convenient and flexible garment steaming.
- **Convenient to Carry:** Lightweight and portable, easily fits into luggage for travel. Designed for 110V/120V voltage.



Image: The steamer next to an open suitcase with clothes, illustrating its compact size and portability for travel.



Image: A person with luggage at an airport, with the steamer in the foreground, emphasizing its portability for business trips and vacations.

SETUP AND PREPARATION

1. **Water Filling:** Unscrew the nozzle head. Fill the water tank with *cold water only*. Distilled water is recommended to prevent mineral buildup. Do not use hot water. Never surpass the maximum fill level.
2. **Secure Nozzle:** Once filled, securely lock the nozzle head back onto the unit.
3. **Power Connection:** Ensure the steamer is connected to a 110V/120V power outlet. If traveling abroad, a transformer may be required.
4. **Positioning:** Never turn the unit upside down. The steamer should not be tilted past a 45-degree angle, especially when the unit is ON.



Image: Diagram showing the components of the URPOWER steamer, including the steam outlet, on/off switch, indicator light, handle, water tank, and base.

OPERATING INSTRUCTIONS

1. **Power On:** Turn the ON/OFF switch to the "ON" position. The switch light will illuminate, indicating the steamer is active.
2. **Heating Time:** The steamer will begin to emit wrinkle-busting steam from the nozzle within 2 minutes.
3. **Steaming Garments:** Hold the steamer upright and move it slowly over the fabric. The powerful and consistent steam will help remove wrinkles.
4. **Continuous Steaming:** A full 130ML water tank provides approximately 7-10 minutes of continuous steaming.
5. **Power Off:** When you have finished steaming, or if the water tank runs out, immediately place the ON/OFF switch in the "OFF" position and remove the plug from the electrical outlet.

BEFORE

AFTER



FAST&EASY TO USE
Produces Steam within 2 Minutes
Keep Your Clothes Neat and Fresh

Image: A side-by-side comparison showing a wrinkled blue shirt on the left and the same shirt smooth and wrinkle-free on the right, with the steamer in the foreground.

Fabric Compatibility:

The URPOWER Garment Steamer is safe to use on all types of fabric, including:

- Silk
- Jersey
- Plush toys
- Shirts
- Suits
- Wedding Dresses

Suitable for All Materials



Silk



Jersey



Plush toys



Shirts



Suits



Wedding Dresses



Image: The steamer positioned next to various fabric swatches and items like silk, jersey, plush toys, shirts, suits, and wedding dresses, indicating its versatility.

MAINTENANCE

- **Water Quality:** Always use distilled water to minimize mineral buildup and prolong the life of your steamer.
- **Emptying Water Tank:** After each use, ensure the steamer is turned off and unplugged. Allow it to cool completely, then empty any remaining water from the tank.
- **Storage:** Store the steamer in a cool, dry place.
- **Cleaning:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Steamer not producing steam.	Water tank is empty or water level is too low.	Turn off the steamer, unplug it, and refill the water tank with cold, distilled water.
Steamer automatically shuts off.	Unit is too hot or water level is too low (safety feature).	Turn off the steamer, unplug it, and allow it to cool down. Check water level and refill if necessary.
Water spitting from nozzle.	Overfilling the water tank or tilting the unit excessively.	Ensure water is filled only to the MAX level. Avoid tilting the steamer beyond a 45-degree angle during operation.

SPECIFICATIONS

Attribute	Value
Brand	URPOWER
Model Number	UGT-01
Color	White
Product Dimensions (L x W x H)	6.7" x 3.2" x 8.8"
Item Weight	1.2 Pounds
Voltage	110 Volts
Wattage	110 Watts
Heat Time	2 minutes
Water Tank Capacity	130 Milliliters
Date First Available	May 28, 2016

WARRANTY AND SUPPORT

Specific warranty information is not provided in the product details. For warranty claims or technical support, please contact URPOWER customer service directly through their official website or the retailer where the product was purchased.

You can visit the URPOWER Store for more information: [URPOWER Store on Amazon](#)

