

JOYROOM RMJ-026

JOYROOM REMAX Outdoor Bluetooth Speaker X2 User Manual

Model: RMJ-026

1. INTRODUCTION

Thank you for choosing the JOYROOM REMAX Outdoor Bluetooth Speaker X2. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it carefully before use and retain it for future reference.

The REMAX X2 is designed for portable audio playback, featuring high-definition sound, wireless Bluetooth connectivity, and a durable, dustproof, and shockproof design suitable for outdoor use. It includes a built-in Lipo battery for extended playback and a standard 3.5mm audio input port.

2. PACKAGE CONTENTS

Please check the package for the following items:

- JOYROOM REMAX Outdoor Bluetooth Speaker X2
- USB Charging Cable
- 3.5mm Audio Cable (Auxiliary)
- User Manual

3. PRODUCT OVERVIEW



Figure 1: JOYROOM REMAX Outdoor Bluetooth Speaker X2. This image displays the speaker's compact, green design, highlighting its robust build suitable for outdoor environments. Visible features include the speaker grille and control buttons.

Familiarize yourself with the speaker's components:

- **Power Button:** Press and hold to turn the speaker on or off.
- **Volume Up/Next Track Button:** Short press to increase volume, long press for next track.
- **Volume Down/Previous Track Button:** Short press to decrease volume, long press for previous track.
- **Play/Pause/Call Button:** Press to play/pause music, answer/end calls.
- **Mode Button:** Switch between Bluetooth and Auxiliary modes.
- **Charging Port (Micro USB):** For charging the speaker.
- **AUX Input Port (3.5mm):** For wired audio connection.
- **LED Indicator:** Displays power, charging, and Bluetooth status.

4. SETUP

4.1 Charging the Speaker

1. Connect the small end of the USB charging cable to the speaker's charging port.
2. Connect the large end of the USB charging cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will illuminate during charging and turn off or change color when fully charged.
4. A full charge typically takes approximately 2-3 hours.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power Button for approximately 3 seconds until the LED indicator lights up and you hear an audible prompt.
- **To Power Off:** Press and hold the Power Button for approximately 3 seconds until the LED indicator turns off and you hear an audible prompt.

4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (the LED indicator will flash rapidly).
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.).
3. Search for available Bluetooth devices.
4. Select "REMAX X2" from the list of devices.
5. Once paired, the LED indicator will stop flashing and remain solid, and you will hear a confirmation tone.
6. The speaker will automatically attempt to reconnect to the last paired device when powered on.

5. OPERATING INSTRUCTIONS

5.1 Music Playback

- **Play/Pause:** Press the Play/Pause button.
- **Volume Up:** Short press the Volume Up button.
- **Volume Down:** Short press the Volume Down button.
- **Next Track:** Long press the Volume Up button.
- **Previous Track:** Long press the Volume Down button.

5.2 Hands-Free Calling

When connected via Bluetooth to a smartphone:

- **Answer Call:** Press the Play/Pause/Call button once.
- **End Call:** Press the Play/Pause/Call button once during a call.
- **Reject Call:** Press and hold the Play/Pause/Call button for 2 seconds.
- **Redial Last Number:** Double-press the Play/Pause/Call button.

5.3 Auxiliary Input (AUX Mode)

1. Connect one end of the 3.5mm audio cable to the speaker's AUX input port.
2. Connect the other end of the 3.5mm audio cable to the audio output jack of your device (e.g., MP3 player, computer).
3. The speaker will automatically switch to AUX mode, or you may need to press the Mode button.
4. Control playback and volume from your connected device.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, fully charge the speaker before first use and at least once every three months if not used regularly.
- **Water Resistance:** While designed for outdoor use and stated as waterproof, avoid submerging the

speaker in water for extended periods. Ensure all port covers are securely closed before exposure to moisture.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; Bluetooth disabled on device; device too far.	Ensure speaker is in pairing mode (flashing LED). Enable Bluetooth on your device. Move device closer to speaker (within 10 meters). Forget "REMAX X2" from your device's Bluetooth list and re-pair.
No sound.	Volume too low; incorrect input mode; device not playing.	Increase speaker and device volume. Ensure correct mode (Bluetooth/AUX). Check if the audio source device is playing.
Poor sound quality.	Bluetooth interference; low battery; damaged audio cable (AUX).	Move speaker closer to the device. Charge the speaker. Try a different 3.5mm audio cable.

8. SPECIFICATIONS

Feature	Detail
Model	RMJ-026
Bluetooth Version	3.0
Connectivity Technology	Bluetooth, Auxiliary, USB
Power Source	Battery Powered
Battery Type	Lipo (Built-in)
Battery Average Life	Approximately 5 Hours
Special Features	Portable, Wireless, Waterproof
Recommended Uses	Outdoor
Material	Plastic
Control Method	Touch
Tweeter Diameter	1 Inch
Color	Green

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact JOYROOM customer service. Keep your proof of purchase for warranty claims. For further assistance, you may visit the [JOYROOM Store on Amazon](#).