### Manuals+

### Q & A | Deep Search | Upload

#### manuals.plus /

- , CD /
- > CD Audio Disc User Manual: Cada Po Hum Koi Theen (Model B01GF7DKZI)

### CD B01GF7DKZI

# User Manual: Cada - Po Hum Koi Theen Audio CD

Model: B01GF7DKZI

### Introduction

This manual provides essential instructions for the proper use and care of your Cada - Po Hum Koi Theen Audio CD. Please read this guide thoroughly to ensure optimal playback quality and longevity of your disc. This Audio CD contains musical content by Cada, titled Po Hum Koi Theen.

#### SETUP

- 1. Unpacking: Carefully remove the Audio CD from its packaging. Avoid touching the playing surface of the disc.
- 2. **Identify Playback Device:** Ensure you have a compatible CD player, computer with a CD/DVD drive, or other audio system designed to play standard audio compact discs.
- 3. **Insert CD:** Open the disc tray or slot of your playback device. Hold the CD by its edges and gently place it onto the tray or slide it into the slot with the label side facing up. Ensure the disc is seated correctly.

## **OPERATING**

- 1. **Start Playback:** Close the disc tray or wait for the device to recognize the CD. Press the 'Play' button on your device or its remote control.
- 2. **Volume Adjustment:** Adjust the volume using the controls on your playback device or amplifier to a comfortable listening level.
- 3. **Track Navigation:** Use the 'Next Track' or 'Previous Track' buttons to skip between songs. Use the 'Fast Forward' or 'Rewind' buttons to navigate within a track.
- 4. Pause/Stop: Press 'Pause' to temporarily stop playback and 'Stop' to end playback.
- 5. **Eject CD:** After listening, press the 'Eject' button on your device to safely remove the CD. Handle the disc by its edges.

### **M**AINTENANCE

- **Handling:** Always hold the CD by its outer edges or by the center hole to avoid fingerprints and scratches on the playing surface.
- Cleaning: If the disc becomes dirty, gently wipe the playing surface with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line (radial motion), not in a circular motion. Do not use abrasive

cleaners or solvents.

- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep discs away from direct sunlight, high temperatures, and excessive humidity to prevent warping or damage.
- Avoid Damage: Do not bend the disc, write on the playing surface, or attach labels to it, as this can affect playback.

### **TROUBLESHOOTING**

## • CD Not Playing:

- Ensure the CD is inserted correctly with the label side up.
- o Check if the disc is clean and free from visible scratches or smudges.
- Verify that your playback device is powered on and functioning correctly.

### • Skipping or Stuttering Playback:

- Clean the disc as described in the Maintenance section.
- Inspect the disc for deep scratches or damage. Severely damaged discs may not play correctly.
- Ensure the playback device is on a stable surface to prevent vibrations.

#### No Sound:

- o Check the volume level on your playback device and any connected audio equipment.
- · Verify all audio cables are securely connected.
- Ensure the correct input source is selected on your amplifier or receiver.

### **SPECIFICATIONS**

Title	Cada - Po Hum Koi Theen
Format	Audio CD
Model Number (ASIN)	B01GF7DKZI
Manufacturer / Label	CD
Number of Discs	1
Product Dimensions	12.5 x 14 x 1 cm

# **WARRANTY**

This Audio CD is typically covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the specific warranty information provided by the retailer or manufacturer at the time of purchase for details regarding coverage period and terms. Damage due to improper handling or storage is generally not covered.

## SUPPORT

For further assistance or inquiries regarding your Cada - Po Hum Koi Theen Audio CD, please contact the retailer from whom you purchased the product. For content-related questions, you may seek information from the record label or artist's official channels.

### FRUDUCI IMAGES

No relevant product images were available for inclusion in this manual. The provided image indicated 'No image available'

# OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were available for inclusion in this manual.

© 2023. All rights reserved. Information subject to change without notice.