

## Goodmans GDSB04BT60

# Goodmans 60W 2.1 Bluetooth Soundbar User Manual

Model: GDSB04BT60

## 1. INTRODUCTION

Thank you for purchasing the Goodmans 60W 2.1 Bluetooth Soundbar. This manual provides important information regarding the setup, operation, and maintenance of your new soundbar. Please read this manual thoroughly before use and retain it for future reference.



Figure 1.1: Goodmans 60W Bluetooth Soundbar

This image displays the Goodmans 60W Bluetooth Soundbar from a front and slightly angled side perspective, showcasing its sleek black design and speaker grille.

## 2. SAFETY INFORMATION

Please read and follow all safety instructions carefully to prevent injury or damage to the device.

- Do not expose the soundbar to rain, moisture, or extreme temperatures.
- Do not block any ventilation openings.
- Ensure proper ventilation around the unit.

- Use only the power adapter supplied with the unit.
- Do not attempt to disassemble or modify the soundbar.
- Keep the soundbar away from direct sunlight, heat sources, and strong magnetic fields.
- Clean only with a dry cloth.

### 3. PACKAGE CONTENTS

---

Verify that all items are present in the packaging:

- Goodmans 60W 2.1 Bluetooth Soundbar
- Remote Control
- Power Adapter
- 3.5mm Jack to Twin RCA Cable
- 3.5mm Line-in Cable
- Wall Mounting Screws and Hooks (for optional wall installation)
- User Manual (this document)



Figure 3.1: Goodmans 60W Soundbar Packaging

This image shows the Goodmans 60W Soundbar inside its retail packaging, highlighting the product's sleek design and key features listed on the box.

### 4. PRODUCT FEATURES

---

- 2.0 Channel soundbar for enhanced audio experience.
- Stream music wirelessly via Bluetooth from compatible devices.
- Connect and play music directly from smartphones or tablets.
- Convenient remote control for easy operation.
- Includes 3.5mm Jack to twin RCA cable for versatile connectivity.
- Includes 3.5mm line-in cable for direct audio input.

### 5. CONTROLS AND CONNECTIONS

---

#### 5.1. Remote Control Layout



Figure 5.1: Remote Control

This image displays the compact black remote control for the Goodmans Soundbar, showing buttons for power, input selection (Optical, BT, Line, Aux), mute, sound modes (Music, Movie, Voice), volume, treble, bass, and track control.

The remote control allows full command over your soundbar's functions:

- **STANDBY:** Power On/Off.
- **OPTICAL:** Select Optical input.
- **MUTE:** Mute/Unmute sound.
- **BT:** Select Bluetooth input.
- **LINE:** Select Line-in input.
- **AUX:** Select AUX input.
- **MUSIC:** Activate Music sound mode.
- **MOVIE:** Activate Movie sound mode.
- **VOICE:** Activate Voice sound mode.
- **TREBLE +/-:** Adjust treble level.
- **BASS +/-:** Adjust bass level.
- **VOLUME +/-:** Adjust master volume.
- **Previous/Play-Pause/Next:** Control media playback in Bluetooth mode.

## 5.2. Soundbar Connections

The soundbar features various input ports on its side panel for connecting different audio sources.



Figure 5.2: Soundbar Angled View

This image shows the Goodmans Soundbar from an angled perspective, highlighting the input ports on the right side, including power, optical, AUX, and line-in connections.

- **DC IN:** Connect the supplied power adapter.
- **OPTICAL:** Digital audio input for connecting to TVs or other devices with an optical output.
- **AUX IN:** 3.5mm analog audio input for connecting devices like MP3 players or computers.
- **LINE IN:** RCA analog audio input for connecting devices with RCA outputs.

## 6. SETUP

### 6.1. Placement

The soundbar can be placed on a tabletop or mounted on a wall.

- **Tabletop Placement:** Place the soundbar on a stable, flat surface in front of your TV or desired listening area. Ensure there is adequate space for ventilation.
- **Wall Mounting:** If wall mounting, use the provided screws and hooks. Ensure the wall material can support the weight of the soundbar. Consult a professional if unsure.

### 6.2. Connecting to Power

1. Connect the supplied power adapter to the "DC IN" port on the soundbar.
2. Plug the power adapter into a suitable wall outlet.
3. The soundbar will enter standby mode.



Figure 6.1: Power Adapter

This image shows the black power adapter and its associated UK plug, used to power the Goodmans Soundbar.

## 6.3. Connecting Audio Sources

Choose one of the following methods to connect your audio source:

- **Optical Connection:**

Connect an optical cable (not supplied) from your TV's optical output to the "OPTICAL" input on the soundbar. This provides high-quality digital audio.

- **AUX Connection:**

Use the supplied 3.5mm line-in cable to connect your device's headphone jack or audio output to the "AUX IN" port on the soundbar.

- **LINE IN (RCA) Connection:**

Use the supplied 3.5mm Jack to Twin RCA cable to connect devices with RCA audio outputs to the "LINE IN" ports on the soundbar.

- **Bluetooth Connection:** (See Section 7.2 for detailed pairing instructions)

Wirelessly connect your smartphone, tablet, or other Bluetooth-enabled device to the soundbar.

## 7. OPERATING INSTRUCTIONS

---

### 7.1. Basic Operation

1. **Power On/Off:** Press the **STANDBY** button on the remote control or the power button on the soundbar to turn the unit on or off.
2. **Select Input:** Press the corresponding input button on the remote control (**OPTICAL, BT, LINE, AUX**) to switch between audio sources.
3. **Adjust Volume:** Use the **VOLUME +** or **VOLUME -** buttons on the remote to increase or decrease the volume.
4. **Mute Sound:** Press the **MUTE** button to temporarily silence the sound. Press again to unmute.
5. **Sound Modes:** Press **MUSIC, MOVIE,** or **VOICE** to select a pre-set equalizer mode optimized for different audio content.
6. **Adjust Treble/Bass:** Use the **TREBLE +/-** and **BASS +/-** buttons to fine-tune the audio output to your preference.

### 7.2. Bluetooth Pairing

1. Ensure the soundbar is powered on.
2. Press the **BT** button on the remote control to switch the soundbar to Bluetooth mode. The indicator light on the soundbar will flash, indicating it is in pairing mode.
3. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "Goodmans Soundbar" (or similar name) from the list of found devices.
5. If prompted for a password, enter "0000".
6. Once successfully paired, the indicator light on the soundbar will stop flashing and remain solid.
7. You can now play audio from your device through the soundbar.
8. To disconnect, disable Bluetooth on your device or switch the soundbar to another input mode.

## 8. MAINTENANCE

---

To ensure the longevity and optimal performance of your soundbar, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the soundbar. Do not use liquid cleaners, aerosols, or abrasive materials.

- **Ventilation:** Ensure that the ventilation openings are not blocked by dust or debris.
- **Storage:** If storing the soundbar for an extended period, disconnect it from power and store it in a cool, dry place.

## 9. TROUBLESHOOTING

If you experience issues with your soundbar, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
No power	Power adapter not connected or outlet not active.	Ensure the power adapter is securely connected to the soundbar and a working power outlet.
No sound	Incorrect input selected, volume too low, or muted.	Select the correct input source. Increase volume. Check if the soundbar is muted. Ensure audio output settings on your source device are correct.
Bluetooth pairing fails	Soundbar not in pairing mode, device too far, or already paired.	Ensure soundbar is in Bluetooth pairing mode (flashing indicator). Move device closer. Disconnect from previously paired devices.
Sound distortion	Volume too high, poor cable connection, or source audio quality.	Reduce volume. Check all cable connections. Try a different audio source.
Soundbar automatically turns off	Auto-standby feature or power issue.	Some units may have an auto-off feature after a period of inactivity (e.g., 170 minutes). If this occurs frequently during use, contact customer support.

## 10. SPECIFICATIONS

Feature	Detail
Model Number	GDSB04BT60
Speaker Maximum Output Power	60 Watts
Connectivity Technology	Bluetooth
Mounting Type	Tabletop
Material	Plastic
Speaker Type	Bluetooth
Special Feature	Wireless
Recommended Uses	Music
Compatible Devices	Tablet, Smartphone
Controller Type	Remote Control
Product Dimensions	10.2 x 3.4 x 10.3 cm; 1 kg

## 11. WARRANTY AND SUPPORT

---

Goodmans products are designed to meet high quality standards. For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Goodmans website. Please retain your proof of purchase for warranty claims.

For further assistance, you may also visit the Goodmans Store on Amazon:[Goodmans Store](#)

